

# TABLE OF CONTENTS

---



## In This Manual

<b>Introduction</b> .....	1-2
Purpose of this Manual .....	1-2
Intended Use of This Product .....	1-2
<b>Benefits of P2CDS-622 with CODESYS Software</b> .....	1-3
<b>Conventions Used</b> .....	1-4
Key Topics for Each Chapter.....	1-4
<b>Important Online Resources</b> .....	1-5
<b>P2CDS-622 System</b> .....	1-6
Preparation.....	1-6
1. CODESYS IDE Install .....	1-6
2. P2CDS-622 Firmware Install.....	1-6
3. System Requirements and Installation .....	1-6
4. Installation.....	1-7
5. PLC On the Network .....	1-7
IEC 61131-3 Supported Editor Types:.....	1-8
<b>Install Hardware</b> .....	1-9
<b>Apply Power to CPU</b> .....	1-12
<b>Develop HMI Screens directly in the CODESYS Development Environment</b> .....	1-13
<b>Chapter 2 - Specifications</b> .....	2-1
P2CDS-622 CPU.....	2-2
P2CDS-622 CPU Features .....	2-4
P2CDS-622 CPU Programmable RS232/485 Ports.....	2-5

## Table of Contents

---

P2CDS-622 CPU Ethernet Ports .....	2-7
P2CDS-622 CPU Micro USB Type C Programming Port .....	2-8
P2CDS-622 CPU microSD Slot.....	2-9
microSD Slot.....	2-9
P2CDS-622 CPU Battery Installation .....	2-10
Battery (Optional) .....	2-10
I/O Modules Overview .....	2-11
Intentionally Blank Page .....	2-15

