

TABLE OF CONTENTS



Chapter 1: Getting Started

Introduction	1-2
The Purpose of this Manual	1-2
About Getting Started	1-2
Supplemental Manuals and Other Help	1-2
Technical Support	1-2
Conventions Used	1-3
Key Topics for Each Chapter	1-3
Before you begin... ..	1-4
Step 1: Install Programming Software	1-5
Step 2: Launch Programming Software	1-6
Step 3: Create a Project	1-8
Step 4: Compile and Save Project	1-14
Step 5: Apply Power	1-15
Step 6: Establish PC to PLC communications	1-16
Step 7: Write Project into PLC	1-19
Step 8: Place PLC in RUN Mode	1-20
Step 9: Test Project using Data View Monitor	1-21
Step 10: Y001 Output On?	1-22

Chapter 2: Specifications

Overview	2-2
PLC System	2-2
CPU Modules	2-3
Basic CPU Modules	2-3
Analog CPU Modules	2-4
I/O Modules	2-6

Table of Contents

Power Supply	2-8
Programming Software	2-9
PLC Numbering System	2-10
Data Types	2-10
Memory Types	2-11
I/O Numbering System	2-13
CPU Operation	2-14
Introduction	2-14
CPU Operating System	2-14
CPU Operating Modes	2-15
Stop Mode	2-15
Run Mode	2-15
Read Inputs	2-16
Service Peripherals and Force I/O	2-16
Update Special Control (SC) Relays and Special Data (SD) Registers	2-17
Solve Application Program	2-17
Write Outputs	2-17
Diagnostics	2-17
Power Budgeting	2-18
What is Power Budgeting?	2-18
Power Budget Calculation	2-19
Power Budgeting using the CLICK Programming Software	2-20
General Specifications	2-21
General Specifications (all CLICK PLC products)	2-21
CPU Module Specifications	2-22
Common Specifications	2-22
CPU LED Status Indicators	2-23
Memory Map	2-24
Basic CPU Module Specifications	2-25
C0-00DD1-D – 8 DC Input/6 Sinking DC Output Micro PLC	2-25
C0-00DD2-D – 8 DC Input/6 Sourcing DC Output Micro PLC	2-27
C0-00DR-D – 8 DC Input/6 Relay Output Micro PLC	2-29
C0-00AR-D – 8 AC Input/6 Relay Output Micro PLC	2-31

Analog CPU Module Specifications	2-33
C0-02DD1-D – 4 DC Input/4 Sinking DC Output; 2 Analog In/2 Analog Out . . .	2-33
C0-02DD2-D – 4 DC Input/4 Sourcing DC Output; 2 Analog In/2 Analog Out . .	2-36
C0-02DR-D – 4 DC Input/4 Relay Output; 2 Analog In/2 Analog Out	2-39
I/O Module Specifications	2-42
I/O Terminal Block Specifications for CPUs and I/O Modules	2-42
C0-08ND3 – 8-Point Sink/Source DC Input Module	2-43
C0-08ND3-1 – 8-Point Sink/Source DC Input Module	2-44
C0-16ND3 – 16-Point Sink/Source DC Input Module	2-45
C0-08NA – 8-Point AC Input Module	2-46
C0-08TD1 – 8-Point Sinking DC Output Module	2-47
C0-08TD2 – 8-Point Sourcing DC Output Module	2-48
C0-16TD1 – 16-Point Sinking DC Output Module	2-49
C0-16TD2 – 16-Point Sourcing DC Output Module	2-50
C0-08TA – 8-Point AC Output Module	2-51
C0-04TRS – 4-Point Relay Output Module	2-52
C0-08TR – 8-Point Relay Output Module	2-53
Power Supply Specifications	2-54
C0-00AC Power Supply	2-54
C0-01AC Power Supply	2-54
Accessories	2-55

Chapter 3: Installation and Wiring

Safety Guidelines	3-2
Plan for Safety	3-2
Three Levels of Protection	3-3
Orderly System Shutdown	3-3
System Power Disconnect	3-3
Emergency Stop Circuits	3-4
Introduction to the CLICK PLC Mechanical Design	3-5
CLICK CPU PLC Modules	3-5
CLICK I/O Modules	3-7
CLICK Power Supplies	3-8
Battery Backup (Analog CPUs Only)	3-9
Mounting Guidelines	3-10

Table of Contents

Environmental Specifications	3-10
Agency Approvals	3-10
CLICK Unit Dimensions	3-10
Enclosures	3-13
Panel Layout and Clearances	3-13
Installing the CLICK PLC	3-15
Connecting the Modules Together	3-15
Mounting the CLICK PLC on a DIN Rail	3-16
Optional Mounting Method	3-16
Wiring Guidelines	3-17
Power Input Wiring to CLICK Power Supply	3-17
Power Input Wiring to CLICK CPU	3-17
Fuse Protection	3-18
Planning the I/O Wiring Routes	3-19
I/O Point Numbering	3-19
Wiring I/O Modules	3-20
ZIPLink Connection Systems for CLICK PLCs	3-21
I/O Wiring Checklist	3-22
System Wiring Strategies	3-23
PLC Isolation Boundaries	3-23
Powering I/O Circuits	3-24
Sinking/Sourcing Concepts	3-25
I/O “Common Terminal” Concepts	3-26
DC Input Wiring Methods	3-27
DC Output Wiring Methods	3-27
Relay Outputs - Wiring Methods	3-29
Relay Outputs - Surge Suppression for Inductive Loads	3-30
Relay Outputs - Relay Contact Life Extension	3-31
Analog I/O Configuration	3-32
Terminal Block Wiring	3-32
Configuration in the CLICK Programming Software	3-32
Analog I/O Monitoring	3-33

Chapter 4: PLC Communication

Introduction	4-2
CPU Communication Ports Specifications	4-3
LED Status Indicators	4-4
LED Status Indicators	4-4
DirectLogic Devices That Do Not Work With With CLICK PLCs	4-4
3 Steps to Using the CLICK Communications	4-5
Typical Serial Communications Applications	4-6
Port 1 (RS-232) - Modbus RTU Slave Mode (only)	4-6
Port 2 (RS-232) - Modbus RTU Sor ASCII	4-7
Port 3 (RS-485; Analog CPUs Only) - Modbus RTU Sor ASCII	4-8
W-1: Com Port 1 & 2 Wiring	4-9
W-2: Com Port 3 Wiring	4-12
C-1: Com Port 1 Setup	4-13
C-2: Com Port 2 Setup (Modbus)	4-14
C-3: Com Port 2 Setup (ASCII)	4-15
C-4: Com Port 3 Setup (Modbus)	4-16
C-5: Com Port 3 Setup (ASCII)	4-17
P-1: Modbus Slave Programming	4-18
P-2: Modbus Master Programming	4-21
P-3: ASCII Receive Programming	4-24
P-4: ASCII Send Programming	4-27

Chapter 5: Maintenance

PLC Maintenance	5-2
Check LED Indicators	5-2
Project Backup	5-2
Check Operating Environment	5-2
Check Operating Voltage	5-2
Check Physical Condition	5-3
Check Project Functionality	5-3
Check the PLC Program from CLICK PLC Programming Software	5-3

Chapter 6: Troubleshooting

Troubleshooting Direction	6-2
CPU Module Troubleshooting	6-2
Toggle Switch	6-3
LED Indicators	6-4
Power Supply Troubleshooting	6-5
The input voltage measures less than 20 VDC	6-5
The input voltage measures greater than 28 VDC	6-5
How to check the power budget	6-5
I/O Module Troubleshooting	6-6
DC/AC Input Module Troubleshooting	6-6
DC Output Module Troubleshooting	6-7
How to Check the I/O Configuration	6-7
How to Check the I/O Status	6-8
Replacement of I/O Modules	6-9
Troubleshooting Using Programming Software	6-9
Troubleshooting Electrical Noise Problems	6-10
Electrical Noise Problems	6-10
Reducing Electrical Noise	6-10
Error Codes	6-11