

# TABLE OF CONTENTS

---



## Chapter 1: Getting Started

<b>Introduction</b> .....	<b>1-2</b>
The Purpose of this Manual .....	1-2
About Getting Started .....	1-2
Supplemental Manuals and Other Help .....	1-2
Technical Support .....	1-2
<b>Conventions Used</b> .....	<b>1-3</b>
Key Topics for Each Chapter .....	1-3
Before you begin... ..	1-4
Step 1: Install Programming Software .....	1-5
Step 2: Launch Programming Software .....	1-6
Step 3: Create a Project .....	1-8
Step 4: Compile and Save Project .....	1-14
Step 5: Apply Power .....	1-15
Step 6: Establish PC to PLC communications .....	1-16
Step 7: Write Project into PLC .....	1-19
Step 8: Place PLC in RUN Mode .....	1-20
Step 9: Test Project using Data View Monitor .....	1-21
Step 10: Y001 Output On? .....	1-22
Additional Training Resources .....	1-23

## Chapter 2: Specifications

<b>Overview</b> .....	<b>2-2</b>
PLC System .....	2-2
CPU Modules .....	2-3
Basic CPU Modules .....	2-3
Standard CPU Modules .....	2-4

## Table of Contents

---

Analog CPU Modules	2-5
I/O Modules	2-7
Power Supply	2-9
Programming Software	2-10
<b>PLC Numbering System</b>	<b>2-11</b>
Data Types	2-11
Memory Types	2-12
I/O Numbering System	2-14
<b>CPU Operation</b>	<b>2-15</b>
Introduction	2-15
CPU Operating System	2-15
CPU Operating Modes	2-16
Stop Mode	2-16
Run Mode	2-16
Read Inputs	2-17
Service Peripherals and Force I/O	2-17
Update Special Control (SC) Relays and Special Data (SD) Registers	2-18
Solve Application Program	2-18
Write Outputs	2-18
Diagnostics	2-18
<b>Power Budgeting</b>	<b>2-19</b>
What is Power Budgeting?	2-19
Power Budget Calculation	2-20
Power Budgeting using the CLICK Programming Software	2-21
<b>General Specifications</b>	<b>2-22</b>
General Specifications (all CLICK PLC products)	2-22
<b>CPU Module Specifications</b>	<b>2-23</b>
Common Specifications	2-23
CPU LED Status Indicators	2-24
Memory Map	2-26
<b>Basic CPU Module Specifications</b>	<b>2-27</b>
C0-00DD1-D – 8 DC Input/6 Sinking DC Output Micro PLC	2-27
C0-00DD2-D – 8 DC Input/6 Sourcing DC Output Micro PLC	2-29
C0-00DR-D – 8 DC Input/6 Relay Output Micro PLC	2-31

C0-00AR-D – 8 AC Input/6 Relay Output Micro PLC	2–33
<b>Standard CPU Module Specifications</b>	<b>2–35</b>
C0-01DD1-D – 8 DC Input/6 Sinking DC Output Micro PLC	2–35
C0-01DD2-D – 8 DC Input/6 Sourcing DC Output Micro PLC	2–37
C0-01DR-D – 8 DC Input/6 Relay Output Micro PLC	2–39
C0-01AR-D – 8 AC Input/6 Relay Output Micro PLC	2–41
<b>Analog CPU Module Specifications</b>	<b>2–43</b>
C0-02DD1-D – 4 DC Input/4 Sinking DC Output; 2 Analog In/2 Analog Out	2–43
C0-02DD2-D – 4 DC Input/4 Sourcing DC Output; 2 Analog In/2 Analog Out	2–46
C0-02DR-D – 4 DC Input/4 Relay Output; 2 Analog In/2 Analog Out	2–49
<b>I/O Module Specifications</b>	<b>2–52</b>
I/O Terminal Block Specifications for CPUs and I/O Modules	2–52
C0-08ND3 – 8-Point Sink/Source DC Input Module	2–53
C0-08ND3-1 – 8-Point Sink/Source DC Input Module	2–54
C0-16ND3 – 16-Point Sink/Source DC Input Module	2–55
C0-08NE3 – 8-Point Sink/Source AC/DC Input Module	2–56
C0-16NE3 – 16-Point Sink/Source AC/DC Input Module	2–57
C0-08NA – 8-Point AC Input Module	2–58
C0-08TD1 – 8-Point Sinking DC Output Module	2–59
C0-08TD2 – 8-Point Sourcing DC Output Module	2–60
C0-16TD1 – 16-Point Sinking DC Output Module	2–61
C0-16TD2 – 16-Point Sourcing DC Output Module	2–62
C0-08TA – 8-Point AC Output Module	2–63
C0-04TRS – 4-Point Relay Output Module	2–64
C0-08TR – 8-Point Relay Output Module	2–65
<b>Power Supply Specifications</b>	<b>2–66</b>
C0-00AC Power Supply	2–66
C0-01AC Power Supply	2–66
<b>Accessories</b>	<b>2–67</b>

## Chapter 3: Installation and Wiring

<b>Safety Guidelines</b>	<b>3–2</b>
Plan for Safety	3–2
Three Levels of Protection	3–3
Orderly System Shutdown	3–3

## Table of Contents

---

System Power Disconnect .....	3-3
Emergency Stop Circuits .....	3-4
<b>Introduction to the CLICK PLC Mechanical Design .....</b>	<b>3-5</b>
CLICK CPU PLC Modules .....	3-5
CLICK I/O Modules .....	3-7
CLICK Power Supplies .....	3-8
Battery Backup (Standard and Analog CPUs Only) .....	3-9
<b>Mounting Guidelines .....</b>	<b>3-10</b>
Environmental Specifications .....	3-10
Agency Approvals .....	3-10
CLICK Unit Dimensions .....	3-10
Enclosures .....	3-13
Panel Layout and Clearances .....	3-13
<b>Installing the CLICK PLC .....</b>	<b>3-15</b>
Connecting the Modules Together .....	3-15
Mounting the CLICK PLC on a DIN Rail .....	3-16
Optional Mounting Method .....	3-16
<b>Wiring Guidelines .....</b>	<b>3-17</b>
Power Input Wiring to CLICK Power Supply .....	3-17
Power Input Wiring to CLICK CPU .....	3-17
Fuse Protection .....	3-18
Planning the I/O Wiring Routes .....	3-19
Wiring I/O Modules .....	3-20
ZIPLink Connection Systems for CLICK PLCs .....	3-21
<b>I/O Wiring Checklist .....</b>	<b>3-22</b>
<b>System Wiring Strategies .....</b>	<b>3-23</b>
PLC Isolation Boundaries .....	3-23
Powering I/O Circuits .....	3-24
Sinking/Sourcing Concepts .....	3-25
I/O "Common Terminal" Concepts .....	3-26
DC Input Wiring Methods .....	3-27
DC Output Wiring Methods .....	3-27
Relay Outputs - Wiring Methods .....	3-29
Relay Outputs - Surge Suppression for Inductive Loads .....	3-30

Relay Outputs - Relay Contact Life Extension .....	3-31
<b>Analog I/O Configuration .....</b>	<b>3-32</b>
Terminal Block Wiring .....	3-32
Configuration in the CLICK Programming Software .....	3-32
Analog I/O Monitoring .....	3-33

## Chapter 4: PLC Communication

<b>Introduction .....</b>	<b>4-2</b>
<b>CPU Communication Ports Specifications .....</b>	<b>4-3</b>
<b>LED Status Indicators .....</b>	<b>4-4</b>
LED Status Indicators .....	4-4
DirectLogic Devices That Do Not Work With CLICK PLCs .....	4-4
<b>3 Steps to Using the CLICK Communications .....</b>	<b>4-5</b>
<b>Typical Serial Communications Applications .....</b>	<b>4-6</b>
Port 1 (RS-232) - Modbus RTU Slave Mode Only .....	4-6
Port 2 (RS-232) - Modbus RTU or ASCII .....	4-7
Port 3 (RS-485; Standard and Analog CPUs Only) - Modbus RTU or ASCII .....	4-8
<b>W-1: Com Port 1 &amp; 2 Wiring .....</b>	<b>4-9</b>
<b>W-2: Com Port 3 Wiring .....</b>	<b>4-14</b>
<b>C-1: Com Port 1 Setup .....</b>	<b>4-15</b>
<b>C-2: Com Port 2 Setup (Modbus) .....</b>	<b>4-16</b>
<b>C-3: Com Port 2 Setup (ASCII) .....</b>	<b>4-17</b>
<b>C-4: Com Port 3 Setup (Modbus) .....</b>	<b>4-18</b>
<b>C-5: Com Port 3 Setup (ASCII) .....</b>	<b>4-19</b>
<b>P-1: Modbus Slave Programming .....</b>	<b>4-20</b>
<b>P-2: Modbus Master Programming .....</b>	<b>4-23</b>
<b>P-3: ASCII Receive Programming .....</b>	<b>4-26</b>
<b>P-4: ASCII Send Programming .....</b>	<b>4-29</b>

## Chapter 5: Maintenance

<b>PLC Maintenance .....</b>	<b>5-2</b>
Check LED Indicators .....	5-2

## Table of Contents

---

Project Backup . . . . .	5-2
Check Operating Environment . . . . .	5-2
Check Operating Voltage . . . . .	5-2
Check Physical Condition . . . . .	5-3
Check Project Functionality . . . . .	5-3
Check the PLC Program from CLICK PLC Programming Software . . . . .	5-3
 <b>Chapter 6: Troubleshooting</b>	
<b>Troubleshooting Direction . . . . .</b>	<b>6-2</b>
<b>CPU Module Troubleshooting . . . . .</b>	<b>6-3</b>
Toggle Switch . . . . .	6-3
LED Indicators . . . . .	6-4
<b>Power Supply Troubleshooting . . . . .</b>	<b>6-5</b>
The input voltage measures less than 20 VDC . . . . .	6-5
The input voltage measures greater than 28 VDC . . . . .	6-5
How to check the power budget . . . . .	6-5
<b>I/O Module Troubleshooting . . . . .</b>	<b>6-6</b>
Input Module Troubleshooting . . . . .	6-6
Output Module Troubleshooting . . . . .	6-7
How to Check the I/O Configuration . . . . .	6-7
How to Check the I/O Status . . . . .	6-8
Replacement of I/O Modules . . . . .	6-9
<b>Troubleshooting Electrical Noise Problems . . . . .</b>	<b>6-10</b>
Electrical Noise Problems . . . . .	6-10
Reducing Electrical Noise . . . . .	6-10
<b>Error Codes . . . . .</b>	<b>6-11</b>