

# VOLUME ONE:

# TABLE OF CONTENTS

---



## Chapter 1: Getting Started

<b>Introduction</b> .....	1-2
The Purpose of this Manual .....	1-2
Supplemental Manuals .....	1-2
Technical Support .....	1-2
<b>Conventions Used</b> .....	1-3
Key Topics for Each Chapter .....	1-3
<b>DL06 Micro PLC Overview</b> .....	1-4
The DL06 PLC Features .....	1-4
DirectSOFT 5 Programming for Windows™ .....	1-4
Handheld Programmer .....	1-5
<b>I/O Quick Selection Guide</b> .....	1-5
<b>Quick Start</b> .....	1-6
<b>Steps to Designing a Successful System</b> .....	1-10
<b>Questions and Answers about DL06 Micro PLCs</b> .....	1-12

## Chapter 2: Installation, Wiring, and Specifications

<b>Safety Guidelines</b> .....	2-2
Plan for Safety .....	2-2
Three Levels of Protection .....	2-3
Emergency Stops .....	2-3
Emergency Power Disconnect .....	2-4
Orderly System Shutdown .....	2-4
Class 1, Division 2 Approval .....	2-4
<b>Orientation to DL06 Front Panel</b> .....	2-5
Terminal Block Removal .....	2-6

## Table of Contents

---

<b>Mounting Guidelines</b> .....	<b>2-7</b>
Unit Dimensions .....	2-7
Enclosures .....	2-7
Panel Layout & Clearances .....	2-8
Using Mounting Rails .....	2-9
Environmental Specifications .....	2-10
Agency Approvals .....	2-10
Marine Use .....	2-10
<b>Wiring Guidelines</b> .....	<b>2-11</b>
Fuse Protection for Input Power .....	2-11
External Power Source .....	2-12
Planning the Wiring Routes .....	2-12
Fuse Protection for Input and Output Circuits .....	2-13
I/O Point Numbering .....	2-13
<b>System Wiring Strategies</b> .....	<b>2-14</b>
PLC Isolation Boundaries .....	2-14
Connecting Operator Interface Devices .....	2-15
Connecting Programming Devices .....	2-15
Sinking / Sourcing Concepts .....	2-16
I/O “Common” Terminal Concepts .....	2-17
Connecting DC I/O to “Solid State” Field Devices .....	2-18
Solid State Input Sensors .....	2-18
Solid State Output Loads .....	2-18
Relay Output Wiring Methods .....	2-20
Surge Suppression For Inductive Loads .....	2-21
Prolonging Relay Contact Life .....	2-22
DC Input Wiring Methods .....	2-23
DC Output Wiring Methods .....	2-24
High-Speed I/O Wiring Methods .....	2-25
<b>Wiring Diagrams and Specifications</b> .....	<b>2-26</b>
D0-06AA I/O Wiring Diagram .....	2-26
D0-06AR I/O Wiring Diagram .....	2-28
D0-06DA I/O Wiring Diagram .....	2-30
D0-06DD1 I/O Wiring Diagram .....	2-32
D0-06DD2 I/O Wiring Diagram .....	2-34
D0-06DR I/O Wiring Diagram .....	2-36
D0-06DD1-D I/O Wiring Diagram .....	2-38

D0-06DD2-D I/O Wiring Diagram .....	2-40
D0-06DR-D I/O Wiring Diagram .....	2-42
<b>Glossary of Specification Terms .....</b>	<b>2-44</b>

## Chapter 3: CPU Specifications and Operation

<b>Introduction .....</b>	<b>3-2</b>
DL06 CPU Features .....	3-2
<b>CPU Specifications .....</b>	<b>3-3</b>
<b>CPU Hardware Setup .....</b>	<b>3-4</b>
Communication Port Pinout Diagrams .....	3-4
Connecting the Programming Devices .....	3-5
CPU Setup Information .....	3-5
Status Indicators .....	3-6
Mode Switch Functions .....	3-6
Changing Modes in the DL06 PLC .....	3-7
Mode of Operation at Power-up .....	3-7
<b>Using Battery Backup .....</b>	<b>3-8</b>
Battery Backup .....	3-8
Auxiliary Functions .....	3-9
Clearing an Existing Program .....	3-9
Initializing System Memory .....	3-9
Setting Retentive Memory Ranges .....	3-10
Using a Password .....	3-11
<b>CPU Operation .....</b>	<b>3-12</b>
CPU Operating System .....	3-12
Program Mode .....	3-13
Run Mode .....	3-13
Read Inputs .....	3-14
Service Peripherals and Force I/O .....	3-14
CPU Bus Communication .....	3-15
Update Clock, Special Relays and Special Registers .....	3-15
Solve Application Program .....	3-16
Solve PID Loop Equations .....	3-16
Write Outputs .....	3-16
Write Outputs to Specialty I/O .....	3-16
Diagnostics .....	3-17

## Table of Contents

---

<b>I/O Response Time</b> .....	<b>3-17</b>
Is Timing Important for Your Application? .....	3-17
Normal Minimum I/O Response .....	3-18
Normal Maximum I/O Response .....	3-18
Improving Response Time .....	3-19
<b>CPU Scan Time Considerations</b> .....	<b>3-20</b>
Reading Inputs .....	3-20
Writing Outputs .....	3-20
Service Peripherals .....	3-21
CPU Bus Communication .....	3-21
Update Clock/Calendar, Special Relays, Special Registers .....	3-21
Application Program Execution .....	3-22
PLC Numbering Systems .....	3-23
PLC Resources .....	3-23
V-Memory .....	3-24
Binary-Coded Decimal Numbers .....	3-24
Hexadecimal Numbers .....	3-24
<b>Memory Map</b> .....	<b>3-25</b>
Octal Numbering System .....	3-25
Discrete and Word Locations .....	3-25
V-memory Locations for Discrete Memory Areas .....	3-25
Input Points (X Data Type) .....	3-26
Output Points (Y Data Type) .....	3-26
Control Relays (C Data Type) .....	3-26
Timers and Timer Status Bits (T Data Type) .....	3-26
Timer Current Values (V Data Type) .....	3-27
Counters and Counter Status Bits (CT Data type) .....	3-27
Counter Current Values (V Data Type) .....	3-27
Word Memory (V Data Type) .....	3-28
Stages (S Data type) .....	3-28
Special Relays (SP Data Type) .....	3-28
<b>DL06 System V-memory</b> .....	<b>3-29</b>
System Parameters and Default Data Locations (V Data Type) .....	3-29
<b>DL06 Aliases</b> .....	<b>3-31</b>
<b>DL06 Memory Map</b> .....	<b>3-32</b>
<b>X Input/Y Output Bit Map</b> .....	<b>3-33</b>

Stage Control/Status Bit Map .....	3-34
Control Relay Bit Map .....	3-36
Timer Status Bit Map .....	3-38
Counter Status Bit Map .....	3-38
GX and GY I/O Bit Map .....	3-39

## Chapter 4: System Design and Configuration

<b>DL06 System Design Strategies</b> .....	<b>4-2</b>
I/O System Configurations .....	4-2
Networking Configurations .....	4-2
<b>Module Placement</b> .....	<b>4-3</b>
Slot Numbering .....	4-3
Automatic I/O Configuration .....	4-4
Manual I/O Configuration .....	4-4
<b>Power Budgeting</b> .....	<b>4-5</b>
Power supplied .....	4-5
Power required by base unit .....	4-5
Power required by option cards .....	4-5
<b>Configuring the DL06's Comm Ports</b> .....	<b>4-7</b>
DL06 Port Specifications .....	4-7
DL06 Port Pinouts .....	4-7
Choosing a Network Specification .....	4-8
RS-232 Network .....	4-8
RS-422 Network .....	4-8
RS-485 Network .....	4-8
<b>Connecting to MODBUS and DirectNET Networks</b> .....	<b>4-9</b>
MODBUS Port Configuration .....	4-9
DirectNET Port Configuration .....	4-10
<b>Non-Sequence Protocol (ASCII In/Out and PRINT)</b> .....	<b>4-11</b>
Non-Sequence Port Configuration .....	4-11
<b>Network Slave Operation</b> .....	<b>4-12</b>
MODBUS Function Codes Supported .....	4-12
Determining the MODBUS Address .....	4-12
If Your Host Software Requires the Data Type and Address .....	4-13

## Table of Contents

---

Example 1: V2100	4-14
Example 2: Y20	4-14
Example 3: T10 Current Value	4-14
Example 4: C54	4-14
If Your MODBUS Host Software Requires an Address ONLY	4-15
Example 1: V2100 584/984 Mode	4-17
Example 2: Y20 584/984 Mode	4-17
Example 3: T10 Current Value 484 Mode	4-17
Example 4: C54 584/984 Mode	4-17
<b>Network Master Operation</b>	<b>4-18</b>
Step 1: Identify Master Port # and Slave #	4-19
Step 2: Load Number of Bytes to Transfer	4-19
Step 3: Specify Master Memory Area	4-20
Step 4: Specify Slave Memory Area	4-20
Communications from a Ladder Program	4-21
Multiple Read and Write Interlocks	4-21
<b>Network Master Operation (using MRX and MWX Instructions)</b>	<b>4-22</b>
MODBUS Function Codes Supported	4-22
MODBUS Read from Network(MRX)	4-23
MRX Slave Memory Address	4-24
MRX Master Memory Addresses	4-24
MRX Number of Elements	4-24
MRX Exception Response Buffer	4-24
MODBUS Write to Network (MWX)	4-25
MWX Slave Memory Address	4-26
MWX Master Memory Addresses	4-26
MWX Number of Elements	4-26
MWX Exception Response Buffer	4-26
MRX/MWX Example in DirectSOFT 5	4-27
Multiple Read and Write Interlocks	4-27

## Chapter 5: Standard RLL Instructions

<b>Introduction</b>	<b>5-2</b>
<b>Using Boolean Instructions</b>	<b>5-5</b>
END Statement	5-5
Simple Rungs	5-5

Normally Closed Contact . . . . .	5-6
Contacts in Series . . . . .	5-6
Midline Outputs . . . . .	5-6
Parallel Elements . . . . .	5-7
Joining Series Branches in Parallel . . . . .	5-7
Joining Parallel Branches in Series . . . . .	5-7
Combination Networks . . . . .	5-7
Comparative Boolean . . . . .	5-8
Boolean Stack . . . . .	5-8
Immediate Boolean . . . . .	5-9
<b>Boolean Instructions . . . . .</b>	<b>5-10</b>
<b>Comparative Boolean . . . . .</b>	<b>5-26</b>
<b>Immediate Instructions . . . . .</b>	<b>5-32</b>
<b>Timer, Counter and Shift Register Instructions . . . . .</b>	<b>5-39</b>
Using Timers . . . . .	5-39
Timer Example Using Discrete Status Bits . . . . .	5-41
Timer Example Using Comparative Contacts . . . . .	5-41
Accumulating Timer Example using Discrete Status Bits . . . . .	5-43
Accumulator Timer Example Using Comparative Contacts . . . . .	5-43
Using Counters . . . . .	5-44
Counter Example Using Discrete Status Bits . . . . .	5-46
Counter Example Using Comparative Contacts . . . . .	5-46
Stage Counter Example Using Discrete Status Bits . . . . .	5-48
Stage Counter Example Using Comparative Contacts . . . . .	5-48
Up / Down Counter Example Using Discrete Status Bits . . . . .	5-50
Up / Down Counter Example Using Comparative Contacts . . . . .	5-50
<b>Accumulator/Stack Load and Output Data Instructions . . . . .</b>	<b>5-52</b>
Using the Accumulator . . . . .	5-52
Copying Data to the Accumulator . . . . .	5-52
Changing the Accumulator Data . . . . .	5-53
Using the Accumulator Stack . . . . .	5-54
Using Pointers . . . . .	5-55
<b>Logical Instructions (Accumulator) . . . . .</b>	<b>5-69</b>
<b>Math Instructions . . . . .</b>	<b>5-86</b>
<b>Transcendental Functions . . . . .</b>	<b>5-118</b>

## Table of Contents

---

<b>Bit Operation Instructions</b> .....	<b>.5-120</b>
<b>Number Conversion Instructions (Accumulator)</b> .....	<b>.5-127</b>
Shuffle Digits Block Diagram .....	.5-139
<b>Table Instructions</b> .....	<b>.5-141</b>
Copy Data From a Data Label Area to V-memory .....	.5-143
<b>Clock/Calendar Instructions</b> .....	<b>.5-171</b>
<b>CPU Control Instructions</b> .....	<b>.5-173</b>
<b>Program Control Instructions</b> .....	<b>.5-175</b>
<b>Interrupt Instructions</b> .....	<b>.5-183</b>
<b>Message Instructions</b> .....	<b>.5-186</b>
Move Block Instruction (MOVBLK) .....	.5-189
Copy Data From a Data Label Area to V-memory .....	.5-189
<b>Intelligent I/O Instructions</b> .....	<b>.5-194</b>
Read from Intelligent Module (RD) .....	.5-194
Write to Intelligent Module (WT) .....	.5-195
<b>Network Instructions</b> .....	<b>.5-196</b>
Direct Text Entry .....	.5-200
Embedding date and/or time variables .....	.5-201
Embedding V-memory data .....	.5-201
Data Format Suffixes for Embedded V-memory Data .....	.5-202
Text Entry from V-memory .....	.5-203
<b>MODBUS RTU Instructions</b> .....	<b>.5-204</b>
MRX Slave Address Ranges .....	.5-205
MWX Slave Address Ranges .....	.5-208
MWX Master Memory Address Ranges .....	.5-208
MWX Number of Elements .....	.5-208
MWX Exception Response Buffer .....	.5-208
<b>ASCII Instructions</b> .....	<b>.5-210</b>
Reading ASCII Input Strings .....	.5-210
Writing ASCII Output Strings .....	.5-210
Managing the ASCII Strings .....	.5-211
<b>Intelligent Box (IBox) Instructions</b> .....	<b>.5-230</b>

# VOLUME TWO:

# TABLE OF CONTENTS



## Chapter 6: Drum Instruction Programming

<b>Introduction</b> .....	<b>6-2</b>
Purpose .....	6-2
Drum Terminology .....	6-2
Drum Chart Representation .....	6-3
Output Sequences .....	6-3
<b>Step Transitions</b> .....	<b>6-4</b>
Drum Instruction Types .....	6-4
Timer-Only Transitions .....	6-4
Timer and Event Transitions .....	6-5
Event-Only Transitions .....	6-6
Counter Assignments .....	6-6
Last Step Completion .....	6-7
<b>Overview of Drum Operation</b> .....	<b>6-8</b>
Drum Instruction Block Diagram .....	6-8
Powerup State of Drum Registers .....	6-9
<b>Drum Control Techniques</b> .....	<b>6-10</b>
Drum Control Inputs .....	6-10
Self-Resetting Drum .....	6-11
Initializing Drum Outputs .....	6-11
Using Complex Event Step Transitions .....	6-11
<b>Drum Instruction</b> .....	<b>6-12</b>
Timed Drum with Discrete Outputs (DRUM) .....	6-12
Event Drum (EDRUM) .....	6-14
Handheld Programmer Drum Mnemonics .....	6-16

Masked Event Drum with Discrete Outputs (MDRMD) .....6-19  
Masked Event Drum with Word Output (MDRMW) .....6-21

**Chapter 7: RLL<sup>PLUS</sup> Stage Programming**

**Introduction to Stage Programming** .....7-2  
    Overcoming “Stage Fright” .....7-2

**Learning to Draw State Transition Diagrams** .....7-3  
    Introduction to Process States .....7-3  
    The Need for State Diagrams .....7-3  
    A 2-State Process .....7-3  
    RLL Equivalent .....7-4  
    Stage Equivalent .....7-4  
    Let’s Compare .....7-5  
    Initial Stages .....7-5  
    What Stage Bits Do .....7-6  
    Stage Instruction Characteristics .....7-6

**Using the Stage Jump Instruction for State Transitions** .....7-7  
    Stage Jump, Set, and Reset Instructions .....7-7

**Stage Program Example: Toggle On/Off Lamp Controller** .....7-8  
    A 4-State Process .....7-8

**Four Steps to Writing a Stage Program** .....7-9  
    1. Write a Word Description of the application. ....7-9  
    2. Draw the Block Diagram. ....7-9  
    3. Draw the State Transition Diagram. ....7-9  
    4. Write the Stage Program. ....7-9

**Stage Program Example: A Garage Door Opener** .....7-10  
    Garage Door Opener Example .....7-10  
    Draw the Block Diagram .....7-10  
    Draw the State Diagram .....7-11  
    Add Safety Light Feature .....7-12  
    Modify the Block Diagram and State Diagram .....7-12  
    Using a Timer Inside a Stage .....7-13  
    Add Emergency Stop Feature .....7-14  
    Exclusive Transitions .....7-14

**Stage Program Design Considerations** .....7-15

Stage Program Organization	7-15
How Instructions Work Inside Stages	7-16
Using a Stage as a Supervisory Process	7-17
Stage Counter	7-17
Power Flow Transition Technique	7-18
Stage View in DirectSOFT 5	7-18
<b>Parallel Processing Concepts</b>	<b>7-19</b>
Parallel Processes	7-19
Converging Processes	7-19
Convergence Stages (CV)	7-19
Convergence Jump (CVJMP)	7-20
Convergence Stage Guidelines	7-20
<b>RLL<sup>PLUS</sup> (Stage) Instructions</b>	<b>7-21</b>
Stage (SG)	7-21
Initial Stage (ISG)	7-22
Jump (JMP)	7-22
Not Jump (NJMP)	7-22
Converge Stage (CV) and Converge Jump (CVJMP)	7-23
Block Call (BCALL)	7-25
Block (BLK)	7-25
Block End (BEND)	7-25
<b>Questions and Answers about Stage Programming</b>	<b>7-27</b>
<b>Chapter 8: PID Loop Operation</b>	
<b>DL06 PID Control</b>	<b>8-2</b>
DL06 PID Control Features	8-2
<b>Introduction to PID Control</b>	<b>8-4</b>
What is PID Control?	8-4
<b>Introducing DL06 PID Control</b>	<b>8-6</b>
Process Control Definitions	8-8
<b>PID Loop Operation</b>	<b>8-9</b>
Position Form of the PID Equation	8-9
Reset Windup Protection	8-10
Freeze Bias	8-11
Adjusting the Bias	8-11

## Table of Contents

---

Step Bias Proportional to Step Change in SP	.8-12
Eliminating Proportional, Integral or Derivative Action	.8-12
Velocity Form of the PID Equation	.8-12
Bumpless Transfer	.8-13
Loop Alarms	.8-13
Loop Operating Modes	.8-14
Special Loop Calculations	.8-14
<b>Ten Steps to Successful Process Control</b>	<b>.8-16</b>
<b>PID Loop Setup</b>	<b>.8-18</b>
Some Things to Do and Know Before Starting	.8-18
PID Error Flags	.8-18
Establishing the Loop Table Size and Location	.8-18
Loop Table Word Definitions	.8-20
PID Mode Setting 1 Bit Descriptions (Addr + 00)	.8-21
PID Mode Setting 2 Bit Descriptions (Addr + 01)	.8-22
Mode/Alarm Monitoring Word (Addr + 06)	.8-23
Ramp/Soak Table Flags (Addr + 33)	.8-23
Ramp/Soak Table Location (Addr + 34)	.8-24
Ramp/Soak Table Programming Error Flags (Addr + 35)	.8-24
Configure the PID Loop	.8-25
<b>PID Loop Tuning</b>	<b>.8-40</b>
Open-Loop Test	.8-40
Manual Tuning Procedure	.8-41
Alternative Manual Tuning Procedures by Others	.8-44
Tuning PID Controllers	.8-44
Auto Tuning Procedure	.8-45
Use DirectSOFT 5 Data View with PID View	.8-49
Open a New Data View Window	.8-49
Open PID View	.8-50
<b>Using the Special PID Features</b>	<b>.8-53</b>
How to Change Loop Modes	.8-53
Operator Panel Control of PID Modes	.8-54
PLC Modes Effect on Loop Modes	.8-54
Loop Mode Override	.8-54
PV Analog Filter	.8-55
Creating an Analog Filter in Ladder Logic	.8-56

Use the <i>DirectSOFT 5</i> Filter Intelligent Box Instructions . . . . .	8-57
FilterB Example . . . . .	8-57
<b>Ramp/Soak Generator . . . . .</b>	<b>8-58</b>
Introduction . . . . .	8-58
Ramp/Soak Table . . . . .	8-59
Ramp/Soak Table Flags . . . . .	8-61
Ramp/Soak Generator Enable . . . . .	8-61
Ramp/Soak Controls . . . . .	8-61
Ramp/Soak Profile Monitoring . . . . .	8-62
Ramp/Soak Programming Errors . . . . .	8-62
Testing Your Ramp/Soak Profile . . . . .	8-62
<b>DirectSOFT 5 Ramp/Soak Example . . . . .</b>	<b>8-63</b>
Setup the Profile in PID Setup . . . . .	8-63
Program the Ramp/Soak Control in Relay Ladder . . . . .	8-63
Test the Profile . . . . .	8-64
<b>Cascade Control . . . . .</b>	<b>8-65</b>
Introduction . . . . .	8-65
Cascaded Loops in the DL06 CPU . . . . .	8-66
Tuning Cascaded Loops . . . . .	8-67
<b>Time-Proportioning Control . . . . .</b>	<b>8-68</b>
On/Off Control Program Example . . . . .	8-69
<b>Feedforward Control . . . . .</b>	<b>8-70</b>
Feedforward Example . . . . .	8-71
<b>PID Example Program . . . . .</b>	<b>8-72</b>
Program Setup for the PID Loop . . . . .	8-72
<b>Troubleshooting Tips . . . . .</b>	<b>8-75</b>
<b>Glossary of PID Loop Terminology . . . . .</b>	<b>8-77</b>
<b>Bibliography . . . . .</b>	<b>8-79</b>

## Chapter 9: Maintenance and Troubleshooting

<b>Hardware System Maintenance . . . . .</b>	<b>9-2</b>
Standard Maintenance . . . . .	9-2
<b>Diagnostics . . . . .</b>	<b>9-2</b>
Diagnostics . . . . .	9-2

## Table of Contents

---

Fatal Errors .....	9-2
Non-fatal Errors .....	9-2
V-memory Error Code Locations .....	9-3
Special Relays (SP) Corresponding to Error Codes .....	9-3
DL06 Micro PLC Error Codes .....	9-4
Program Error Codes .....	9-5
<b>CPU Indicators .....</b>	<b>9-6</b>
PWR Indicator .....	9-6
RUN Indicator .....	9-7
CPU Indicator .....	9-7
<b>Communications Problems .....</b>	<b>9-7</b>
<b>I/O Point Troubleshooting .....</b>	<b>9-8</b>
Possible Causes .....	9-8
Some Quick Steps .....	9-8
Handheld Programmer Keystrokes Used to Test an Output Point .....	9-9
<b>Noise Troubleshooting .....</b>	<b>9-10</b>
Electrical Noise Problems .....	9-10
Reducing Electrical Noise .....	9-10
<b>Machine Startup and Program Troubleshooting .....</b>	<b>9-11</b>
Syntax Check .....	9-11
Special Instructions .....	9-12
Duplicate Reference Check .....	9-13
Run Time Edits .....	9-14
Run Time Edit Example .....	9-15
Forcing I/O Points .....	9-16
Regular Forcing with Direct Access .....	9-18
Bit Override Forcing .....	9-19
Bit Override Indicators .....	9-19

## Chapter 10: LCD Display Panel

Introduction to the DL06 LCD Display Panel .....	10-2
Keypad .....	10-2
Snap-in installation .....	10-3
Display Priority .....	10-4

<b>Menu Navigation</b> .....	10-5
<b>Confirm PLC Type, Firmware Revision Level, Memory Usage, Etc.</b> .....	10-6
<b>Examining Option Slot Contents</b> .....	10-8
Menu 2, M2:SYSTEM CFG. ....	10-8
<b>Monitoring and Changing Data Values</b> .....	10-10
Menu 3, M3:MONITOR .....	10-10
Data Monitor .....	10-10
V-memory values .....	10-10
Pointer values .....	10-12
<b>Bit Monitor</b> .....	10-13
Bit status .....	10-13
<b>Changing Date and Time</b> .....	10-14
Menu 4, M4 : CALENDAR R/W .....	10-14
<b>Setting Password and Locking</b> .....	10-17
Menu 5, M5 : PASSWORD R/W .....	10-17
<b>Reviewing Error History</b> .....	10-20
Menu 6, M6 : ERR HISTORY .....	10-20
<b>Toggle Light and Beeper, Test Keys</b> .....	10-21
Menu 7, M7 : LCD TEST&SET .....	10-21
<b>PLC Memory Information for the LCD Display Panel</b> .....	10-22
Data Format Suffixes for Embedded V-memory Data .....	10-22
Reserved memory registers for the LCD Display Panel .....	10-23
V7742 bit definitions .....	10-24
<b>Changing the Default Screen</b> .....	10-25
Example program for setting the default screen message .....	10-25
<b>DL06 LCD Display Panel Instruction (LCD)</b> .....	10-26
Source of message .....	10-26
ASCII Character Codes .....	10-27
Example program: alarm with embedded date/time stamp .....	10-28
Example program: alarm with embedded V-memory data .....	10-29
Example program: alarm text from V-memory with embedded V-memory data ..	10-30
 <b>Appendix A: Auxiliary Functions</b>	
Introduction .....	A-2

## Table of Contents

---

Purpose of Auxiliary Functions .....	A-2
Accessing AUX Functions via DirectSOFT 5 .....	A-3
Accessing AUX Functions via the Handheld Programmer .....	A-3
<b>AUX 2* — RLL Operations .....</b>	<b>A-4</b>
AUX 21 Check Program .....	A-4
AUX 22 Change Reference .....	A-4
AUX 23 Clear Ladder Range .....	A-4
AUX 24 Clear Ladders .....	A-4
<b>AUX 3* — V-memory Operations .....</b>	<b>A-4</b>
AUX 31 Clear V-memory .....	A-4
<b>AUX 4* — I/O Configuration .....</b>	<b>A-5</b>
AUX 41 Show I/O Configuration .....	A-5
<b>AUX 5* — CPU Configuration .....</b>	<b>A-5</b>
AUX 51 Modify Program Name .....	A-5
AUX 53 Display Scan Time .....	A-5
AUX 54 Initialize Scratchpad .....	A-5
AUX 55 Set Watchdog Timer .....	A-5
AUX 56 CPU Network Address .....	A-6
AUX 57 Set Retentive Ranges .....	A-6
AUX 58 Test Operations .....	A-6
AUX 59 Bit Override .....	A-7
AUX 5B Counter Interface Configuration .....	A-7
AUX 5D Select PLC Scan Mode .....	A-7
<b>AUX 6* — Handheld Programmer Configuration .....</b>	<b>A-8</b>
AUX 61 Show Revision Numbers .....	A-8
AUX 62 Beeper On/Off .....	A-8
AUX 65 Run Self Diagnostics .....	A-8
<b>AUX 7* — EEPROM Operations .....</b>	<b>A-8</b>
Transferrable Memory Areas .....	A-8
AUX 71 CPU to HPP EEPROM .....	A-8
AUX 72 HPP EEPROM to CPU .....	A-9
AUX 73 Compare HPP EEPROM to CPU .....	A-9
AUX 74 HPP EEPROM Blank Check .....	A-9
AUX 75 Erase HPP EEPROM .....	A-9
AUX 76 Show EEPROM Type .....	A-9

**AUX 8\* — Password Operations** .....A-9  
 AUX 81 Modify Password .....A-9  
 AUX 82 Unlock CPU .....A-10  
 AUX 83 Lock CPU .....A-10

**Appenedix B: DL06 Error codes**

**DL06 Error Codes** .....B-2

**Appendix C: Instruction Execution Times**

**Introduction** .....C-2  
 V-Memory Data Registers .....C-2  
 V-Memory Bit Registers .....C-2  
 How to Read the Tables .....C-2  
**Instruction Execution Times** .....C-3  
 Boolean Instructions .....C-3  
 Comparative Boolean Instructions .....C-4  
 Immediate Instructions .....C-11  
 Bit of Word Boolean Instructions .....C-12  
 Timer, Counter and Shift Register .....C-13  
 Accumulator Data Instructions .....C-14  
 Logical Instructions .....C-15  
 Math Instructions .....C-16  
 Differential Instructions .....C-19  
 Bit Instructions .....C-19  
 Number Conversion Instructions .....C-20  
 Table Instructions .....C-20  
 CPU Control Instructions .....C-22  
 Program Control Instructions .....C-22  
 Interrupt Instructions .....C-22  
 Network Instructions .....C-22  
 Intelligent I/O Instructions .....C-23  
 Message Instructions .....C-23  
 RLLplus Instructions .....C-23  
 Drum Instructions .....C-23  
 Clock / Calender Instructions .....C-24  
 MODBUS Instructions .....C-24

## Table of Contents

---

ASCII Instructions .....	C-24
--------------------------	------

### Appendix D: Special Relays

<b>DL06 PLC Special Relays .....</b>	<b>D-2</b>
Startup and Real-Time Relays .....	D-2
CPU Status Relays .....	D-2
System Monitoring .....	D-3
Accumulator Status .....	D-3
HSIO Input Status .....	D-4
HSIO Pulse Output Relay .....	D-4
Communication Monitoring Relay .....	D-4
Option Slot Communication Monitoring Relay .....	D-4
Option Slot Special Relay .....	D-4
Counter 1 Mode 10 Equal Relays .....	D-5
Counter 2 Mode 10 Equal Relays .....	D-6

### Appendix E: High-speed Input and Pulse Output Features

<b>Introduction .....</b>	<b>E-2</b>
Built-in Motion Control Solution .....	E-2
Availability of HSIO Features .....	E-2
Dedicated High-Speed I/O Circuit .....	E-3
Wiring Diagrams for Each HSIO Mode .....	E-3
<b>Choosing the HSIO Operating Mode .....</b>	<b>E-4</b>
Understanding the Six Modes .....	E-4
Default Mode .....	E-5
Configuring the HSIO Mode .....	E-6
Configuring Inputs X0 – X3 .....	E-6
<b>Mode 10: High-Speed Counter .....</b>	<b>E-7</b>
Purpose .....	E-7
Functional Block Diagram .....	E-7
Wiring Diagram .....	E-8
Interfacing to Counter Inputs .....	E-8
Setup for Mode 10 .....	E-9
Presets and Special Relays .....	E-9
Absolute and Incremental Presets .....	E-10
Preset Data Starting Location .....	E-11
Using Fewer than 24 Presets .....	E-11

Equal Relay Numbers . . . . .	E-12
Calculating Your Preset Values . . . . .	E-13
X Input Configuration . . . . .	E-14
Writing Your Control Program . . . . .	E-15
Program Example 1: Counter Without Presets . . . . .	E-16
Program Example 2: Counter With Presets . . . . .	E-18
Program Example 3: Counter With Preload . . . . .	E-21
Troubleshooting Guide for Mode 10 . . . . .	E-23
Symptom: The counter does not count. . . . .	E-23
Symptom: The counter counts but the presets do not function. . . . .	E-23
Symptom: The counter counts up but will not reset. . . . .	E-23
<b>Mode 20: Up/Down Counter . . . . .</b>	<b>E-24</b>
Purpose . . . . .	E-24
Functional Block Diagram . . . . .	E-24
Quadrature Encoder Signals . . . . .	E-26
Wiring Diagram . . . . .	E-25
Interfacing to Encoder Output . . . . .	E-25
Setup for Mode 20 . . . . .	E-27
Preset and Special Relays . . . . .	E-27
X Input Configuration . . . . .	E-28
Mode 20 Up/Down Counter . . . . .	E-28
Writing Your Control Program . . . . .	E-29
Program Example 1: Quadrature Counting with an Interrupt . . . . .	E-30
Program Example 2: Up/Down Counting with Standard Inputs . . . . .	E-32
Program Example 3: Quadrature Counting . . . . .	E-34
Troubleshooting Guide for Mode 20 . . . . .	E-37
Symptom: The counter does not count. . . . .	E-37
Symptom: The counter counts in the wrong direction . . . . .	E-37
Symptom: The counter counts up and down but will not reset. . . . .	E-37
<b>Mode 30: Pulse Output . . . . .</b>	<b>E-38</b>
Purpose . . . . .	E-38
Functional Block Diagram . . . . .	E-39
Wiring Diagram . . . . .	E-40
Interfacing to Drive Inputs . . . . .	E-40
Motion Profile Specifications . . . . .	E-41
Physical I/O Configuration . . . . .	E-41
Logical I/O Functions . . . . .	E-41

## Table of Contents

---

Setup for Mode 30 .....	E-42
Profile / Velocity Select Register .....	E-43
Profile Parameter Table .....	E-43
Automatic Trapezoidal Profile .....	E-43
Step Trapezoidal Profile .....	E-44
Velocity Control .....	E-44
Step Trapezoidal Profile .....	E-44
Choosing the Profile Type .....	E-45
Automatic Trapezoidal Profile Defined .....	E-45
Step Trapezoidal Profiles Defined .....	E-46
Velocity Control Defined .....	E-46
Automatic Trapezoidal Profile Operation .....	E-47
Program Example 1: Automatic Trapezoidal Profile without External Interrupt .....	E-48
Preload Position Value .....	E-49
Program Example 2: Automatic Trapezoidal Profile with External Interrupt .....	E-50
Program Example 3: Automatic Trapezoidal Profile with Home Search .....	E-53
Step Trapezoidal Profile Operation .....	E-55
Program Example 4: Step Trapezoidal Profile .....	E-56
Velocity Profile Operation .....	E-59
Program Example 5: Velocity Profile .....	E-60
Automatic Trapezoidal Profile Error Codes .....	E-62
Troubleshooting Guide for Mode 30 .....	E-62
Symptom: The stepper motor does not rotate. ....	E-62
Symptom: The motor turns in the wrong direction. ....	E-63
<b>Mode 40: High-Speed Interrupts .....</b>	<b>E-64</b>
Purpose .....	E-64
Functional Block Diagram .....	E-64
Setup for Mode 40 .....	E-65
Interrupts and the Ladder Program .....	E-65
External Interrupt Timing Parameters .....	E-66
Timed Interrupt Parameters .....	E-66
X Input / Timed INT Configuration .....	E-66
Program Example 1: External Interrupt .....	E-67
Program Example 2: Timed Interrupt .....	E-68
<b>Mode 50: Pulse Catch Input .....</b>	<b>E-69</b>
Purpose .....	E-69
Functional Block Diagram .....	E-69

Pulse Catch Timing Parameters .....	E-69
Setup for Mode 50 .....	E-70
X Input Configuration .....	E-71
Program Example 1: Pulse Catch .....	E-72
<b>Mode 60: Discrete Inputs with Filter .....</b>	<b>E-73</b>
Purpose .....	E-73
Functional Block Diagram .....	E-73
Input Filter Timing Parameters .....	E-73
Setup for Mode 60 .....	E-74
X Input Configuration .....	E-74
Program Example: Filtered Inputs .....	E-75
 <b>Appendix F: PLC Memory</b>	
DL06 PLC Memory .....	F-2
Non-volatile V-memory in the DL06 .....	F-3
 <b>Appendix G: ASCII Table</b>	
ASCII Conversion Table .....	G-2
 <b>Appendix H: Product Weights</b>	
Product Weight Table .....	H-2
 <b>Appendix I: Numbering Systems</b>	
Introduction .....	I-2
Binary Numbering System .....	I-2
Hexadecimal Numbering System .....	I-3
Octal Numbering System .....	I-4
Binary Coded Decimal (BCD) Numbering System .....	I-5
Real (Floating Point) Numbering System .....	I-5
BCD/Binary/Decimal/Hex/Octal -What is the Difference? .....	I-6
Data Type Mismatch .....	I-7
Signed vs. Unsigned Integers .....	I-8
AutomationDirect.com Products and Data Types .....	I-9

## Table of Contents

---

<i>Direct</i> LOGIC PLCs .....	I-9
C-more/C-more Micro-Graphic Panels .....	I-9

### Appendix J: European Union Directives (CE)

<b>European Union (EU) Directives</b> .....	<b>J-2</b>
Member Countries .....	J-2
Applicable Directives .....	J-2
Compliance .....	J-2
General Safety .....	J-3
Special Installation Manual .....	J-4
Other Sources of Information .....	J-4
<b>Basic EMC Installation Guidelines</b> .....	<b>J-4</b>
Enclosures .....	J-4
AC Mains Filters .....	J-5
Suppression and Fusing .....	J-5
Internal Enclosure Grounding .....	J-5
Equi-potential Grounding .....	J-6
Communications and Shielded Cables .....	J-6
Analog and RS232 Cables .....	J-7
Multidrop Cables .....	J-7
Shielded Cables within Enclosures .....	J-7
Analog Modules and RF Interference .....	J-7
Network Isolation .....	J-8
DC Powered Versions .....	J-8
Items Specific to the DL06 .....	J-9

### Appendix K: Introduction to Serial Communications

<b>Introduction to Serial Communications</b> .....	<b>K-2</b>
Wiring Standards .....	K-2
Communications Protocols .....	K-3
DL06 Port Specifications .....	K-5
DL06 Port Pinouts .....	K-5
Port Setup Using DirectSOFT 5 or Ladder Logic Instructions .....	K-6
Port 2 Setup for RLL Using K-Sequence, DirectNET or MODBUS RTU .....	K-7
K-Sequence Communications .....	K-10
DirectNET Communications .....	K-10

Step 1: Identify Master Port # and Slave # .....K-10  
Step 2: Load Number of Bytes to Transfer .....K-10  
Step 3: Specify Master Memory Area .....K-11  
Step 4: Specify Slave Memory Area .....K-12  
Communications from a Ladder Program .....K-13  
Multiple Read and Write Interlocks .....K-13  
MODBUS RTU Communications .....K-14  
ASCII Communications .....K-14

**Index**