

VOLUME TWO:

TABLE OF CONTENTS



Chapter 6: Drum Instruction Programming

DL05 Drum Introduction	6-2
Purpose	6-2
Drum Terminology	6-2
Drum Chart Representation	6-3
Output Sequences	6-3
Step Transitions	6-4
Drum Instruction Types	6-4
Timer-Only Transitions	6-4
Timer and Event Transitions	6-5
Event-Only Transitions	6-6
Counter Assignments	6-6
Last Step Completion	6-7
Overview of Drum Operation	6-8
Drum Instruction Block Diagram	6-8
Powerup State of Drum Registers	6-9
Drum Control Techniques	6-10
Drum Control Inputs	6-10
Self-Resetting Drum	6-11
Initializing Drum Outputs	6-11
Using Complex Event Step Transitions	6-11
Drum Instruction	6-12
Timed Drum with Discrete Outputs (DRUM)	6-12
Event Drum (EDRUM) Instruction	6-14
Program Using the Handheld Programmer	6-16

Chapter 7: RLL^{PLUS} Stage Programming

Introduction to Stage Programming	7-2
Overcoming “Stage Fright”	7-2
Learning to Draw State Transition Diagrams	7-3
Introduction to Process States	7-3
The Need for State Diagrams	7-3
A 2-State Process	7-3
RLL Equivalent	7-4
Stage Equivalent	7-4
Let’s Compare	7-5
Initial Stages	7-5
What Stage Bits Do	7-6
Stage Instruction Characteristics	7-6
Using the Stage Jump Instruction for State Transitions	7-7
Stage Jump, Set, and Reset Instructions	7-7
Stage Program Example: Toggle On/Off Lamp Controller	7-8
A 4-State Process	7-8
Four Steps to Writing a Stage Program	7-9
Stage Program Example: A Garage Door Opener	7-10
Garage Door Opener Example	7-10
Draw the Block Diagram	7-10
Draw the State Diagram	7-11
Add Safety Light Feature	7-12
Modify the Block Diagram and State Diagram	7-12
Using a Timer Inside a Stage	7-13
Add Emergency Stop Feature	7-14
Exclusive Transitions	7-14
Stage Program Design Considerations	7-15
Stage Program Organization	7-15
How Instructions Work Inside Stages	7-16
Using a Stage as a Supervisory Process	7-17
Stage Counter	7-17
Power Flow Transition Technique	7-18
Stage View in <i>DirectSOFT 5</i>	7-18

Parallel Processing Concepts	7-19
Parallel Processes	7-19
Converging Processes	7-19
Convergence Stages (CV)	7-19
Convergence Jump (CVJMP)	7-20
Convergence Stage Guidelines	7-20
RLL^{PLUS} (Stage) Instructions	7-21
Stage (SG)	7-21
Initial Stage (ISG)	7-22
JUMP (JMP)	7-22
Not Jump (NJMP)	7-22
Converge Stage (CV) and Converge Jump (CVJMP)	7-23
Questions and Answers about Stage Programming	7-25

Chapter 8: PID Loop Operation

DL05 PID Control	8-2
DL05 PID Control Features	8-2
Introduction to PID Control	8-4
What is PID Control?	8-4
Introducing DL05 PID Control	8-6
Process Control Definitions	8-8
PID Loop Operation	8-9
Position Form of the PID Equation	8-9
Reset Windup Protection	8-10
Freeze Bias	8-11
Adjusting the Bias	8-11
Step Bias Proportional to Step Change in SP	8-12
Eliminating Proportional, Integral or Derivative Action	8-12
Velocity Form of the PID Equation	8-12
Bumpless Transfer	8-13
Loop Alarms	8-13
Loop Operating Modes	8-14
Special Loop Calculations	8-14
Ten Steps to Successful Process Control	8-16

PID Loop Setup	8-18
Some Things to Do and Know Before Starting	8-18
PID Error Flags	8-18
Establishing the Loop Table Size and Location	8-18
Loop Table Word Definitions	8-20
PID Mode Setting 1 Bit Descriptions (Addr + 00)	8-21
PID Mode Setting 2 Bit Descriptions (Addr + 01)	8-22
Mode/Alarm Monitoring Word (Addr + 06)	8-23
Ramp/Soak Table Flags (Addr + 33)	8-23
Ramp/Soak Table Location (Addr + 34)	8-24
Ramp/Soak Table Programming Error Flags (Addr + 35)	8-24
Configure the PID Loop	8-25
PID Loop Tuning	8-40
Open-Loop Test	8-40
Manual Tuning Procedure	8-41
Auto Tuning Procedure	8-44
Use <i>DirectSOFT</i> 5 Data View with PID View	8-48
Open a New Data View Window	8-48
Open PID View	8-49
Using the Special PID Features	8-51
How to Change Loop Modes	8-51
Operator Panel Control of PID Modes	8-52
PLC Modes Effect on Loop Modes	8-52
Loop Mode Override	8-52
PV Analog Filter	8-53
Creating an Analog Filter in Ladder Logic	8-54
Use the <i>DirectSOFT</i> 5 Filter Intelligent Box Instruction	8-55
FilterB Example	8-55
Ramp/Soak Generator	8-56
Introduction	8-56
Ramp/Soak Table	8-57
Ramp/Soak Table Flags	8-59
Ramp/Soak Generator Enable	8-59
Ramp/Soak Controls	8-59
Ramp/Soak Profile Monitoring	8-60

Table of Contents

Ramp/Soak Programming Errors	8-60
Testing Your Ramp/Soak Profile	8-60
DirectSOFT 5 Ramp/Soak Example	8-61
Setup the Profile in PID Setup	8-61
Program the Ramp/Soak Control in Relay Ladder	8-61
Test the Profile	8-62
Cascade Control	8-63
Introduction	8-63
Cascaded Loops in the DL05 CPU	8-64
Tuning Cascaded Loops	8-65
Time-Proportioning Control	8-66
On/Off Control Program Example	8-67
Feedforward Control	8-68
Feedforward Example	8-69
PID Example Program	8-70
Program Setup for the PID Loop	8-70
Troubleshooting Tips	8-72
Glossary of PID Loop Terminology	8-74
Bibliography	8-76

Chapter 9: Maintenance and Troubleshooting

Hardware System Maintenance	9-2
Standard Maintenance	9-2
Diagnostics	9-2
Diagnostics	9-2
Fatal Errors	9-2
Non-fatal Errors	9-2
V-memory Error Code Locations	9-3
Special Relays (SP) Corresponding to Error Codes	9-3
DL05 Micro PLC Error Codes	9-4
Program Error Codes	9-5
CPU Indicators	9-6
RUN Indicator	9-7

CPU Indicator	9-7
Communications Problems	9-7
I/O Point Troubleshooting	9-8
Possible Causes	9-8
Some Quick Steps	9-8
Handheld Programmer Keystrokes Used to Test an Output Point	9-9
Noise Troubleshooting	9-10
Electrical Noise Problems	9-10
Reducing Electrical Noise	9-10
Machine Startup and Program Troubleshooting	9-11
Syntax Check	9-11
Special Instructions	9-12
Duplicate Reference Check	9-13
Run Time Edits	9-14
Forcing I/O Points	9-16
Bit Forcing with Direct Access	9-16
 Chapter 10: Memory Cartridge/Real Time Clock	
General Information about the D0-01MC	10-2
Jumper Selects Write Enable or Disable	10-2
Low Battery Alert	10-2
Clock/Calendar	10-2
Specifications	10-2
New Ladder Instructions	10-2
Error Code Changes	10-2
Setting the Write Enable/Disable Jumper	10-3
Write Enable	10-3
Write Disable	10-3
Plugging-in the Memory Cartridge	10-4
Remove the Slot Cover	10-4
Insert the Memory Cartridge	10-4
Software and Firmware Requirements	10-5
How to Update Your <i>DirectSOFT</i> Programming Software	10-5
How to Update Your DL05 Firmware	10-5

Table of Contents

Naming the Memory Cartridge	10-6
Up to 8 Alphanumeric Characters	10-6
Name is Retained in Cartridge Memory and Project Folder	10-6
Setting the Time and Date	10-7
Memory Transfers	10-8
CPU to MC	10-8
MC to CPU	10-8
LED Indicator Lights	10-9
Password Protected Programs	10-9
Memory Map and Forwarding Range	10-10
Battery Back-up During AC Power Loss	10-11
What if the Battery Dies?	10-11
Battery Type	10-11
Removing and Replacing the Battery	10-11
Specifications and Agency Approvals	10-12
Clock/Calendar Instructions	10-13
Date (DATE)	10-13
Time (TIME)	10-14
Move Memory Cartridge / Load Label (MOVMC) (LDLBL)	10-15
Copy Data From a Data Label Area to V-memory	10-16
Copy Data From V-memory to a Data Label Area	10-17
Error Codes	10-18

Appendix A: Auxiliary Functions

Introduction	A-2
Purpose of Auxiliary Functions	A-2
Accessing AUX Functions via <i>DirectSOFT 5</i>	A-3
Accessing AUX Functions via the Handheld Programmer	A-3
AUX 2* — RLL Operations	A-4
AUX 21 Check Program	A-4
AUX 22 Change Reference	A-4
AUX 23 Clear Ladder Range	A-4
AUX 24 Clear Ladders	A-4

AUX 3* — V-memory Operations	A-4
AUX 31 Clear V-Memory	A-4
AUX 4* — I/O Configuration	A-5
AUX 41 Show I/O Configuration	A-5
AUX 5* — CPU Configuration	A-5
AUX 51 Modify Program Name	A-5
AUX 53 Display Scan Time	A-5
AUX 54 Initialize Scratchpad	A-5
AUX 55 Set Watchdog Timer	A-5
AUX 56 CPU Network Address	A-6
AUX 57 Set Retentive Ranges	A-6
AUX 58 Test Operations	A-6
AUX 59 Bit Override	A-7
AUX 5B Counter Interface Configuration	A-7
AUX 5D Select PLC Scan Mode	A-7
AUX 6* — Handheld Programmer Configuration	A-8
AUX 61 Show Revision Numbers	A-8
AUX 62 Beeper On/Off	A-8
AUX 65 Run Self Diagnostics	A-8
AUX 7* — EEPROM Operations	A-8
Transferrable Memory Areas	A-8
AUX 71 CPU to HPP EEPROM	A-8
AUX 72 HPP EEPROM to CPU	A-9
AUX 73 Compare HPP EEPROM to CPU	A-9
AUX 74 HPP EEPROM Blank Check	A-9
AUX 75 Erase HPP EEPROM	A-9
AUX 76 Show EEPROM Type	A-9
AUX 8* — Password Operations	A-9
AUX 81 Modify Password	A-9
AUX 82 Unlock CPU	A-10
AUX 83 Lock CPU	A-10

Appendix B: DL05 Error Codes

DL05 Error Codes	B-2
-------------------------------	------------

Appendix C: Instruction Execution Times

Introduction	C-2
V-memory Data Registers	C-2
V-memory Bit Registers	C-2
How to Read the Tables	C-2
Instruction Execution Times	C-3
Boolean Instructions	C-3
Comparative Boolean Instructions	C-4
Immediate Instructions	C-10
Timer, Counter and Shift Register	C-10
Accumulator Data Instructions	C-11
Logical Instructions	C-12
Math Instructions	C-12
Bit Instructions	C-14
Number Conversion Instructions	C-14
Table Instructions	C-14
CPU Control Instructions	C-15
Program Control Instructions	C-15
Interrupt Instructions	C-15
Network Instructions	C-15
Message Instructions	C-16
RLL ^{PLUS} Instructions	C-16
Drum Instructions	C-16
Word Bit Instructions	C-17

Appendix D: Special Relays

DL05 PLC Special Relays	D-2
--------------------------------------	------------

Appendix E: High-speed Input and Pulse Output Features

Introduction	E-2
Built-in Motion Control Solution	E-2
Availability of HSIO Features	E-2
Dedicated High-Speed I/O Circuit	E-3
Wiring Diagrams for Each HSIO Mode	E-3

Choosing the HSIO Operating Mode	E-4
Understanding the Six Modes	E-4
Default Mode	E-4
Configuring the HSIO Mode	E-5
Configuring Inputs X0 – X2	E-5
Mode 10: High-Speed Counter	E-6
Purpose	E-6
Functional Block Diagram	E-6
Wiring Diagram	E-7
Interfacing to Counter Inputs	E-7
Interfacing to Counter Outputs	E-7
Setup for Mode 10	E-8
Presets and Special Relays	E-8
Preset Data Starting Location	E-9
Using Fewer than 24 Presets	E-9
Equal Relay Numbers	E-9
Calculating Your Preset Values	E-10
X Input Configuration	E-10
Writing Your Control Program	E-11
Program Example: Counter Without Preset	E-12
Counter With Presets Program Example	E-14
Counter With Preload Program Example	E-16
Troubleshooting Guide for Mode 10	E-17
Symptom: The counter does not count.	E-17
Symptom: The counter counts but the presets do not function.	E-17
Symptom: The counter counts up but will not reset.	E-17
Mode 20: Quadrature Counter	E-18
Purpose	E-18
Functional Block Diagram	E-18
Quadrature Encoder Signals	E-18
Wiring Diagram	E-19
Interfacing to Encoder Outputs	E-19
Setup for Mode 20	E-20
X Input Configuration	E-20
Writing Your Control Program	E-21

Table of Contents

Quadrature Counter w/Preload Program Example	E-21
Counter Preload Program Example	E-23
Troubleshooting Guide for HSIO Mode 20	E-23
Symptom: The counter does not count.	E-23
Symptom: The counter counts in the wrong direction	E-23
Symptom: The counter counts up and down but will not reset.	E-23
Mode 30: Pulse Output	E-24
Purpose	E-24
Functional Block Diagram	E-25
Wiring Diagram	E-26
Interfacing to Drive Inputs	E-26
Motion Control Profile Specifications	E-27
Physical I/O Configuration	E-27
Logical I/O Functions	E-27
Setup for Mode 30	E-28
Profile / Velocity Select Register	E-28
Profile Parameter Table	E-29
Trapezoidal Profile	E-29
Registration Profile	E-29
Velocity Profile	E-29
Choosing the Profile Type	E-30
Trapezoidal Profile Defined	E-30
Registration and Home Search Profiles Defined	E-30
Velocity Profile Defined	E-30
Trapezoidal Profile Operation	E-31
Trapezoidal Profile Applications	E-31
Trapezoidal Profile Program Example	E-32
Preload Position Value	E-33
Registration Profile Operation	E-34
Registration Applications	E-34
Registration Profile Program Example	E-35
Home Search Program Example	E-37
Velocity Profile Operation	E-39
Velocity Profile Applications	E-39
Velocity Profile Program Example	E-40

Pulse Output Error Codes	E-42
Troubleshooting Guide for HSIO Mode 30	E-42
Symptom: The stepper motor does not rotate.	E-42
Symptom: The motor turns in the wrong direction.	E-43
Mode 40: High-Speed Interrupts	E-44
Purpose	E-44
Functional Block Diagram	E-44
Setup for Mode 40	E-45
Interrupts and the Ladder Program	E-45
External Interrupt Timing Parameters	E-46
Timed Interrupt Parameters	E-46
X Input/Timed INT Configuration	E-46
Independent Timed Interrupt	E-46
External Interrupt Program Example	E-47
Timed Interrupt Program Example	E-48
Mode 50: Pulse Catch Input	E-49
Purpose	E-49
Functional Block Diagram	E-49
Pulse Catch Timing Parameters	E-49
Setup for Mode 50	E-50
X Input Configuration	E-50
Pulse Catch Program Example	E-51
Mode 60: Discrete Inputs with Filter	E-52
Purpose	E-52
Functional Block Diagram	E-52
Input Filter Timing Parameters	E-52
Setup for Mode 60	E-53
X Input Configuration	E-53
Filtered Inputs Program Example	E-54

Appendix F: PLC Memory

DL05 PLC Memory	F-2
Non-volatile V-memory in the DL05	F-3

Appendix G: ASCII Table

ASCII TableG-2

Appendix H: Product Weights

Product Weight TableH-2

Appendix I: Numbering Systems

IntroductionI-2
Binary Numbering SystemI-2
Hexadecimal Numbering SystemI-3
Octal Numbering SystemI-4
Binary Coded Decimal (BCD) Numbering SystemI-5
Real (Floating Point) Numbering SystemI-5
BCD/Binary/Decimal/Hex/Octal -What is the Difference?I-6
Data Type MismatchI-7
Signed vs. Unsigned IntegersI-8
AutomationDirect.com Products and Data TypesI-9
 *Direct*LOGIC PLCsI-9
 C-more/C-more Micro-Graphic PanelsI-9

Appendix J: European Union Directives (CE)

European Union (EU) DirectivesJ-2
 Member CountriesJ-2
 Applicable DirectivesJ-2
 ComplianceJ-2
 General SafetyJ-3
 Special Installation ManualJ-4
 Other Sources of InformationJ-4
Basic EMC Installation GuidelinesJ-5
 EnclosuresJ-5
 Electrostatic Discharge (ESD)J-5
 AC Mains FiltersJ-6

Suppression and Fusing	J-6
Internal Enclosure Grounding	J-6
Equi-potential Grounding	J-7
Communications and Shielded Cables	J-7
Analog and RS232 Cables	J-8
Multidrop Cables	J-8
Shielded Cables within Enclosures	J-9
Analog Modules and RF Interference	J-9
Network Isolation	J-9
DC Powered Versions	J-9
Items Specific to the DL05	J-10

Appendix K: Introduction to Serial Communications

Introduction to Serial CommunicationsK-2
Wiring Standards	K-2
Communications Protocols	K-3
DL05 Port Specifications	K-4
DL05 Port Pinouts	K-4
Port Setup Using <i>DirectSOFT 5</i> or Ladder Logic Instructions	K-5
Port 2 Setup for RLL Using K-Sequence, <i>DirectNET</i> or Modbus RTU	K-6
Port 2 Setup for RLL Using ASCII	K-7
K-Sequence Communications	K-9
<i>DirectNET</i> Communications	K-9
Step 1: Identify Master Port # and Slave #	K-9
Step 2: Load Number of Bytes to Transfer	K-9
Step 3: Specify Master Memory Area	K-10
Step 4: Specify Slave Memory Area	K-11
Communications from a Ladder Program	K-12
Multiple Read and Write Interlocks	K-12
Modbus RTU Communications	K-13

Index