

Getting Started


In This Chapter. . . .

- Introduction
 - *DirectVIEW*[™] 1000 Features
 - Display and Keypad Basics
 - Setup Parameters, the Key to DV-1000 Success
 - Quick Tour of DV-1000 Operation
 - Operator Interface Design Basics
 - Frequently Asked Questions
 - Specifications
-

Introduction


The Purpose of this Manual

This manual shows the various features and modes of the **DirectVIEW 1000** (DV-1000). Your application may require the use of some of these modes, or all of them. This manual can help you decide which modes to use, and how to configure the CPU to support the DV-1000 in those modes. In the chapters on DV-1000 operational modes there are example programs to help you write the required supporting ladder program. If you are a new user, however, you may need to refer to the User Manual for the PLC you are using.

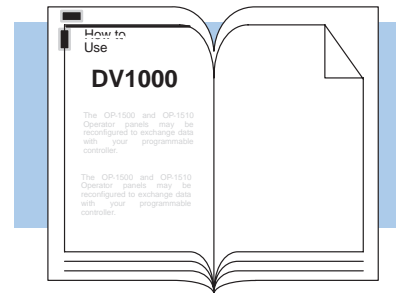

Supplemental Manuals

The DL105 User Manual (D1-USER-M), the DL205 User Manual (D2-USER-M), the DL305 User Manual (D3-USER-M; make sure you have the version covering the DL350 CPU) and the DL405 User Manual (D4-USER-M) contain related information, such as the instruction set definitions for your CPU type. In addition, the **DirectSoft Quick Start Manual** (QS-DSOFT-M) may also be useful. These manuals are not absolutely necessary to use the DV-1000, but might come in handy for an occasional reference.

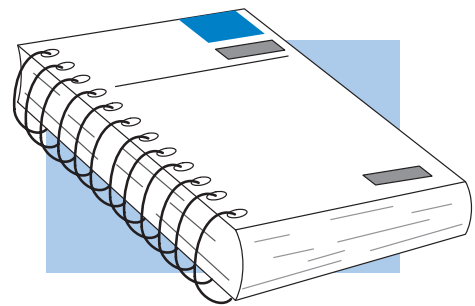

Technical Support

We realize that even though we strive to be the best, we may have arranged our information in such a way you cannot find what you are looking for. First, check these resources for help in locating the information:

- **Table of Contents** – chapter and section listing of contents, in the front of this manual
- **Quick Guide to Contents** – chapter summary listing on the next page
- **Appendices** – reference material for key topics
- **Index** – alphabetical listing of key words, at the end of this manual

You can also check our online resources for the latest product support information:

- **Internet** – the address of our Web site is <http://www.plcdirect.com>
- **Bulletin Board Service (BBS)** – call (770)–844–4209


If you still need assistance, please call us at 800–633–0405. Our technical support group is glad to work with you in answering your questions. They are available Monday through Friday from 9:00 A.M. to 6:00 P.M. Eastern Standard Time. If you have a comment or question about any of our products, services, or manuals, please fill out and return the 'Suggestions' card that was shipped with this manual.

Chapters The main contents of this manual are organized into the following seven chapters and Appendices A, B and C:

1	Getting Started	provides an overview of the features and provides general specifications. The importance of setup parameters and what they do are shown. "Quick Tour of DV-1000 Operation" covers the operational modes and the main features of each mode. A list of <i>Frequently Asked Questions</i> is located near the end of this chapter.
2	Installation Guide	explains how to select the CPU type and a communications cable, how to mount the unit in a control panel and connect it to your CPU, and how to install the example programs disk and start <i>DirectSOFT</i> to begin your ladder program.
3	DV-1000 Setup Parameters	explains the purpose of setup parameters, how they are used, and gives example programs. Special topics include selecting the Powerup Default Mode.
4	Message Display Mode	shows how to access System Messages, including Error Messages and Fault Messages. It covers User Messages, and shows how to create your own text and numeric output and includes several example programs.
5	Status Display Mode	tells how to view the status of CPU data types (X, Y, GX, C, SP, T, CT, S, V and P).
6	Change Preset Mode	covers the concept of changing V-memory data, the three types of titles you may attach to the values as labels, and password protection (optional) for changing preset values. An Operator's Guide covers the keypad procedure for changing presets.
7	Bit Control Mode	discusses how to enter and exit Bit Control Mode, and how to use it in machine debug applications.
A	Troubleshooting Guide	Appendix A provides a list of typical problems you may encounter along with the most likely causes and solutions.
B	Reference Data	Appendix B provides the setup parameter tables and a table of ASCII characters and their hex ASCII codes.
C	DV-1000 Worksheets	Appendix C provides worksheets that you may copy and use to plan your application program.

DirectVIEW 1000 Data Access Unit Overview


The DV-1000 is a small, low-cost data access unit which connects directly to all DL105, DL205 and DL405 CPUs, and to DL305 models having a D3-350 CPU (it is not compatible with the other DL305 CPUs). Its main purpose is to provide access for monitoring and controlling data in the CPU, and is usually permanently installed in an operator interface, but it can also be used portably as a debugging tool.

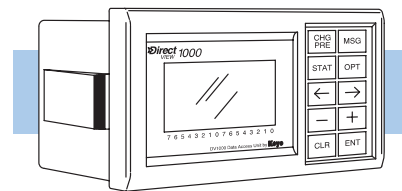

DirectVIEW (DV-1000)

DirectVIEW™ 1000 Features


The **DirectVIEW™ 1000** (DV-1000) has several different modes which are accessible from its keypad. *Most modes require some ladder logic in the PLC and setup parameters in V-memory, which are essential for the DV-1000 to function!* This manual contains many program examples to acquaint you with all the capabilities of the DV-1000, and help you with the required setup parameters and ladder program. Some of the main features and benefits are:

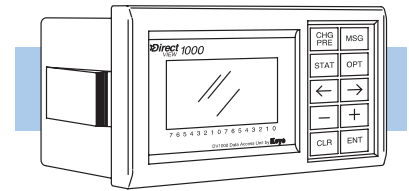

DirectVIEW (DV-1000)


- Works with all DL105, DL205 and DL405 CPUs, and DL350 CPUs
- Features a 4-line by 16-character back-lit display
- Monitors V-memory data values
- Displays text and numeric data generated with your ladder program
- Can change preset (any V-memory) values
- Displays CPU-generated error messages (message log)
- Single cable connection to CPU
- Easy snap-in mounting
- The DV-1000 device is UL® Listed

Getting Acquainted Before connecting the DV-1000 to your PLC, we'll first study its main features. The drawing below shows a front and rear view of the unit. The 4-line by 16-character display is back-lit for viewing in various ambient lighting conditions. You can control the contrast of the LCD segments by adjusting a potentiometer accessible with a small screwdriver under the bottom of the unit. To the right of the display is a keypad featuring ten keys. These are general-purpose keys that allow you to select various operating modes, select particular data for monitoring, and to change data values. The DV-1000 is designed to fit into a rectangular cutout in the control panel of an operator interface. A retention clip on each side keeps it in place after installation. A modular jack at the rear of the unit provides an easy connection to the CPU.

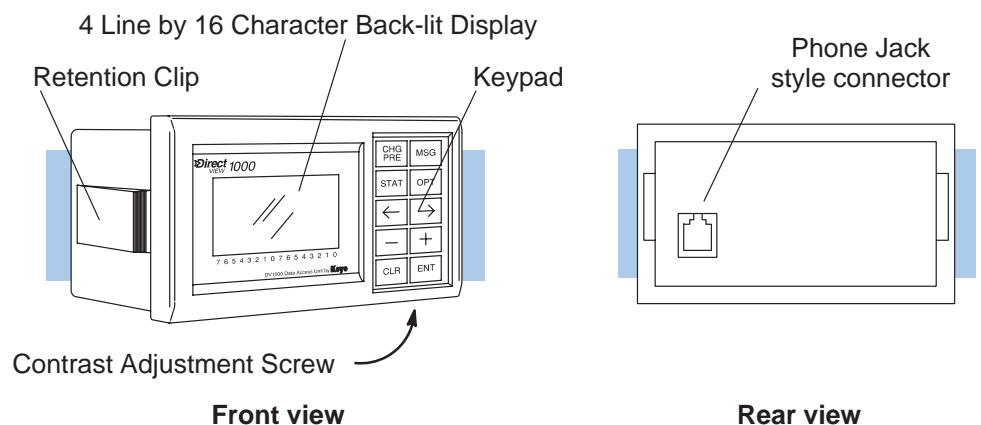

Display


The DV-1000 display contains 4 lines by 16 characters, and each character is formed by a 5 x 7 LCD dot matrix. The unit's internal processor generates an ASCII character set, and outputs menu messages associated with the keypad.

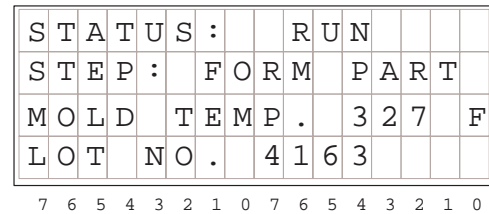

You can create your own messages by using ladder logic and special setup parameters in V-memory. The permanent numbers below the bottom edge of the display label individual bits of byte or word status displays.


Keypad

The keypad contains ten keys, located along the right side of the DV-1000. The primary keys on the unit have a blue colored background, and are dedicated for changing the operational modes. The secondary keys have a gray colored background, and are multi-purpose keys used for cursor movements and incrementing or decrementing values in the display.

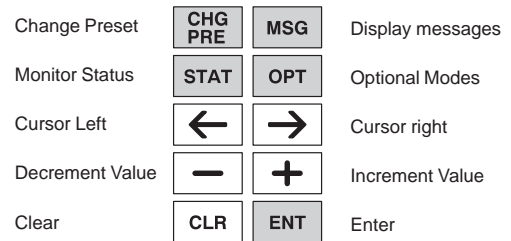


Cables

There are basically two types of cables that may be used with the DV-1000. The type you will use depends mainly on the PLC type that will connect to your DV-1000. Therefore, the appropriate cable must be ordered as a separate item. See Chapter 2 for specific part number information for the proper cable.

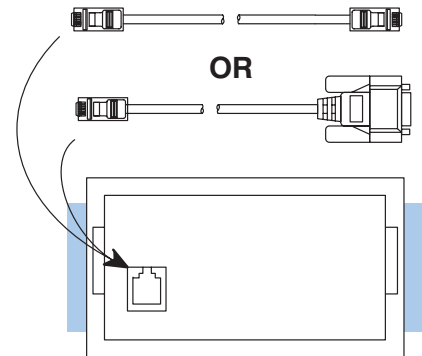

Software Examples on Disk

The chapters on individual modes contain several ladder program examples. A *diskette containing the files for these examples is included with this manual.* The diskette symbol in the margin beside an example program indicates it is on the diskette. See the section near the end of Chapter 2, titled "Installing the Example Programs".

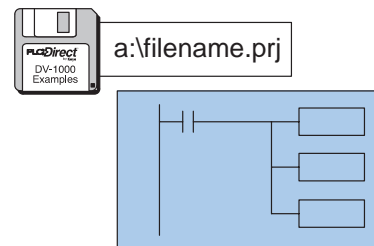

NOTE:The DL430 CPU does not support all instructions used in the example programs.

NOTE: *DirectSOFT* Release 2.0 programming software has a utility to configure the DV-1000; however, before using this utility it is important to understand the V-memory relationship between the DV-1000 and the PLC. See the *DirectSOFT* Users Manual (DA-DSOFT-M) for more information.

Display and Keypad Basics

This section will familiarize you with how to use the keypad, along with the display response for each key you press. Its purpose is *not to demonstrate all of the modes or display screens*. The remaining chapters in this manual contain that information.

NOTE: These exercises must be done in a safe learning environment. **DO NOT** use a CPU that is actually controlling a process, in order to avoid accidentally changing V-memory data needed by the ladder program.

Clear V-memory First!

The following exercises assume the DV-1000 is online with the PLC, and the CPU program, V-memory, and system parameters are clear. If your CPU has random data in these locations, then your displays will likely not match the examples.

1. Connect the communications cable from your personal computer communications port to your PLC's programming port on the CPU.
2. Start **DirectSOFT** on your personal computer.
3. Select a link to go online with the CPU.
4. Save your program to a project file, if you have a program not yet saved.
5. Verify the CPU is in program mode. From the menu bar, select **PLC**, then **PLC Modes**, then **Program**. Then select "OK", or press Return.
6. From the menu bar, select **PLC**, then **Clear PLC memory**, then **All**. Then select "OK", or press Return.
7. From PLC menu, choose Setup, then **Initialize Scratchpad**. This ensures the DV-1000 setup parameters are initialized to zeros.

Keypad

You may recall that the keypad is color-coded, based on key functions. The blue keys are dedicated for changing the operational modes. The gray keys are multi-purpose, used for cursor movements and incrementing or decrementing values in the display.

Change Preset			Display messages
Monitor Status			Optional Modes
Cursor Left			Cursor Right
Decrement Value			Increment Value
Clear			Enter

Keypad Conventions Used in this Manual

This manual uses some keypad conventions. When keypad entries are required, key symbol(s) will be shown, preceded by the word "Press". Example 1 asks you to press the **Status** Key followed by the **Enter** key. Example 2 asks you to press the **Change Preset** key, followed by pressing the **Cursor Right** Key twice. The graphic arrow points to the resulting display beside or below the key sequence.

PRESS

Example 1

PRESS


Example 2

NOTE: When pressing multiple keys or pressing a key repetitively in a key sequence, please **pause** for a second between keystrokes. This allows the DV-1000 time to process each keystroke before the next keypad entry occurs.

Setup Parameters, the Key to DV-1000 Success!

Purpose of Setup Parameters

Most DV-1000 modes require setup parameters. Refer to the figure below. These are V-memory locations in the CPU reserved for DV-1000 use. Their purpose is: **Setup parameters simply tell the DV-1000 where to find its display data. Accordingly, the DV-1000 is completely lost without its setup parameters!**

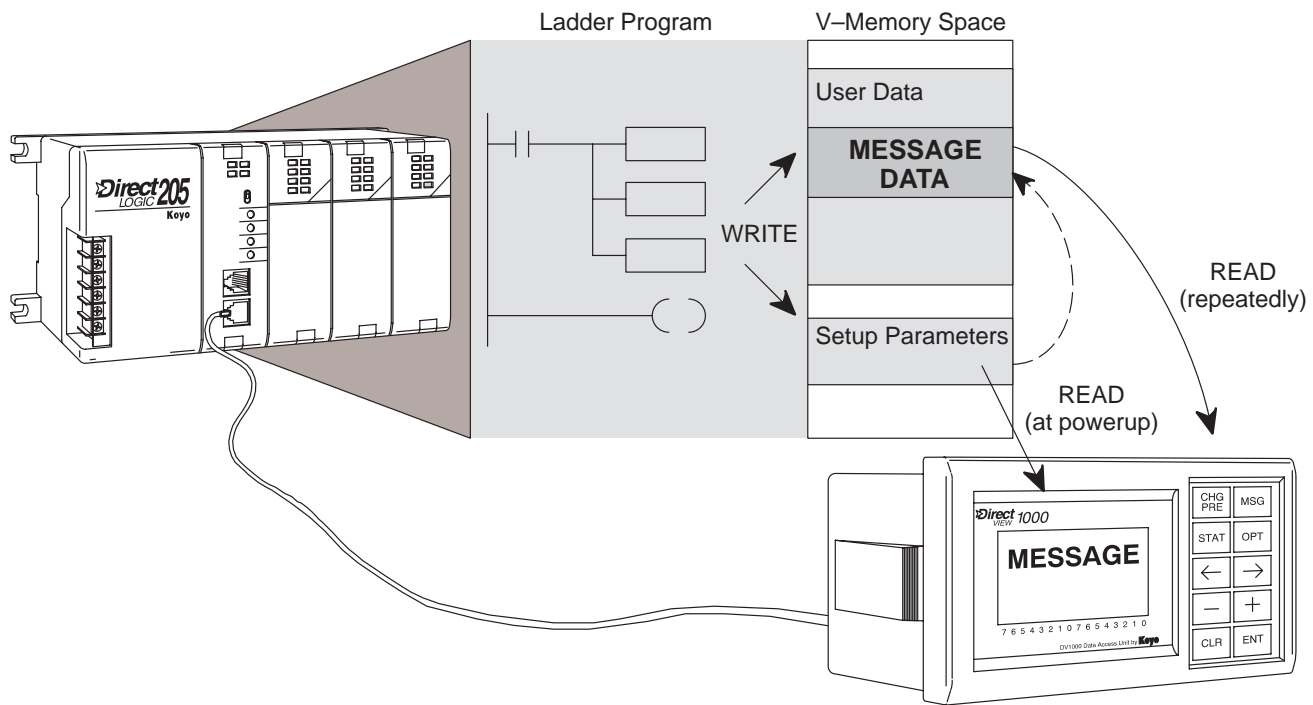


Typically, the ladder program writes the setup parameters to V-memory on the first CPU scan. These point to the locations of blocks of data (also written by the ladder program), which the DV-1000 needs to generate messages, preset lists, etc. By reading setup parameters after powerup, the DV-1000 is able to locate and read its operational data from the data blocks elsewhere in V-memory. The DV-1000 re-reads these data blocks continuously during operation.

Programming Setup Parameters

To the right is a typical program outline to support the DV-1000. On the first scan, the first rung places setup parameters in their reserved V-memory locations. The main program follows, which moves data to or from the data blocks referenced by the setup parameters as required.

Chapter 3 covers setup parameters in general. Then, each chapter on an operational mode includes several setup examples for that mode.

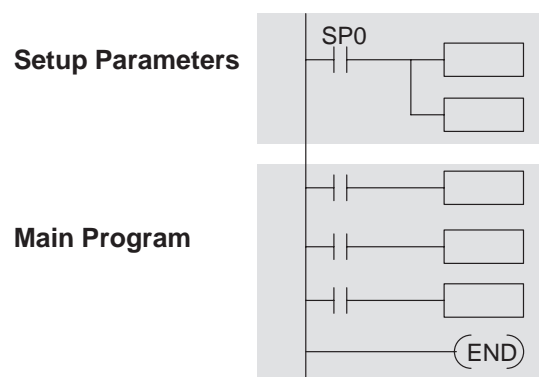

We highly recommend reading Chapter 3 on Setup Parameters thoroughly before attempting to use any mode that requires setup parameters!

Message Display Mode
(see Chapter 4)

In Message Display Mode, display output can be from one of three different sources: System Messages (includes Fault Messages and Error Messages), and User Messages as shown.

Fault Messages are generated by using the Fault Message Box in ladder logic.

System Error Messages are automatically generated by the CPU upon an error event. Fault Messages and System Error Messages have display priority over User Messages.

User Messages let you create numeric and text output to the entire display under ladder logic control. *Only User Messages require setup parameters.*

Fault Message

*	P	A	R	T		J	A	M	,	Z	O	N	E		1
---	---	---	---	---	--	---	---	---	---	---	---	---	---	--	---

Error Message

E	0	4	2			N	O			C	P	U		B	A	T	T
---	---	---	---	--	--	---	---	--	--	---	---	---	--	---	---	---	---


User Message

C	O	N	V	E	Y	O	R			S	P	E	E	D	S		
	L	i	n	e		1	=			1	2	3		f	p	m	
	L	i	n	e		2	=			4	5	6		f	p	m	
	L	i	n	e		3	=			7	8	9		f	p	m	

DL240, DL250, DL350, DL440 and DL450 CPUs can record up to 16 Error Messages and 16 Fault Messages in separate message logs as shown below. It attaches a time/date stamp to messages when they occur. These may be viewed individually with the DV-1000.

Example Message Log

	DATE	TIME	FAULT MESSAGE
01	08/10/95	09:35:50	PART JAMMED
02	08/11/95	08:00:43	BIN EMPTY
03	08/11/95	07:15:53	OVER TEMP
04	08/20/95	17:22:48	LOW FLOW
05	08/30/95	17:22:24	PUMP FAULT
06	08/30/95	17:22:24	GATE STUCK
:	:	:	:
16	08/02/95	9:22:16	SETUP INVALID

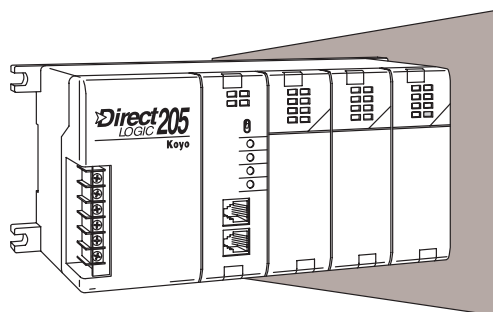


User Messages require ladder programming and setup parameters. Chapter 4 includes several example programs designed to show you how to add these features to your own messages:

- Include text with numerical data
- Blinking characters
- Multiple screens with paging
- Signed numbers (+/-)
- Time and date stamp in message
- Create bar graphs for analog data
- Long messages that scroll

Time and Date Stamp

M	A	C	H	I	N	E		S	T	A	T	U	S				
F	a	u	l	t	=			B	i	n		E	m	p	t	y	
T	i	m	e		=	1	1	:	3	2	:	5	7	A	M		
D	a	t	e		=	0	7	/	0	5	/	9	5				

Bargraph Display

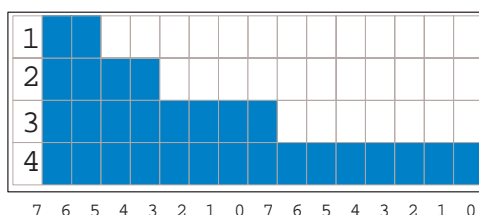

Change Preset Mode (see Chapter 6)

Change Preset Mode presents data that you can view on the display and edit with the keypad. *Setup parameters are required.* Titles (labels) accompany the data, giving them meaning for your application. “Change Preset” just means “change V-memory data value”. Password protection is also available, if desired.

TITLE FIELD				DATA FIELD						
M	y	T	i	t	l	e	0	0	0	0
M	y	T	i	t	l	e	0	0	0	0
M	y	T	i	t	l	e	0	0	0	0
M	y	T	i	t	l	e	0	0	0	0

7 6 5 4 3 2 1 0 7 6 5 4 3 2 1 0

Three types of titles are available in Change Preset Mode:

- User-titled Presets allow you to create your own text label of up to eight characters in length.
- Pre-titled Timer labels (1 to 99) are available if you have timers and can use ready-made labels.
- Pre-titled Counter labels (1 to 99) are available if you have counters and can use ready-made labels.

M	y	T	i	t	l	e	0	0	0	0
---	---	---	---	---	---	---	---	---	---	---


T	I	M	E	R	1	0	0	0	0
---	---	---	---	---	---	---	---	---	---

C	O	U	N	T	E	R	1	0	0	0	0
---	---	---	---	---	---	---	---	---	---	---	---

With proper setup parameters, you can establish lists of presets with text labels you create. The Change Preset Mode has built-in display scrolling capability. You can scroll to the variable name of the data you want to change, move the cursor to the data field, and change the data using the keypad. Like using thumb-wheel switches, the data in V-memory changes immediately to match the display.


USER TITLES				DATA							
S	e	t	P	o	i	n	t	0	0	0	0
V	a	l	u	e				0	0	0	0
H	i	A	l	a	r	m		0	0	0	0
L	o	A	l	a	r	m		0	0	0	0
S	o	a	k	T	i	m	e	0	0	0	0
T	e	m	p	1				0	0	0	0
T	e	m	p	2				0	0	0	0
G	a	l	/	M	i	n		0	0	0	0

Change Preset operation is depicted below. Setup parameters point to the location of title and data lists in V-memory, also defining the list length. The DV-1000 presents these as matched lists, so that a title and its corresponding data are together on the same display line. Keypad entries can request data changes, which immediately updates the data on the display and the data in V-memory. Finally, the ladder logic program uses the new data to update the machine control process.

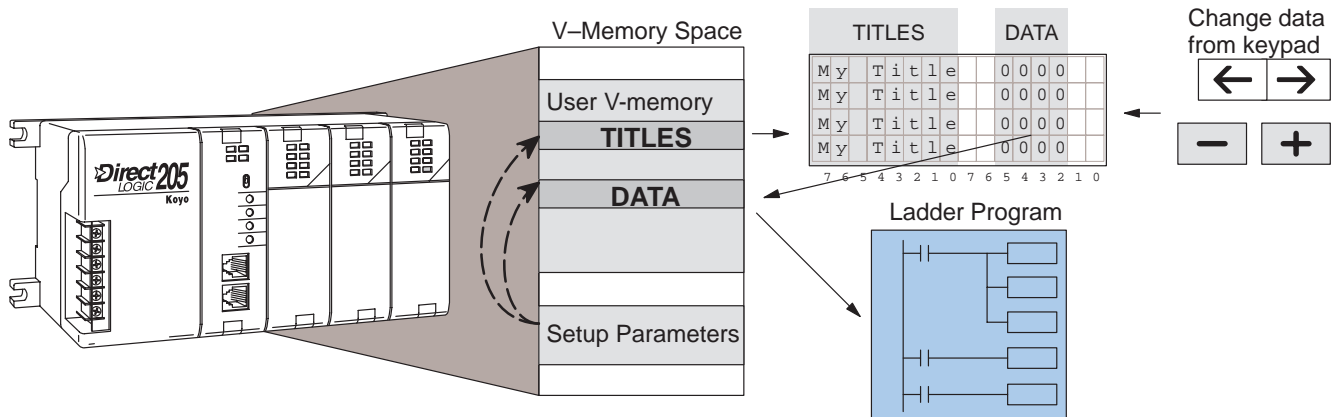

Bit Control Mode
(see Chapter 7)


Bit Control Mode temporarily reassigns eight keys on the keypad for dedicated control of eight I/O bits. A *Setup Parameter* is required. In the drawing below, the setup parameter points to a system I/O location for either X, Y, C, or GX type I/O points. This example's setup parameter points to a control relay location, controlling the first eight relays. The keypad switches operate as momentary, normally open switches. When ladder logic uses these bit control I/O points as inputs, keypad entries can request I/O bits to turn on as long as keys are pressed.

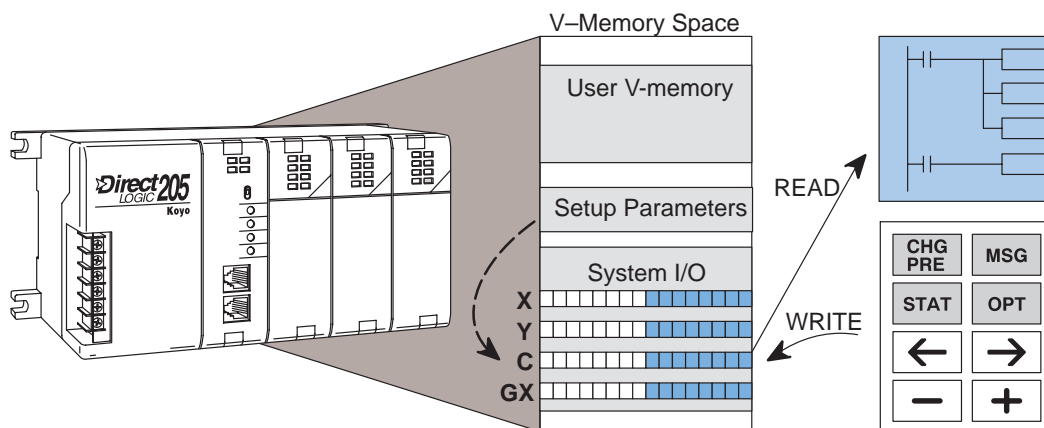

While the keypad is in Bit Control Mode, the display may be in either Message Display, Status Display, or Change Preset Mode.

WARNING: Bit Control Mode is designed for debug purposes only. There is no automatic indication that normal keypad functionality has been suspended.


With a simple parameter setup and ladder program, you can use Bit Control Mode to turn on an output module's output points. In the example system to the right, the eight keys shown from the keypad have been configured to turn on control relays C0 through C7. Then the main ladder program uses these to turn on outputs Y0 through Y7.

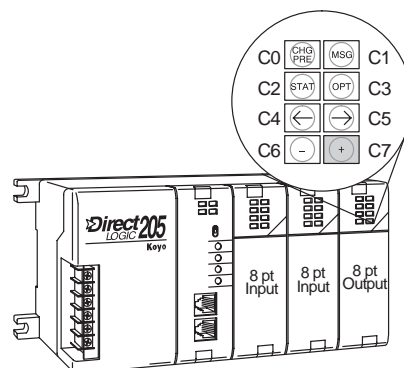

Operator Interface Design Basics


Man-Machine Interface

The DV-1000 provides access to PLC data to the user while the CPU is running the RLL program, and the process or machine is running. In most applications, the DV-1000 is a permanent part of the operator interface. The operator's panel shown in the drawing below is at the top of the control cabinet, located at the side of the machine. The operator panel contains all the dedicated operator interface devices, such as switches, gauges, control knobs, etc. The DV-1000 is one of these devices which forms the entire operator interface.

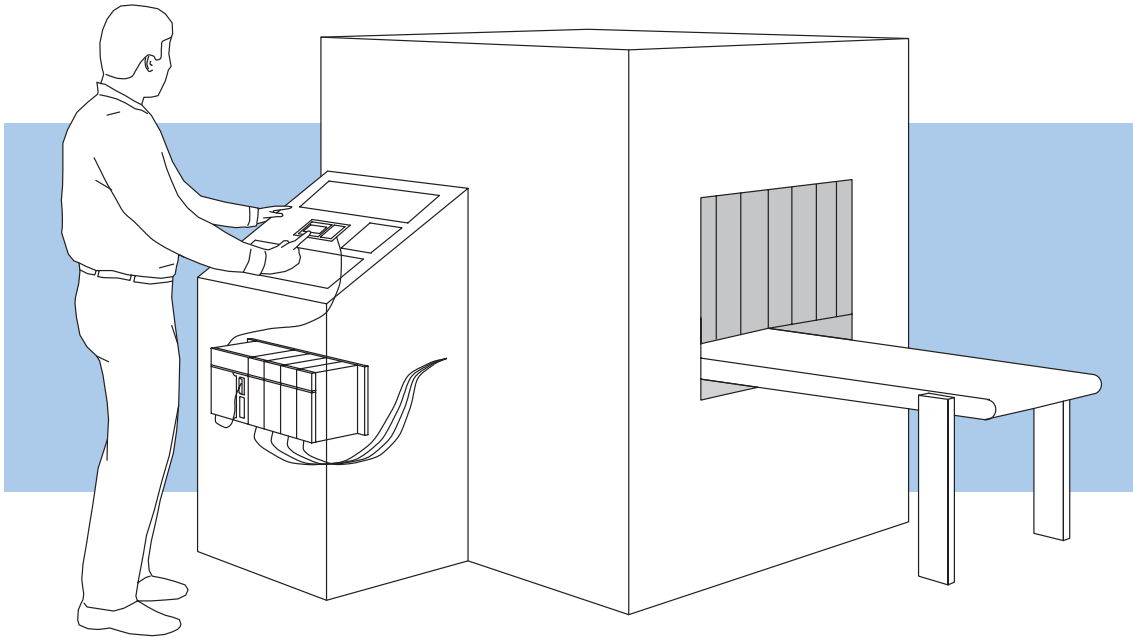

In the transparent view of the control cabinet, follow the single cable from the DV-1000 to the PLC inside. From there, a wiring bundle connects it through the rear of the control cabinet to sensors and other field devices located inside the machine. The conveyor which moves the product through the machine may also be controlled by the PLC.


Next we examine the interaction and flow of information between all the players in the man-machine interface. The following diagram arranges them in the order they communicate.

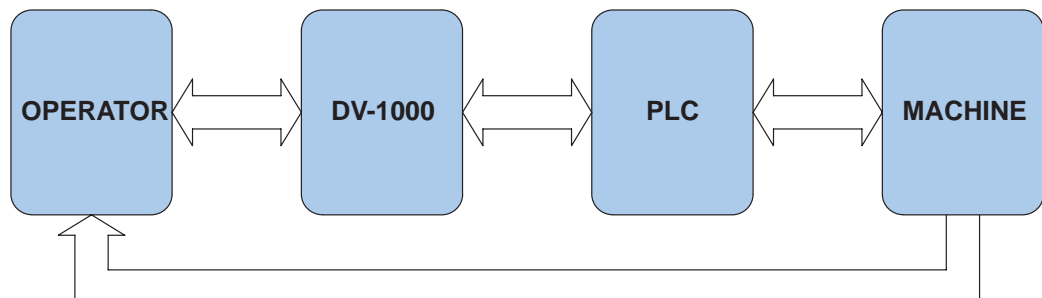

Monitor and Control

Action begins with the human operator, who wants to know the machine status or make an adjustment to the process. From the control panel, the operator can access data through the DV-1000, which connects to the PLC inside the control cabinet. In turn, the PLC connects to the machine or factory process through wiring to sensors, relays, solenoids, motors, and so on.

The DV-1000 features several operating modes that may be used in a variety of ways. But at a basic level, it provides two types of accesses to data: **monitor** and **control**. Refer to the drawing below.

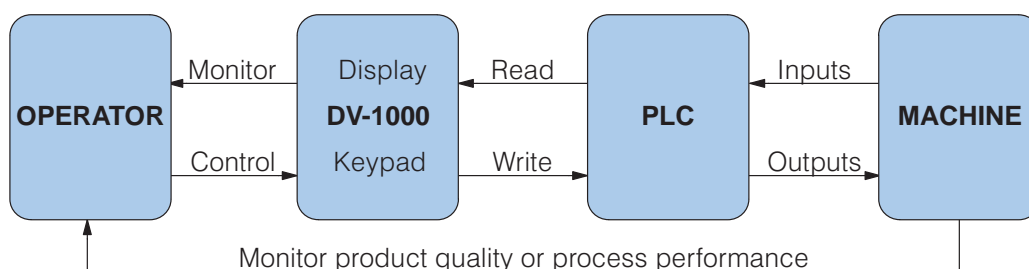

The drawing shows the flow of information between the operator and the machine or process.

Purposes of Monitoring

The control panel *communicates the status of the machine or process to the operator*. Some of the kinds of information it conveys are:

- Production totals
- Machine setup and process status information
- Quality control statistics
- I/O point status for troubleshooting

Use **Message Display Mode** (see Chapter 4) for these types of messages. For example, a diagnostic message that says “Part Jam, Zone 3” gives an operator a good idea of the nature of the problem and its location. Use **Status Display Mode** (see Chapter 5) to view the PLC’s I/O bit status for troubleshooting.

Purposes of Control

The control panel enables an operator to *change the process instructions or setpoints*. Some of the goals accomplished by control inputs are:

- Change a process variable setpoint during runtime (such as temperature) in order to optimize the process or machine performance
- Select a particular product setup from a menu
- Perform machine debug by turning on specific control bits or outputs
- Manually jog a machine or increment through process steps in order to clear a part jam or fault condition
- Control major machine functions (Start, Stop, etc.) **see note below**

Use **Change Preset Mode** (see Chapter 6) to change process variables or select a product setup menu. Use **Bit Control** (see Chapter 7) for machine debug tasks.

NOTE: For controlling major machine functions such as Start, Stop, Run, Jog, etc, we recommend using individual dedicated control devices, not the DV-1000 keypad.

Frequently Asked Questions

NOTE: If you have general questions regarding the DV-1000 and your application, please check the following list of typical questions we receive. If you have already installed or programmed your DV-1000 and are having difficulties, refer to the Troubleshooting Guide in Appendix A at the end of this manual. If you still need assistance, please call us toll-free for technical support.

Can I use the DV-1000 to change data in the PLC?

Yes. There are two modes available for changing PLC data:

- Change Preset Mode lets you individually edit V-memory locations as a 4-digit BCD number, from a list of either 16 or 32 data word locations, and up to 99 timer presets and 99 counter presets (depending on CPU type).
- Bit Control Mode dedicates 8 of the 10 keys on the keypad for single-bit control. These operate as eight momentary, normally off pushbuttons.

Is there password protection for modes that allow the operator to change PLC data?

Yes, there is for Change Preset Mode. See Chapter 6 for more on this topic.

How many DV-1000s can be connected to the PLC?

A maximum of two DV-1000s may be directly connected to the DL240 and DL450 CPUs. See Chapter 2 for other options, and general information on this topic.

Can the PLC cause the DV-1000 to always power up in a certain mode?

Yes. The powerup default mode may be selected by using a particular entry in the parameter setup table. See Chapter 3 for more on this topic.

Is there a way to cause the DV-1000 to stay in Bit Control Mode (or any mode that I choose)?

You can set up the DV-1000 to power up in particular modes. However, if the operator presses certain keys on the keypad, this takes the DV-1000 out of its original powerup mode.

Can the PLC cause the DV-1000 to change modes during normal operation (PLC run mode)?

No. After establishing the powerup mode, further DV-1000 mode changes only occur upon keypad entry.

When does the DV-1000 read its setup parameters from the PLC?

These are read one time just after powerup, and any time a mode change is requested from the keypad.

What's the best way to enter setup parameters?

We recommend imbedding the setup as a part of the ladder program. Using a SP0 contact on the rung, it only executes on the first PLC scan. See Chapter 3 for more on setup parameters.

I need to display the phrase "TEMP 1", followed by the present value of the temperature in PLC V-memory, and also to allow changing that value right on the display. Is there a way to do this?

Yes. Use Change Preset Mode, with user-titled labels.

Can I use the DV-1000 to change timer or counter presets in the PLC?

Yes. The Change Preset Mode will let you do this. See Chapter 6 for more information on this topic.

Can the display show more ASCII characters than just letters of the alphabet?

Yes, the DV-1000 character set includes several special symbols. See Appendix B for a complete listing of characters and symbols with their ASCII codes.

Do I have to enter the ASCII codes in instruction boxes, or can I just type in the letters?

Actually, you may do it either way. The LD/OUT and LDD/OUTD instructions may place ASCII codes in the text table, or the ACON instruction box can convert characters in the box to ASCII codes (see Chapter 4 for more on this topic).

I need to show more than the display's 4 lines of text. Can I scroll or swap display screens?

Yes. The proper ladder logic will allow you to do this. Examples of multiple display screens and scrolling techniques may be found in Chapter 4.

Can I use the DV-1000 keypad to control machine functions, like Start, Stop, Step Jog, Run, etc.?

While technically possible, we **strongly recommend against** this type of application. Major machine control functions are best implemented with larger, dedicated switches, knobs, etc. The keys on the DV-1000 are intended primarily for various monitoring functions, or for occasionally changing V-memory Preset Values. *See the next question and answer!*

Are there other operator interfaces available from PLC *Direct*?

Yes. Please call our Technical Support Line (1-800-633-0405) for the latest information on other **Direct**LOGIC compatible products available from us or from industry affiliates.

Can the PLC sense when the operator makes keypad entries?

It depends. Bit Control Mode is designed for general key detection for eight of the ten available keys, which are redefined from their normal function. In the other modes, DV-1000 keypad activity cannot be detected in the PLC.

Can the display indicate when the DV-1000 is in Bit Control Mode?

Yes, but with some qualification. The display can be in Message Display Mode and the keypad in Bit Control Mode simultaneously (which is selectable as a powerup default mode). Ladder programming can detect keypad activity, and coordinate the message display to provide visual feedback from the keypad entry. However, the operator can leave the Message/Bit Control Modes if they desire.

Can I display a numeric value in Message Mode with a leading +/- sign?

Yes. An example ladder program that does this is in Chapter 4.

Can I display a blinking text message during an alarm condition?

Yes. An example ladder program that does this is in Chapter 4.

I plan to use the DV-1000 only with a DL105 or DL205. Are there low-cost *Direct*SOFT programming packages available just for these models?

Yes. The PC-PGM-105 and PC-PGM-205 programming packages are available, each at an attractive price for the DL105-only and DL205-only users.

What is the purpose of the the adjustment screw at the bottom of the DV-1000 housing?

Rotate this screw to adjust the contrast of the LCD segments on the display.

Specifications

Getting Started

<p>CPUs Supported</p> <p>DL130, DL230, DL240, DL250, DL350, DL430, DL440, and DL450 CPUs (see Section 2, Step 5 for specific communication port and cabling information)</p>	<p>Status Display</p> <p>Displays 16 or 32 point bit status for the following data types X, Y, GX, C, SP, T, CT, S</p> <p>Displays numeric values for V and P data types.</p>
<p>Cables and Connectors</p> <p>For DL105/DL205/DL350/DL450 – Part# DV-1000CBL 6.6ft. (2m) Cable with RJ12 connectors</p> <p>For DL430/DL440/DL450 – 2 methods: Part# D4-1000CBL, 6.0ft. (1.85m) Cable with an RJ12 and a 15-pin male D-sub connector (preferred), or Part # FA-CABKIT, Use the Universal Cable Kit to attach the DV-1000CBL to the CPU port</p>	<p>Change Preset Values</p> <p>DL130, DL230 and DL240 CPUs up to 16 user-titled values</p> <p>DL250, DL350 and all DL405 CPUs up to 32 user-titled values</p> <p>Also includes:</p> <p>1-99 values titled as TIMERxx</p> <p>1-99 values titled as COUNTERxx</p>
<p>Message Display</p> <p>One 4 x 16 character message display is available (message must be in CPU program)</p> <p>Displays text and embedded numeric values which update with the application program</p> <p>Displays PLC System Error Messages and Fault Message Outputs</p>	<p>Bit Control</p> <p>Assigns 8 contiguous points to the DV-1000 keypad</p> <p>Eight keys on the keypad operate as momentary normally open pushbutton switches</p> <p>Bit data types which can be assigned are: X, Y, GX, and C</p>
<p>Environmental</p> <p>Operating Temperature 32 to 122 °F (0 to 50 °C)</p> <p>Storage Temperature -4 to 158 °F (-20 to 70 °C)</p> <p>Humidity 30 to 95% (non-condensing)</p> <p>Environmental Air No corrosive gases</p> <p>Vibration MIL STD 810C 514.2</p> <p>Shock Resistance MIL STD 810C 516.2</p> <p>Noise Immunity NEMA ICS3-304</p> <p>Regulatory Agency Approvals UL® Listed</p> <p>Power 150 mA @ 5VDC obtained through PLC port</p> <p>Dimensions 5.12" W x 2.83" H x 1.03" D 130mm W x 72mm H x 26mm D</p> <p>Weight 5.8oz. (165.7 g)</p>	