

# INDEX

---



## A

- Accumulator/Stack Instructions, 5–53
  - Pointers, 5–57
- Analog Potentiometer, 3–19
- ASCII Conversion Table, G-2
- ASCII Instructions, 5–211
- Auto tuning error, 8–48
- Auto Tuning Procedure, 8–45
- Auxiliary Functions, A–2
  - Accessing, A–3
    - DirectSOFT*, A–3
    - Handheld Programmer, A–3

## B

- Basic EMC Installation Guidelines, I-4
- Binary Numbering System, H-2
- Bit Map, 3–57
  - Control Relay, 3–59
  - Remote I/O, 3–66
  - Stage Control/Status, 3–63
  - Timer and Counter Status, 3–65
  - X Input/Y Output, 3–57
- Bit Operations, 5–123
- Boolean Instructions, 5–5, 5–10
- Bumpless Transfer, 8–13, 8–27, 8–75, 8–76

## C

- Cascade Control, 8–64
  - Tuning, 8–66
- Clock and Calendar, 3–16
- Clock/Calendar Instructions, 5–175
- Comparative Boolean, 5–27
- Converge Jump instruction, 7–25
- Converge Stage instruction, 7–25
- Convergence Jump instruction, 7–20
- Convergence Stages, 7–19
- Counter Instructions, 5–46
- CPU Control Instructions, 5–177
- CPU Error Indicators, 9–10
  - PWR Indicator, 9–11
- CPU Features, 3–2
  - Mode Switch, 3–12
  - Program Storage Media, 3–9
  - Setting the CPU Network Address, 3–17
  - Setup, 3–6
  - Specifications, 3–4
  - Status Indicators, 3–12
- CPU Operation, 3–21
  - I/O Response Time, 3–27
  - Scan Time Considerations, 3–29

## D

- Data Type Mismatch, H-7
- DL205 Aliases, 3-52
- DL205 PLC Memory, E-2
- Drum Instruction (DRUM), 6-12
  - chart representation, 6-3
  - counter assignments, 6-6
  - drum control techniques, 6-10
  - event drum (EDRUM), 6-14
  - handheld programmer mnemonics, 6-16
  - masked event drum (MDRMD)(MDRMW), 6-19, 6-21
  - Operation, 6-8
  - powerup state, 6-9
  - self-resetting, 6-11
  - step transitions, 6-11
  - Terminology, 6-2

## E

- Environmental Specifications, 2-8
- Error Codes, 9-6, B-2
- Error Term Selection, 8-34
- European Union Directives, I-2
- Expanding DL205 I/O, 4-17
  - Ethernet Base Controller, 4-22
  - Ethernet Remote Master, 4-17
  - Serial Remote I/O Master/Slave, 4-26

## F

- Feedforward Control, 8-69
- Freeze Bias, 8-11, 8-35

## H

- Hardware Maintenance, 9-2
  - Communications, 9-13

- Diagnostics, 9-3

- Hexadecimal Numbering System, H-3
- Hysteresis, 8-13, 8-37, 8-38, 8-39

## I

- I/O Module Troubleshooting, 9-14
- I/O System Configurations, 4-2
- Immediate Instructions, 5-33
- Initial Stage (ISG), 7-24
- Installation, 2-10
  - Base Wiring, 2-13
  - Connecting DC I/O, 2-19
  - I/O Modules Position, 2-25
  - Surge Suppression, 2-21
- Instruction Execution Times, C-2
- Instruction Table, 5-2
- Instructions
  - stage, 7-23
  - stage programming, 7-2
- Intelligent Box (IBox) Table, 5-230
- Intelligent I/O Instructions, 5-191
- Interrupt Instructions, 5-187

## J

- Jump instruction, 7-7

## L

- Local Expansion I/O, 4-11
- Loop Mode, 8-28
- Loop Table Word Definitions, 8-20

## M

- Machine Startup, 9-18
- Memory Map, 3-37, 3-53
  - DL230, 3-53

- DL240, 3–54
  - DL250–1, 3–55
  - DL260, 3–56
  - Message Instructions, 5–197
  - Modbus RTU Instructions, 5–205
  - Mounting Guidelines, 2–5
    - Component Dimensions, 2–10
- ## N
- Network Connections, 4–32
    - Configuring Port 2, 4–32
  - Network Instructions, 5–193
  - Network Master Operation, 4–41
  - Network Modbus RTU Master Operation, 4–45
  - Network Slave Operation, 4–35
    - Modbus, 4–35
  - Noise Troubleshooting, 9–17
  - Non-volatile V-memory, E-3
  - Non-Sequence Protocol, 4–54
    - Configure the DL250-1 Port 2, 4–56
  - Not Jump, 7–24
  - Number Conversion Instructions, 5–130
- ## O
- Octal Numbering System, H–4
- ## P
- Parallel Processing, 7–19
  - PID
    - Analog Filter, 8–54
    - Direct*SOFT Filter Intelligent Box Instruction, 8–56
    - Error Flags, 8–18
    - Example Program, 8–71
    - Loop Modes, 8–28, 8–52, 8–53, 8–65
    - Parameters, 8–33
    - Setup Alarms, 8–36
    - Special Features, 8–52
  - PID Alarms, 8–36
    - Calculation Overflow/Underflow Error, 8–39
    - Hysteresis, 8–39
    - Mode/Alarm Bit Description, 8–23
    - Monitor Limit, 8–36
    - Programming Error, 8–39
    - PV Deviation, 8–37
    - Rate-of-Change, 8–38
  - PID Loop
    - Alarms, 8–13
    - Auto Tuning, 8–41
    - Configure, 8–26
    - Manual Tuning, 8–41, 8–42, 8–44, 8–47, 8–54
    - Mode, 8–28
    - Operating Modes, 8–14
    - Operation, 8–9
    - Program Setup, 8–71
    - Reverse Acting, 8–12, 8–14, 8–27, 8–41
    - Setup, 8–18
    - Terminology, 8–76
    - Troubleshooting Tips, 8–74
  - PID Mode 2 Word Description, 8–22
  - PID Mode Setting 1 Description, 8–21
  - PLC Numbering Systems, 3–35
  - Position Algorithm, 8–9, 8–15, 8–77
    - Position Form, 8–9
  - Power Budget, 4–7
  - Product Weight Table, F-2
  - Products and Data Types, H–9
  - Program Control Instructions, 5–179
- ## Q
- Quick Start, 1–10

## R

- Ramp/Soak Generator, 8–57
  - Controls, 8–60
  - DirectSOFT* Ramp/Soak Example, 8–62
  - Profile Monitoring, 8–61
  - Ramp/Soak Flag Bit Description, 8–23
  - Ramp/Soak Table Location, 8–24
  - Relay Ladder, 8–62
  - Table, 8–58
  - Table Flags, 8–60
  - Test Profile with PID View, 8–63
  - Testing, 8–61
- Rate-of-Change, 8–13, 8–14, 8–38
- Real Numbering System, H–5
- Reset Windup, 8–10, 8–35, 8–77

## S

- Safety Guidelines, 2–2
  - Emergency Stops, 2–3
- Shift Register Instruction, 5–52
- Signed vs. Unsigned Integers, H–8
- Special Relays, D–2
- Square Root, 8–14
- Stage instructions, 7–23
- Stage Programming, 7–2, 7–15
  - convergence, 7–19
  - emergency stop, 7–14
  - Example, 7–10
  - four steps to stage programming, 7–9
  - introduction, 7–2
  - jump instruction, 7–7
  - mutually exclusive transitions, 7–14
  - parallel processing concepts, 7–19
  - program organization, 7–15
  - questions and answers, 7–29
  - stage instruction characteristics, 7–6

- state transition diagrams, 7–3
- timer inside stage, 7–13

- State Diagram, 7–11
- Step Transitions, 6–4
- System Components, 1–4
  - DirectLOGIC™* Part Numbering System, 1–8
- System V-memory, 3–41
  - DL230, 3–41
  - DL240, 3–43
  - DL250–1, 3–46
  - DL260, 3–49

## T

- Table Instructions, 5–144
- Technical Support, 1–2
- Time-Proportioning Control, 8–67
  - On/Off Control Program, 8–68
- Timer Instructions, 5–41
- Transcendental Functions, 5–121
- Transfer Mode, 8–27

## U

- Using a Password, 3–18
- Using Battery Backup, 3–14

## V

- Velocity Algorithm, 8–9, 8–15, 8–77
- Velocity Form, 8–12