

# TABLE OF CONTENTS

---



<b>Chapter 1: Getting Started</b> .....	<b>1-1</b>
<b>Introduction</b> .....	<b>1-2</b>
<b>Conventions Used</b> .....	<b>1-3</b>
<b>Product Overview</b> .....	<b>1-4</b>
<b>Agency Approvals</b> .....	<b>1-4</b>
<b>Part Number Key</b> .....	<b>1-5</b>
<b>Product Label Example:</b> .....	<b>1-5</b>
<b>Serial Number and Date Code format:</b> .....	<b>1-5</b>
<b>Quick Start Steps</b> .....	<b>1-6</b>
Step 1 – Unpack and Inspect .....	1-6
Step 2 – Install Optional Hardware Accessories .....	1-7
Step 3 – Become Familiar with Available Communication Ports .....	1-8
Step 4 – Install <b>C-more 6"</b> Micro-Graphic Panel .....	1-9
Enclosure Clearances .....	1-10
Step 5 – Connect <b>C-more 6"</b> Micro-Graphic Panel to Computer .....	1-11
Step 6 – Provide Power to the <b>C-more 6"</b> Micro-Graphic Panel .....	1-12
Step 7 – Accessing the <b>C-more 6"</b> Micro-Graphic Panel Setup Screens .....	1-13
Step 8 – Choose <b>C-more 6"</b> Micro-Graphic Panel to PLC Protocol & Cables .....	1-14
Step 9 – Install the Programming Software and Develop a Project .....	1-15
Step 10 – Connect <b>C-more 6"</b> Micro-Graphic Panel to PLC .....	1-16

<b>Chapter 2: Specifications</b> .....	<b>2-1</b>
Available Models .....	2-2
Model Specifications .....	2-3
Panel Dimensions .....	2-5
Communications Ports .....	2-6
Chemical Compatibility .....	2-7
<b>Chapter 3: Accessories</b> .....	<b>3-1</b>
Accessories .....	3-2
C-more Micro-Graphic Programming Software .....	3-3
USB to RS-232 Programming Cable Assembly .....	3-6
20-Button Landscape (Horizontal) Keypad Bezel .....	3-8
21-Button Portrait (Vertical) Keypad Bezel .....	3-11
D-SUB 15-pin 90-degree Communication Port Adapter .....	3-14
D-SUB 15-pin to Terminal Block Adapter .....	3-14
Clear Screen Overlay .....	3-15
<b>Chapter 4: Installation and Wiring</b> .....	<b>4-1</b>
Safety Guidelines .....	4-2
Introduction .....	4-3
Panel Cutout Dimensions (all models) .....	4-4
Wiring Guidelines .....	4-5
<b>Chapter 5: System Setup Screens</b> .....	<b>5-1</b>
Introduction .....	5-2
Accessing the System Setup Screens .....	5-3
System Setup Screens Flowchart .....	5-4
Setup Menu .....	5-5
Information Menu .....	5-6

Memory .....	5-6
Protocol .....	5-6
Extensions .....	5-6
Versions .....	5-6
<b>Setting Menu .....</b>	<b>5-7</b>
LCD Contrast .....	5-7
Backlight, Model EA1-S6ML .....	5-8
Backlight, Model EA1-S6MLW .....	5-9
Beep .....	5-10
Calibration .....	5-11
Clear User Memory .....	5-12
Reset to Factory Default .....	5-12
Hourglass .....	5-13
Rotation .....	5-14
<b>Test Menu .....</b>	<b>5-15</b>
Serial Port1 - Loop Back Test .....	5-15
Serial Port2 - Loop Back Test .....	5-16
PLC Enquiry Test .....	5-17
Buzzer Test .....	5-17
Touch Panel Test .....	5-18
<b>Exit .....</b>	<b>5-18</b>
<b>Chapter 6: PLC Communications .....</b>	<b>6-1</b>
<b>Introduction .....</b>	<b>6-2</b>
Available PLC Protocols .....	6-3
<b>C-more 6" Micro-Graphic Communication Ports .....</b>	<b>6-4</b>
<b>DirectLOGIC PLCs Password Protection .....</b>	<b>6-6</b>
<b>PLC Compatibility and Connection Charts .....</b>	<b>6-6</b>
AutomationDirect CLICK PLC: .....	6-6
Direct LOGIC PLCs RS-422A/RS-485A: .....	6-7
Allen-Bradley: .....	6-7
GE, Mitsubishi, Omron, Modicon and Siemens: .....	6-7
How to use the PLC Compatibility and Connection Charts .....	6-8
Example: .....	6-8
<b>Cables from AutomationDirect .....</b>	<b>6-15</b>
<b>Cables from AutomationDirect – Wiring Diagrams .....</b>	<b>6-17</b>

User Constructed Cables – Wiring Diagrams .....	6–26
RS-422A/RS-485A Multi-Drop Wiring Diagram Examples .....	6–34
<b>Chapter 7: Maintenance .....</b>	<b>7–1</b>
Project Backup .....	7–2
Check Operating Environment .....	7–2
Check Operating Voltage .....	7–2
Check Transmit and Receive Indicators .....	7–3
Check Physical Conditions .....	7–3
Run Tests under the System Setup Screens .....	7–4
Check Settings under the System Setup Screens .....	7–5
Cleaning the Display Screen .....	7–5
Check Project Functionality .....	7–6
Checks from the <i>C-more</i> Micro-Graphic Programming Software .....	7–6
<b>Chapter 8: Troubleshooting .....</b>	<b>8–1</b>
<i>C-more</i> Micro-Graphic Panel does not Power up .....	8–2
Display is Blank .....	8–2
Display is Dim .....	8–3
No User Program .....	8–3
Lost Firmware – Red ‘Update Mode’ Screen Displayed .....	8–4
Updating Firmware .....	8–4
No Communications between Panel and PC (Personal Computer) .....	8–5
No Communications between Panel and PLC .....	8–7
Panel & PLC Error Codes .....	8–8
<i>C-more</i> Micro-Graphic Panel Runtime Errors .....	8–9
Electrical Noise Problems .....	8–10
<b>Chapter 9: Replacement Parts .....</b>	<b>9–1</b>
Replacement Parts Overview .....	9–2
Replacement Parts .....	9–2

Customizing the Function Keys Insert Label .....	9-3
<b>Appendix A: PLC Protocol Error Codes .....</b>	<b>A-1</b>
Introduction .....	A-2
<i>C-more</i> Micro-Graphic Panel Error Code Table .....	A-3
Modbus Protocols Error Code P499 Explanation .....	A-4
AutomationDirect CLICK .....	A-4
AutomationDirect <i>Direct</i> LOGIC - Modbus (Koyo) .....	A-4
Modicon Modbus RTU .....	A-4
Entivity Modbus RTU .....	A-4
<i>Direct</i> LOGIC Error Code P499 Explanation .....	A-5
<i>Direct</i> LOGIC – K-Sequence PLC Error Code Table .....	A-5
<i>Direct</i> LOGIC – <i>Direct</i> NET PLC Error Codes .....	A-5
Allen-Bradley Error Code P499 Explanation .....	A-6
Allen-Bradley DF1 Protocol – PLC Error Code Tables .....	A-7
Allen-Bradley DH485 Protocol – PLC Error Code Tables .....	A-9
GE Error Code P499 Explanation .....	A-11
GE SNPX Protocol – PLC Error Code Tables .....	A-12
Mitsubishi FX Protocol – PLC Error Codes .....	A-21
Mitsubishi Q / QnA and Q Series – PLC Error Codes .....	A-21
Omron Error Code P499 Explanation .....	A-23
Omron Host Link Protocol – PLC Error Code Table .....	A-24
Omron FINS Protocol – PLC Error Code Table .....	A-25
Siemens Error Code P499 Explanation .....	A-28
Siemens PPI Protocol – PLC Error Code Table .....	A-29
<b>Appendix B: <i>C-more</i> Micro-Graphic Panel Runtime Errors .....</b>	<b>B-1</b>
Introduction .....	B-2
Panel Errors .....	B-2
Boot Loader Errors .....	B-3

## Index