

# TABLE OF CONTENTS

---



<b>Chapter 1: Getting Started</b> .....	<b>1-1</b>
<b>Introduction</b> .....	<b>1-2</b>
<b>Conventions Used</b> .....	<b>1-3</b>
<b>Product Overview - EA1-T4CL</b> .....	<b>1-4</b>
<b>Product Overview - EA1-T6CL</b> .....	<b>1-5</b>
<b>Agency Approvals</b> .....	<b>1-5</b>
<b>Part Number Key</b> .....	<b>1-6</b>
<b>Product Label Examples</b> .....	<b>1-6</b>
<b>Serial Number and Date Code format</b> .....	<b>1-6</b>
<b>Quick Start Steps</b> .....	<b>1-7</b>
Step 1 – Unpack and Inspect .....	1-7
Step 2 – Install Optional Hardware Accessories .....	1-8
Step 3 – Become Familiar with Available Communication Ports .....	1-9
Step 4 – Install <b>C-more</b> Color Micro-Graphic Panel .....	1-10
Enclosure Clearances .....	1-12
Step 5 – Install the Programming Software and Develop a Project .....	1-13
Step 6 – Connect <b>C-more</b> Color Micro-Graphic Panel to Computer .....	1-14
Step 7 – Providing Power to the <b>C-more</b> Color Micro-Graphic Panel .....	1-15
Step 8 – Accessing the <b>C-more</b> Color Micro-Graphic Panel Setup Screens .....	1-16
Step 9 – Choose <b>C-more</b> Color Micro-Graphic Panel to PLC Protocol & Cables .....	1-17
Step 10 – Connect <b>C-more</b> Color Micro-Graphic Panel to PLC .....	1-18

<b>Chapter 2: Specifications</b> .....	<b>2-1</b>
Available Models .....	2-2
EA1-T4CL Specifications .....	2-3
EA1-T6CL Specifications .....	2-5
EA1-T4CL Panel Dimensions .....	2-7
EA1-T6CL Panel Dimensions .....	2-8
Communications Port .....	2-9
Chemical Compatibility .....	2-10
<b>Chapter 3: Accessories</b> .....	<b>3-1</b>
Accessories .....	3-2
<i>C-more</i> Micro-Graphic Programming Software .....	3-3
20-Button Landscape (Horizontal) Keypad Bezel for 6-inch Panels .....	3-6
21-Button Portrait (Vertical) Keypad Bezel for 6-inch Panels .....	3-9
D-SUB 15-pin 90-degree Communication Port Adapter .....	3-12
D-SUB 15-pin to Terminal Block Adapter .....	3-12
Clear Screen Overlay .....	3-13
<b>Chapter 4: Installation and Wiring</b> .....	<b>4-1</b>
Safety Guidelines .....	4-2
Introduction .....	4-3
Panel Cutout Dimensions .....	4-4
Wiring Guidelines .....	4-5
<b>Chapter 5: System Setup Screens</b> .....	<b>5-1</b>
Introduction .....	5-2
Accessing the System Setup Screens .....	5-3
System Setup Screens Flowchart .....	5-4
Setup Menu .....	5-5

<b>Information Menu</b> .....	<b>5-6</b>
<b>Setting Menu</b> .....	<b>5-7</b>
Brightness .....	5-7
Touch/Key Beep .....	5-8
Calibration .....	5-9
Clear User Memory .....	5-10
Reset to Factory Default .....	5-10
Hourglass .....	5-11
Rotation .....	5-12
<b>Test Menu</b> .....	<b>5-13</b>
Serial Port2 - Loop Back Test .....	5-14
PLC Enquiry Test .....	5-15
Buzzer Test .....	5-15
Touch Panel Test .....	5-16
Display Test .....	5-16
<b>Exit</b> .....	<b>5-17</b>
<b>Chapter 6: PLC Communications</b> .....	<b>6-1</b>
<b>Introduction</b> .....	<b>6-2</b>
<b>C-more Micro-Graphic Communication Ports</b> .....	<b>6-4</b>
<b>DirectLOGIC PLCs Password Protection</b> .....	<b>6-5</b>
<b>Compatibility and Connection Charts</b> .....	<b>6-5</b>
AutomationDirect Controllers .....	6-6
RS-422A/RS-485A Communications .....	6-6
Allen-Bradley .....	6-6
GE, Mitsubishi, Omron, Modicon and Siemens .....	6-6
How to use the Compatibility and Connection Charts .....	6-7
<b>Cables from AutomationDirect</b> .....	<b>6-14</b>
<b>Cables from AutomationDirect – Wiring Diagrams</b> .....	<b>6-16</b>
<b>User Constructed Cables – Wiring Diagrams</b> .....	<b>6-24</b>
<b>RS-422A Multi-Drop Wiring Diagram Example</b> .....	<b>6-36</b>
<b>RS-485A Multi-Drop Wiring Diagram Example</b> .....	<b>6-38</b>

<b>Chapter 7: Maintenance</b> .....	<b>7-1</b>
Project Backup .....	7-2
Check Operating Environment .....	7-2
Check Operating Voltage .....	7-2
Check Transmit and Receive Indicators .....	7-3
Check Physical Conditions .....	7-3
Run Tests under the System Setup Screens .....	7-4
Check Settings under the System Setup Screens .....	7-5
Cleaning the Display Screen .....	7-5
Check Project Functionality .....	7-6
Checks from the <i>C-more</i> Micro-Graphic Programming Software .....	7-6
<b>Chapter 8: Troubleshooting</b> .....	<b>8-1</b>
<i>C-more</i> Micro-Graphic Panel does not Power up .....	8-2
Display is Blank .....	8-2
Display is Dim .....	8-3
No User Program .....	8-3
Lost Firmware – Red ‘Update Mode’ Screen Displayed .....	8-4
Updating Firmware .....	8-4
No Communications between Panel and PC (Personal Computer) .....	8-5
No Communications between Panel and PLC .....	8-7
Panel & PLC Error Codes .....	8-8
<i>C-more</i> Micro-Graphic Panel Runtime Errors .....	8-9
Reset to Factory Default .....	8-10
Electrical Noise Problems .....	8-10
<b>Chapter 9: Replacement Parts</b> .....	<b>9-1</b>
Replacement Parts Overview .....	9-2
Replacement Parts .....	9-2
Customizing the Function Keys Insert Label .....	9-3

<b>Appendix A: PLC Protocol Error Codes</b> .....	<b>A-1</b>
Introduction .....	A-2
<i>C-more</i> Micro-Graphic Panel Error Code Table .....	A-3
Modbus Protocols Error Code P499 Explanation .....	A-4
AutomationDirect CLICK .....	A-4
AutomationDirect <i>Direct</i> LOGIC - Modbus (Koyo) .....	A-4
Modicon Modbus RTU .....	A-4
Entivity Modbus RTU .....	A-4
Productivity3000 Error Code P499 .....	A-5
DirectLOGIC Error Code P499 Explanation .....	A-6
DirectLOGIC – K-Sequence PLC Error Code Table .....	A-6
DirectLOGIC – DirectNET PLC Error Codes .....	A-6
Allen-Bradley Error Code P499 Explanation .....	A-7
Allen-Bradley DF1 Protocol – PLC Error Code Tables .....	A-8
Allen-Bradley DH485 Protocol – PLC Error Code Tables .....	A-10
GE Error Code P499 Explanation .....	A-12
GE SNPX Protocol – PLC Error Code Tables .....	A-13
Mitsubishi FX Protocol – PLC Error Codes .....	A-22
Mitsubishi Q / QnA Series – PLC Error Codes .....	A-22
Omron Error Code P499 Explanation .....	A-24
Omron Host Link Protocol – PLC Error Code Table .....	A-25
Omron FINS Protocol – PLC Error Code Table .....	A-26
Siemens Error Code P499 Explanation .....	A-29
Siemens PPI Protocol – PLC Error Code Table .....	A-30
<b>Appendix B: <i>C-more</i> Micro-Graphic Panel Runtime Errors</b> .....	<b>B-1</b>
Introduction .....	B-2
Runtime Errors .....	B-2

## Index