

# INDEX

---



## A

- Accessories, 3–2
  - EA-4-COV2, 3–2
  - EA-6-COV2, 3–2
  - EA-MG-PGMSW, 3–2
  - EA-MG6-BZ2, 3–2, 3–7
  - EA-MG6-BZ2P, 3–2, 3–9, 3–10
  - USB-CBL-AB6, 3–2
- Agency Approvals, 1–5
- Available Models, 2–2

## C

- C-more Micro-Graphic Panel Runtime Errors, 8–9
- C-more Micro-Graphic Programming Software, 3–3
- Cables, 6–14
  - Cables from AutomationDirect, 6–14
    - Wiring Diagrams, 6–16, 6–17, 6–18, 6–19, 6–20, 6–21, 6–22, 6–23
  - User Constructed Cables, 6–24
    - Wiring Diagrams, 6–24, 6–25, 6–26, 6–27, 6–28, 6–29, 6–30, 6–31, 6–32, 6–33
- Chemical Compatibility, 2–10
- Clear Screen Overlay, 3–13
  - Dimensions, 3–13
  - Installation, 3–13
- Communication Port Adapters, 3–12
  - EA-ADPTR-4, 3–12
  - EA-COMCON-3, 3–12
- Communications Ports, 2–9
  - EA1-T4CL, 2–9
  - EA1-T6CL, 2–9

Conventions Used, 1–3  
    exclamation mark, 1–3  
    notepad, 1–3

## E

Enclosure Clearances, 1–12  
Enclosure Thickness, 2–8

## F

Function Keys Insert Label, 9–3  
    Customizing, 9–3

## I

Installation, 4–3  
Introduction, 1–2

## K

Keypad Bezel, 20-Button Landscape, 3–6  
    Assembly, 3–8  
    Cutout, 3–6  
    Dimensions, 3–6  
    Specifications, 3–7  
Keypad Bezel, 21-Button Portrait, 3–9  
    Assembly, 3–11  
    Cutout, 3–9  
    Specifications, 3–10

## L

Lost Firmware – Red ‘Update Mode’ Screen Displayed, 8–4

## M

Maintenance, 7–2  
    Check Operating Environment, 7–2  
    Check Operating Voltage, 7–2  
    Check Physical Conditions, 7–3

- Check Project Functionality, 7–6
  - Check Settings under the System Setup Screens, 7–5
  - Check Transmit and Receive Indicators, 7–3
  - Checks from the C-more Micro-Graphic Programming Software, 7–6
  - Cleaning the Display Screen, 7–5
  - Project Backup, 7–2
  - Run Tests under the System Setup Screens, 7–4
- Mounting Clip Screw Torque, 2–8
- Mounting Clips, 4–3

## P

- Panel Cutout Dimensions (all models), 4–4
- Panel Dimensions, 2–7
  - EA1-T4CL, 2–7
  - EA1-T6CL, 2–8
- Panel Errors, 8–9
- Panel Objects, 3–4
  - Adjust Display Contrast, 3–5
  - Analog Meter, 3–4
  - Bar Meter, 3–4
  - Bitmap Button, 3–4
  - Circle, 3–4
  - Dynamic Bitmap, 3–5
  - Dynamic Text, 3–5
  - Frame, 3–4
  - Function, 3–5
  - Graphic Indicator Light, 3–4
  - Increment/Decrement Value, 3–4
  - Indicator Button, 3–4
  - Indicator Light, 3–4
  - Line, 3–4
  - Line Graph, 3–4
  - Lookup Text, 3–5
  - Multi-State Bitmap, 3–5
  - Numeric Display, 3–4
  - Numeric Entry, 3–4
  - Pushbutton, 3–4

- Radio Button, 3–4
- Real Time Graph, 3–4
- Recipe, 3–5
- Rectangle, 3–4
- Screen Change Pushbutton, 3–5
- Screen Selector, 3–5
- Scroll Text, 3–5
- Static Bitmap, 3–4
- Static Text, 3–5
- Switch, 3–4
- Tri-State Switch, 3–4
- Part Number Key, 1–6
  - Bezel Part Number Key, 1–6
  - Panel Part Number Key, 1–6
- Password Protection - DirectLOGIC PLC's, 6–5
- PC Requirements, 3–3
- PLC Communications
  - Communication Ports, 6–4
    - EA1-T4CL, 6–4
    - EA1-T6CL, 6–4
  - Introduction, 6–2, 6–3
- PLC Compatibility and Connection Charts, 6–5
  - Allen-Bradley PLCs, 6–12
  - AutomationDirect CLICK PLC, 6–8
  - DirectLOGIC DL05, DL06, D0-DCM Module & DL105 PLCs, 6–8
  - DirectLOGIC DL205 PLCs, D2-DCM Module and WINPLC, 6–9
  - DirectLOGIC DL305 PLCs and D3-DCM Module, 6–10
  - DirectLOGIC DL405 PLCs and D4-DCM Module, 6–11
  - GE, Mitsubishi, Omron, Modicon and Siemens PLCs, 6–13
  - Instructions for using, 6–7
  - ProductivitySeries, 6–8
- Product Label Example, 1–6
- Product Overview, 1–4
  - EA1-T4CL, 1–4
  - EA1-T6CL, 1–5

## Q

Quick Start Steps, 1–7

- Step 1 – Unpack and Inspect, 1–7
- Step 10 – Connect C-more 6” Micro-Graphic Panel to PLC, 1–18
- Step 2 – Install Optional Hardware Accessories, 1–8
- Step 3 – Become Familiar with Available Communication Ports, 1–9
- Step 4 – Install C-more Micro-Graphic Panel, 1–10
- Step 5 – Install the Programming Software and Develop a Project, 1–13
- Step 6 – Connect C-more 6” Micro-Graphic Panel to Computer, 1–14
- Step 7 – Providing Power to the C-more 6” Micro-Graphic Panel, 1–15
- Step 8 – Accessing the C-more 6” Micro-Graphic Panel Setup Screens, 1–16
- Step 9 – Choose C-more 6” Micro-Graphic Panel to PLC Protocol & Cables, 1–17

## R

Replacement Parts

- 4” Function Keys Label Inserts EA-MG4-FKL, 9–2
- 6” Function Keys Label Inserts EA-MG6-S6ML-FKL, 9–2
- Clear Screen Overlay EA-6-COV2, 9–2
- DC Power Connector Part No. EA-MG-DC-CON, 9–2
- Keypad Bezel 1 Gasket Part No. EA-MG-BZ1-GSK, 9–2
- Keypad Bezel 2 Mounting Clips Part No. EA-MG-BZ2-BRK, 9–2
- Panel Gasket Part No. EA-MG-S3ML-GSK, 9–2

Replacement Parts at a Glance, 9–2

Replacement Parts Overview, 9–2

RS-422A/RS-485A Multi-Drop Wiring Diagram Examples, 6–36, 6–37, 6–38, 6–39

## S

Safety Guidelines, 4–2

Serial Number and Date Code format, 1–6

Setting Menu, 5–7

- Brightness, 5–7
- Calibration, 5–9
- Clear User Memory, 5–10
- Hourglass, 5–11
- Reset to Factory Default, 5–10
- Rotation, 5–12

- Touch/Key Beep, 5–8
- Setup Menu, 5–5
  - Information Menu, 5–6
    - Extensions, 5–6
    - Memory, 5–6
    - Protocol, 5–6
    - Versions, 5–6
- Specifications, 2–3
  - EA1-T4CL, 2–3
  - EA1-T6CL, 2–5
- System Setup Screens, 5–2
  - Accessing, 5–3
  - Exit, 5–17
  - Flowchart, 5–4
  - Information, 5–2
  - Introduction, 5–2
  - Setting, 5–2
  - Test Menu, 5–2

## T

- Technical Support, 1–2
- Test Menu, 5–13
  - Buzzer Test, 5–15
  - Display Test, 5–16
  - PLC Enquiry Test, 5–15
  - Serial Port2 - Loop Back Test, 5–14
  - Touch Panel Test, 5–16
- Troubleshooting, 8–2
  - C-more Micro-Graphic Panel does not Power up, 8–2
    - Powered from 12-24 VDC, 8–2
    - Powered from 5 VDC, 8–2
  - Display is Blank, 8–2
  - Display is Dim, 8–3
  - Electrical Noise Problems, 8–10
  - No Communications between Panel and PC, 8–5
  - No Communications between Panel and PLC, 8–7
  - No User Program, 8–3

---

Panel & PLC Error Codes, 8–8

    Panel Communications Error Code Example, 8–8

Reset to Factory Default, 8–10

## U

Updating Firmware, 8–4

USB to RS-232 Programming Cable Assembly, 1–14

## W

Wiring Guidelines, 4–5