

TABLE OF CONTENTS



Chapter 1: Getting Started	1-1
Introduction	1-2
Conventions Used	1-3
Mounting Clips – New Style	1-3
Product Overview	1-4
Part Number Key – Touch Panels	1-5
EZTouch Conversion and Mounting	1-6
EZTouch Touch Panel Cross Reference to C-more	1-7
Quick Start Steps	1-9
Step 1 – Unpack and Inspect	1-9
Step 2 – Assemble Temporary Support Stand	1-10
Step 3 – Install Optional Hardware Accessories	1-11
Step 4 – Become Familiar with Available Communication Ports	1-12
Step 5 – Install the Programming Software and Develop a Project	1-13
Step 6 – Connect Touch Panel to Computer	1-14
Step 7 – Provide Power to the Touch Panel	1-15
Step 8 – Access the Touch Panel Setup Screens	1-16
Step 9 – Choose Touch Panel to PLC Protocol & Cables	1-17
Step 10 – Connect Touch Panel to PLC	1-20
Chapter 2: Specifications	2-1
Available Models	2-2
Model Specifications	2-3
6" Base Feature Models	2-4
6" Full Feature Models	2-5
8" & 10" Full Feature Models	2-6

12" & 15" Full Feature Models	2-7
EA7-S6M-R, S6C-R, S6M, S6C & T6C (Dimensions and Ports & Memory Exp.)	2-8
EA7-T8C (Dimensions and Ports & Memory Exp.)	2-10
EA7-T10C (Dimensions and Ports & Memory Exp.)	2-12
EA7-T12C (Dimensions and Ports & Memory Exp.)	2-14
EA7-T15C (Dimensions and Ports & Memory Exp.)	2-16
Mounting Clearances	2-18
Communication Ports	2-19
Memory Organization	2-21
Handling External Memory Devices	2-22
Power Loss Detection and Power Retention Period	2-23
Data Logging Function and Logging Media	2-23
Data Logging – Memory Device Full	2-23
Chemical Compatibility	2-24
Chapter 3: Accessories	3-1
Accessories	3-2
Accessories Overview	3-3
Accessories at a Glance	3-4
AC/DC Power Adapter – EA-AC	3-5
Expansion Assembly – EA-EXP-OPT	3-9
CF Card Interface Module – EA-CF-IF	3-12
128 MB CompactFlash Memory – EA-FLASH-128MB	3-14
6" Adapter Plate – EA-6-ADPTR	3-17
D-SUB 15-pin 90 degree Comm Port Adapter – EA-ADPTR-4	3-19
D-SUB 15-pin to Terminal Block Adapter – EA-COMCON-3	3-20
Non-glare Screen Covers – EA-xx-COV2, xx = 6, 8, 10, 12 or 15	3-22
USB Pen Drive – SDCZ4-2048-A10	3-23

Chapter 4: Installation and Wiring	4-1
Safety Guidelines	4-2
Introduction	4-3
EA7-S6M-R, S6C-R, S6M, S6C & T6C – Cutout Dimensions	4-4
EA7-T8C – Cutout Dimensions	4-5
EA7-T10C – Cutout Dimensions	4-6
EA7-T12C – Cutout Dimensions	4-7
EA7-T15C – Cutout Dimensions	4-8
6" Adapter Plate – EA-6-ADPTR	4-9
Mounting Clearances	4-11
Wiring Guidelines	4-12
Agency Approvals	4-12
Marine Use	4-12
Providing Power to the Touch Panel	4-13
DC Wiring Diagram	4-13
AC Wiring Diagram (EA-AC)	4-14
Chapter 5: System Setup Screens	5-1
Introduction	5-2
Chapter Organization	5-3
Accessing the System Setup Screens (no project loaded)	5-4
Accessing the System Setup Screens (with project loaded)	5-5
System Setup Screens – Enable Password in Software	5-7
System Setup Screens Flowchart	5-13
Main Menu	5-14
Information Menu	5-15
Setting Menu	5-19
Test Menu	5-25
Memory Menu	5-35

Chapter 6: PLC Communications	6-1
Introduction	6-2
<i>Direct</i> LOGIC PLCs Password Protection	6-2
PLC Compatibility Table	6-3
PLC Communication Cables & Wiring Diagrams	6-5
AutomationDirect PLCs RS-232C Serial	6-7
<i>Direct</i> LOGIC PLCs RS-422A/RS-485A	6-10
<i>Direct</i> LOGIC Universal Isolated Network Adapter, p/n FA-ISOCAN	6-14
<i>Direct</i> LOGIC Universal Converter, p/n F2-UNICON	6-15
RS-422A/RS-485A Multi-Drop Wiring Diagram Examples	6-16
Allen-Bradley	6-20
GE	6-24
Mitsubishi	6-25
Omron	6-26
Modicon	6-27
Siemens	6-28
Chapter 7: Maintenance	7-1
Project Backup	7-2
Check Operating Environment	7-2
Check Operating Voltage	7-2
Check Status Indicators	7-2
Check Physical Conditions	7-3
Run Tests under System Setup Screens	7-3
Check Memory Usage via System Setup Screens	7-4
Check/Adjust Display Brightness or Contrast	7-4
Check Error Log via System Setup Screens	7-4
Adjust Touch Panel via System Setup Screens	7-4
Replace Battery Periodically	7-5
Cleaning the Display Screen	7-5
Check Project Functionality	7-5
Checks from <i>C-more</i> Programming Software	7-6

Chapter 8: Troubleshooting	8-1
Touch Panel does not Power up	8-2
Display is Blank	8-3
Display is Dim	8-4
No User Program	8-5
No Communications between Panel and PC	8-6
No Communications between Panel and PLC	8-10
IP Address in System Setup Screens displays 0.0.0.0	8-13
PLC Protocol Error Codes	8-14
Touch Panel Runtime Errors	8-15
Panel Constantly Displays “Initializing” when Powering up	8-16
Data not Logging Problems	8-16
Loss of Date/Time or Retentive Data	8-16
Electrical Noise Problems	8-17
Chapter 9: Replacement Parts	9-1
Replacement Parts Overview	9-2
Replacement Parts at a Glance	9-2
Battery Replacement & Installation Instructions	9-3
6” Panel Mounting Clip Replacements & Installation	9-5
8-15” Panel Mounting Clip Replacements & Installation	9-6
DC Panel Power Connector Replacement	9-7
AC Power Adapter Connector Replacement	9-7
8-15” Panel Backlight Bulb Replacements & Installation	9-8
6-15” Panel Gasket Replacement & Installation	9-11
8-15” Panel Bezel Replacement & Installation	9-12
6” Adapter Plate Gasket Replacement & Installation	9-14

Appendix A: PLC Protocol Error Codes	A-1
Introduction	A-2
C-more Touch Panel Error Code Table	A-3
DirectLOGIC – Panel Error Code PLC-499 Explanation	A-5
DirectLOGIC K-Sequence Protocol – PLC Error Code Table	A-5
DirectLOGIC DirectNET Protocol – PLC Error Codes	A-5
Modbus Protocols Error Code P499 Explanation	A-6
AutomationDirect CLICK	A-6
AutomationDirect DirectLOGIC - Modbus (Koyo)	A-6
Modicon Modbus RTU	A-6
Entivity Modbus RTU	A-6
DirectLOGIC ECOM Protocol – PLC Error Codes	A-6
Allen-Bradley – Panel Error Code PLC-499 Explanation	A-7
Allen-Bradley DF1 Protocol – PLC Error Code Tables	A-8
Allen-Bradley DH485 Protocol – PLC Error Code Tables	A-10
Allen-Bradley EtherNet/IP Protocol–Panel Error Code PLC-496, 497 and 498 Explanation	A-12
Allen-Bradley – EtherNet/IP Protocol – PLC Error Code TablesControlLogix, CompactLogix, & FlexLogix	A-13
Allen-Bradley – EtherNet/IP Protocol – PLC Error Code TablesMicroLogix 1100 & SLC 5/05, both via native Etherent port;MicroLogix 1000, 1100, 1200, 1500, SLC Generic EtherNet IP Protocol – PLC Error Codes	A-22
GE 90-30 – Panel Error Code PLC-499 Explanation	A-23
GE 90-30 SNPX Protocol – PLC Error Code Tables	A-24
Mitsubishi FX Protocol – PLC Error Codes	A-33
Omron – Panel Error Code PLC-499 Explanation	A-33
Omron Host Link Protocol – PLC Error Code Table	A-34
Omron FINS Protocol – PLC Error Code Table	A-35
Omron FINS Protocol – PLC Error Code Table (cont’d)	A-37
Omron – Panel Error Code P495 Explanation	A-38
Omron CS/CJ FINS Ethernet Protocol – PLC Error Code Table	A-39

Siemens – Panel Error Code P499 Explanation	A-40
Siemens PPI Protocol – PLC Error Code Table	A-41
Siemens ISO over TCP Protocol – PLC Error Code Table	A-42
Appendix B: Touch Panel Runtime Errors	B-1
Introduction	B-2
Runtime Errors	B-3
Appendix C: Mounting Clips Prior April 2006	C-1
Introduction	C-2
EA7-S6M-R, S6C-R, S6M, S6C & T6C	C-3
EA7-T8C	C-5
EA7-T10C	C-7
EA7-T12C	C-9
EA7-T15C	C-11
Index	