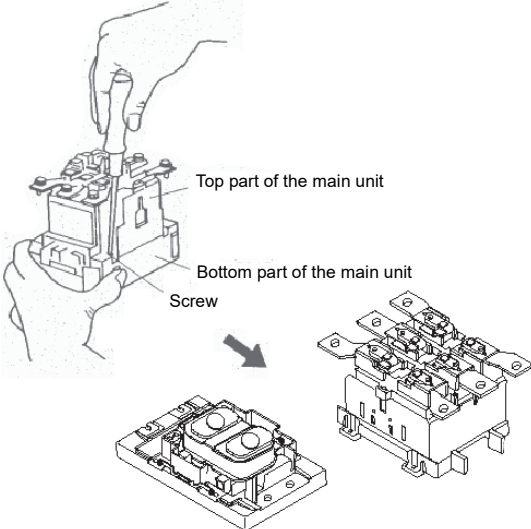


Model	Replacement method
SC-N8 - N12 type	<p>(1) Loosen the 4 screws fixing the top and bottom parts of the main unit to separate the top part from the bottom part.</p> <p>(2) The fixation magnet part and the electronic unit are connected with lead wire and integrated. Therefore, replace the fixation magnet part and the electronic unit as a set to replace the coil.</p> <p>(3) After replacement, assemble it by reversing the procedure above.</p> 
SC-N14,N 16 type	<p>(1) Loosen the 3 screws like A to remove the electronic circuit unit and the insulation cover.</p> <p>(2) Then, loosen the 4 screws like B to remove the mounting plate on the power supply side and remove the coil and electronic unit connection and coil terminal (noise filter unit) wiring.</p> 