GS DURAPULSE AC DRIVES DYNAMIC BRAKING USER MANUAL TABLE OF CONTENTS



U	<u>ISER MANUAL CONTENTS</u>
	WARNINGS AND TRADEMARKS
	DURAPULSE DYNAMIC BRAKING USER MANUAL REVISION HISTORY
	CHAPTER 1: BRAKING OVERVIEW AND COMPONENT SPECIFICATIONS
	Manual Overview
	Overview of this Publication
	Who Should Read This Manual
	Supplemental Publications
	Technical Support
	Special Symbols
	Introduction
	Dynamic Braking
	Dynamic Braking Units
	Braking Duty Cycle
	Overload Relay
	Overload Relay Purpose
	Overload Relay Selection Procedure and Example
	Dynamic Braking Component Selection for DURApulse AC Drives
	Braking Component Selection for GS3 DURApulse Drives
	Braking Component Selection for GS4 DURApulse Drives
	Dynamic Braking Unit Specifications
	Lamp/LED Indicators for Dynamic Braking Units
	Dynamic Braking Resistors Specifications
	CHAPTER 2: Braking Component Installation and Dimensions
	Installation
	General Installation Guidelines
	Minimum Clearances and Air Flow
	Braking Unit Dimensions
	Brakina Resistor Dimensions

CHAPTER 3: BRAKING COMPONENT CONFIGURATION AND WIRING
Operational Electrical Information
Overload Relay
Dynamic Braking Unit Setup
DBU Jumper and Wiring Terminal Locations
DBU Voltage Jumper Settings
DBU Master/Slave Jumper Settings
Dynamic Braking Wiring
Wiring Warnings and Notes
Maximum Wiring Distances
Dynamic Braking Unit Wiring Terminals
Basic Braking Wiring Diagram
Specific Braking Wiring Diagrams