



# TABLE OF CONTENTS

---

## Chapter 1: Introduction

Purpose of this Manual .....	.1-2
Other Reference Materials .....	.1-2
Who Should Read this Manual .....	.1-2
Technical Support .....	.1-2
<b>Conventions Used .....</b>	<b>.1-3</b>
Key Topics for Each Chapter .....	.1-3
<b>Ethernet Remote Master (ERM) .....</b>	<b>.1-4</b>
Ethernet Remote Slaves .....	.1-4
Configuring the Ethernet Remote I/O Network .....	.1-5
Running the Ethernet Remote I/O Network .....	.1-5
ERM / ECOM Systems .....	.1-6
<b>How the PLC CPU Updates Remote I/O Points .....</b>	<b>.1-7</b>
<b>Frequently Asked Questions .....</b>	<b>.1-8</b>

## Chapter 2: ERM / Slave Network Addressing Modes

<b>ERM / Remote Slave Network Identifiers .....</b>	<b>.2-2</b>
ERM / Slave Configuration Tools .....	.2-2
ERM / Slave Module ID .....	.2-3
IP Address .....	.2-4
Ethernet Address .....	.2-4
Using Multiple Network Identifiers .....	.2-4

## Chapter 3: Installation and Network Layouts

<b>Inserting the ERM Module in the I/O Base .....</b>	<b>.3-2</b>
DL205/Do-more Slot Choices .....	.3-2
H2-ERM (100, -F) Module Installation .....	.3-2

## Table of Contents

---

DL405 Slot Choices .....	3-3
H4-ERM (100, -F) Module Installation .....	3-4
Which Modules are Supported in the Ethernet Slaves .....	3-4
<b>ERM Network Layouts .....</b>	<b>3-5</b>
Configuring the Ethernet Remote I/O Network .....	3-5
Running the Ethernet Remote I/O Network .....	3-5
ERM / ECOM Systems .....	3-6
<b>Network Cabling .....</b>	<b>3-7</b>
ERM Supports Three Standards .....	3-7
10/100BaseT Networks .....	3-7
10/100BaseT .....	3-8
UTP Cable .....	3-8
10BaseFL .....	3-8
Fiber Optic Cable .....	3-8
Fiber Optic Module ST Connector .....	3-8
Maximum Cable Length .....	3-9

## Chapter 4: Configuring the ERM and Slave Modules with ERM Workbench

<b>ERM Workbench Software .....</b>	<b>4-3</b>
Launching ERM Workbench .....	4-3
Adding IPX Network Protocol Support (Windows XP/32 bit or earlier) .....	4-4
<b>Running ERM Workbench PLC Wizard .....</b>	<b>4-5</b>
Step 1: Choosing the ERM Network Configuration .....	4-5
Step 2: Connecting the ERM Workbench PC to the ERM Network .....	4-5
Establishing Communication with the ERM .....	4-6
Step 3: Select and Configure the Slaves .....	4-6
Step 4: Map I/O to PLC Memory .....	4-7
Step 5: Download Configuration to ERM .....	4-7
ERM Workbench Main Configuration Window .....	4-8
<b>Running ERM Workbench .....</b>	<b>4-9</b>
Connecting the ERM Workbench PC to the Network Modules .....	4-9
<b>Configure the ERM .....</b>	<b>4-10</b>
Configuring the ERM .....	4-10

Selecting PLC as Interface .....	.4-10
PLC Map .....	.4-11
Advanced ERM Configuration .....	.4-11
<b>Select the Slaves .....</b>	<b>.4-12</b>
Selecting the Slaves .....	.4-12
<b>Configure the Slaves .....</b>	<b>.4-13</b>
Setting the Slave's Parameters .....	.4-13
<b>Write Configuration to ERM .....</b>	<b>.4-15</b>
<b>Analog I/O Data Registers .....</b>	<b>.4-16</b>
Analog I/O Data Registers .....	.4-16
<b>Reserved PLC Memory for ERM .....</b>	<b>.4-17</b>
ERM Status Word / Reset Slave Code .....	.4-17
<b>Saving ERM Configuration to Disk .....</b>	<b>.4-18</b>
<b>Clear ERM Configuration .....</b>	<b>.4-18</b>
<b>Printing/Exporting the ERM Configuration .....</b>	<b>.4-18</b>

## Chapter 5: Using NetEdit

<b>Using NetEdit .....</b>	<b>.5-2</b>
The NetEdit Window .....	.5-2
Ethernet Communication Protocol .....	.5-2
Adding IPX Network Protocol Support (Windows XP/32 bit or earlier) .....	.5-3
Ethernet Address .....	.5-3
Module ID / IP Address / Name / Description .....	.5-4
Module Information .....	.5-4
<b>Using NetEdit to Configure the EBC Base .....</b>	<b>.5-5</b>
EBC Settings Tab .....	.5-5
General Settings .....	.5-6
Serial Port .....	.5-6
I/O Base .....	.5-6
Show Base Contents .....	.5-7
Update Firmware .....	.5-8
Update Booter .....	.5-8
Restore Factory Defaults .....	.5-8

## Table of Contents

---

### Chapter 6: Maintenance and Troubleshooting

<b>Isolating a Communication Problem</b> .....	.6-2
Diagnostic Tools and Techniques .....	.6-2
<b>Troubleshooting Chart</b> .....	.6-2
<b>ERM Module Diagnostic LEDs</b> .....	.6-4
ERM LEDs .....	.6-4
Link Good Indicator .....	.6-4
ACT Indicator .....	.6-4
Error Indicator .....	.6-4
<b>Slave Module Diagnostic LEDs</b> .....	.6-4
EBC LEDs .....	.6-4
Error Indicator .....	.6-4
<b>Using ERM Workbench for Troubleshooting</b> .....	.6-5
Read from ERM .....	.6-5
Reserved PLC Memory for ERM .....	.6-6
Detailed ERM Statistics .....	.6-6
Select Slaves Window .....	.6-7
<b>Using NetEdit for Troubleshooting</b> .....	.6-8
Select a Module .....	.6-8
Module Information .....	.6-8
Change Protocol .....	.6-9
Replacing the ERM / Slave Module .....	.6-9
<b>Diagnosing Network Cable Problems</b> .....	.6-10

### Appendix A: General Specifications

<b>General Specifications</b> .....	.A-2
Specifications .....	.A-2
<b>Ethernet Standards</b> .....	.A-4

### Appendix B: ERM / Slave Diagnostics and Error Codes

<b>ERM Diagnostics</b> .....	.B-2
ERM Status Word / Resetting the Slave .....	.B-2

DirectLOGIC Example .....	.B-3
Do-more Example .....	.B-3
<b>ERM Status Word Error Codes .....</b>	<b>.B-4</b>
<b>Reading ERM Statistics .....</b>	<b>.B-5</b>
Reading ERM Statistics using Ladder Logic with DirectLOGiC .....	.B-5
Reading ERM Statistics using Ladder Logic with Do-more .....	.B-6
<b>Reading Error Codes from Slaves .....</b>	<b>.B-7</b>
Reading Error Codes from Slaves with DirectLOGIC .....	.B-7
Reading Error Codes from Slaves with Do-more .....	.B-9
<b>Slave Diagnostic Word Memory .....</b>	<b>.B-10</b>
<b>Current / Last State Slave Error Codes .....</b>	<b>.B-12</b>
<b>Extended Slave Error Codes .....</b>	<b>.B-13</b>

## **Appendix C: ERM and ERM Workbench Default Settings**

<b>    ERM and ERM Workbench Factory Default Settings .....</b>	<b>C-2</b>
---	------------

## **Appendix D: Mapping ERM Slave I/O in a Think & Do WinPLC System**

<b>    Mapping ERM Slave I/O Points .....</b>	<b>D-2</b>
Launching Connectivity Center Tool .....	D-2
Connecting to the WinPLC Base I/O .....	D-2
Connecting to the ERM Slave I/O .....	D-3
Mapping I/O Points to Data Items .....	D-3

## **Appendix E: Configuring Terminator I/O Analog Output Modules**

<b>    Analog Output Module Control Byte .....</b>	<b>E-2</b>
--	------------

**Notes:**