REV. A

C3RWT - SERIES

ASSEMBLY INSTRUCTIONS FOR 3R TROUGH

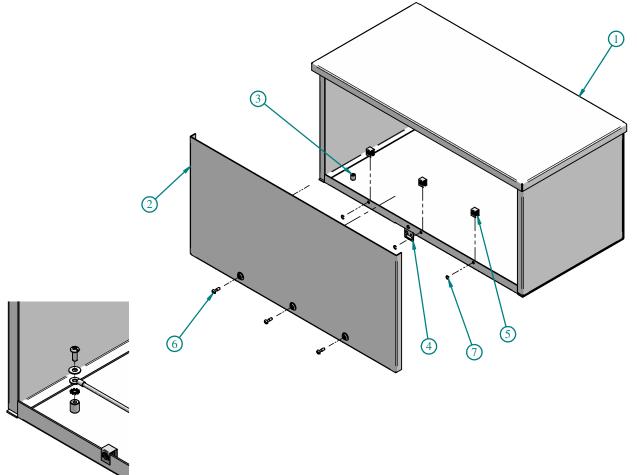


FIG. 1

ITEM No.	DESCRIPTION		
1	C3RWT - BODY		
2	C3RWT - COVER		
3	STD - TAP 10-32		
4	SPLITTER - HASP, DOOR		
5	CLIP NUT ZP		
6	SCREW PHIL/SLT TAPERED COMB.		
7	RING RETAINING 1/4""C" SHAFT		

TOOL BOX	Phillips	Slot Head	
- T	Screw Driver	Screw Driver	
	-	<i>~</i>	
	, Serial Control of the Control of t	a Simirina and a second	
	r-7	1-3	

REMOVE/REPLACE COVER

- A) Remove screws in cover, screws are captivated, they do not come out all the way. Remove cover.
- B) Replace cover and tighten all screws.

MOUNTING ON WALL

A) Mount on a wall using customer supplied hardware. Make sure trough is level and is mounted in the orientation shown above.

USING PADLOCK HASP

- A) To use hasp, rotate down to position shown. If using hasp remove ring retainers on screws for easier cover installation.
- B) If hasp is not required rotate up into enclosure.

GROUNDING

A) Ground wire must be installed, refer to FIG. 1 for wire installation on the body and cover.

