

# Table of Contents

---

## Chapter 1: Introduction

<b>Manual Overview</b> .....	<b>1-2</b>
The Purpose of this Manual .....	1-2
Other Reference Materials .....	1-2
Who Should Read this Manual .....	1-2
Quality Technical Manuals and Technical Support .....	1-2
<b>Conventions Used</b> .....	<b>1-3</b>
<b>ECOM Module Introduction</b> .....	<b>1-4</b>
ECOM Communication Possibilities .....	1-4
Your Network PC .....	1-5
<b>Frequently Asked Questions</b> .....	<b>1-6</b>

## Chapter 2: Setup and Installation

<b>ECOM Network Identifiers</b> .....	<b>2-2</b>
Module ID .....	2-3
Name .....	2-3
IP Address .....	2-4
Ethernet (MAC) Address .....	2-4
Using Multiple Network Identifiers .....	2-4
<b>Setting the Module ID with the DIP Switch</b> .....	<b>2-5</b>
H0 / H2 Series ECOM DIP Switch .....	2-5
The H4 Series ECOM DIP Switch .....	2-6
<b>Inserting the ECOM Module in the PLC Base</b> .....	<b>2-7</b>
H0 Series ECOM Module Installation .....	2-7
DL205 Slot Choices .....	2-7
H2 Series ECOM Module Installation .....	2-8
DL405 Slot Choices .....	2-9
H4 Series ECOM Module Installation .....	2-10
<b>ECOM Network Layouts</b> .....	<b>2-10</b>
<b>Network Cabling</b> .....	<b>2-12</b>
ECOM Supports Two Standards .....	2-12
10/100BaseT Networks .....	2-12
10/100BaseT Connections .....	2-13
UTP Cable .....	2-13
10BaseFL Connections .....	2-13
Fiber Optic Cable .....	2-13
Fiber Optic Module ST Connector .....	2-13
<b>Maximum Cable Length</b> .....	<b>2-14</b>
<b>Maximum Number of ECOM Modules on the Network</b> .....	<b>2-15</b>

---

## Chapter 3: Configuring ECOMs Using NetEdit3

<b>NetEdit3 Software</b> .....	<b>3-2</b>
Installing NetEdit3 .....	3-2
Launching NetEdit3 .....	3-3
The NetEdit3 Screen .....	3-3
Adding Network Protocol Support to the NetEdit3 PC .....	3-4
<b>Using NetEdit3</b> .....	<b>3-5</b>
Ethernet Communication Protocol .....	3-5
Ethernet Address .....	3-6
Module Type, IP Address and ID .....	3-6
Module Info> General Information .....	3-7
Module Info> Ethernet Stats .....	3-7
ECOM Settings .....	3-7
ECOM Settings> Configuration> General .....	3-8
ECOM Settings> Configuration> Advanced .....	3-9
ECOM Settings> Configuration> Peer to Peer .....	3-10
ECOM Settings> Utils> Test CPU Access .....	3-12
ECOM Settings> Firmware .....	3-12
FileMenu> Live Update .....	3-13
F / B / C Columns .....	3-13

## Chapter 4: RLL Programming for Communications

<b>PLC-to-PLC Communications</b> .....	<b>4-2</b>
<b>How RLL is Used for Communications</b> .....	<b>4-2</b>
<b>Network Instructions</b> .....	<b>4-3</b>
Read (RX) and Write (WX) Instructions .....	4-3
Building the Read (RX) or Write (WX) Routine .....	4-3
The First LD Instruction .....	4-3
The Second LD Instruction .....	4-4
The LDA Instruction .....	4-4
Write (WX) Instruction .....	4-5
<b>Addressing the Different Memory Types</b> .....	<b>4-6</b>
Bit Memory .....	4-6
Word Memory and Aliases .....	4-6
DL05 CPU .....	4-7
DL06 CPU .....	4-7
D2-240 CPU .....	4-8
D2-250-1 CPU .....	4-8
D2-260 CPU .....	4-9
D4-430 CPU .....	4-9
D4-440 CPU .....	4-10
D4-450 CPU .....	4-10
<b>Special Relays for Communications</b> .....	<b>4-11</b>
<b>Program with One Read Instruction</b> .....	<b>4-13</b>
Program for the Initiating PLC .....	4-13
Program for the Responding PLC .....	4-13
Rung 1 .....	4-14
Rung 2 .....	4-14
Rung 3 .....	4-14

Rung 4 .....	4-14
Program for the Responding PLC .....	4-14
<b>Example Program with One Write Instruction .....</b>	<b>4-15</b>
Program for the Initiating PLC .....	4-15
Program for the Responding PLC .....	4-15
Rung 1 .....	4-16
Rung 2 .....	4-16
Rung 3 .....	4-16
Rung 4 .....	4-16
Program for the Responding PLC .....	4-16
<b>Integrating Multiple Read and Write Instructions .....</b>	<b>4-17</b>
Interlocking Relays .....	4-17
First RX/WX Instruction .....	4-18
Second RX/WX Instruction .....	4-19
Third RX/WX Instruction .....	4-19
Returning to the First RX/WX Instruction .....	4-19
Shift Register .....	4-20
Store If Equal .....	4-20
First RX/WX Instruction .....	4-21
Second RX/WX Instruction .....	4-21
Third RX/WX Instruction .....	4-21
<b>Chapter 5: MODBUS TCP for H0/H2/H4-ECOM100</b>	
<b>MODBUS TCP .....</b>	<b>5-2</b>
Client / Server Model .....	5-2
Protocol Description .....	5-2
<b>Supported MODBUS Function Codes .....</b>	<b>5-4</b>
<b>Network Server (slave) Operation .....</b>	<b>5-5</b>
MODBUS Function Codes Supported .....	5-5
Determining the MODBUS Address .....	5-5
If Your Host Software or Client Requires the Data Type and Address .....	5-6
Example 1: V2100 .....	5-11
Example 2: Y20 .....	5-11
Example 3: T10 Current Value .....	5-11
Example 4: C54 .....	5-11
If the Host Software or Client Requires an Address ONLY .....	5-12
Example 1: V2100 .....	5-14
Example 2: Y20 .....	5-14
Example 3: C54 .....	5-14
<b>Network Client (master) Operation .....</b>	<b>5-15</b>
MODBUS Function Codes Supported .....	5-15
PLC Memory Supported for Client Operation .....	5-16
Example 1: Calculating Word PLC Address .....	5-17
Example 2: Calculating Discrete Input PLC Address .....	5-17
Building the Read (RX) or Write (WX) Routine .....	5-18
Step 1: Identify ECOM Slot Location and Server Node # .....	5-18
Step 2: Load Number of Bytes to Transfer .....	5-19
Step 3: Specify Master Memory Area .....	5-19
Step 4: Specify Slave Memory Area .....	5-19
Communications from a Ladder Program .....	5-20

Multiple Read and Write Interlocks .....	5-20
<b>H0/H2-ECOM100 System Memory .....</b>	<b>5-21</b>

## **Chapter 6: H0/H2/H4-ECOM100 DHCP & HTML Configuration**

<b>H0/H2/H4-ECOM100 DHCP .....</b>	<b>6-2</b>
DHCP Issues .....	6-2
<b>Disabling DHCP and Assigning a Static IP Address .....</b>	<b>6-2</b>
<b>Using HTML Configuration .....</b>	<b>6-3</b>
Connecting to the H0/H2/H4-ECOM100 .....	6-3
H0/H2/H4-ECOM100 Client Peer to Peer Configuration .....	6-5

## **Chapter 7: Maintenance and Troubleshooting**

<b>Isolating a Communication Problem .....</b>	<b>7-2</b>
Diagnostic Tools and Techniques .....	7-2
<b>Troubleshooting Chart .....</b>	<b>7-2</b>
<b>ECOM Module Diagnostic LEDs .....</b>	<b>7-4</b>
H0 Series Indicators .....	7-4
H24-ECOM-(F) Indicators .....	7-5
H2/H4-ECOM100 Indicators .....	7-6
<b>Using NetEdit3 for Troubleshooting .....</b>	<b>7-7</b>
Select a Module .....	7-7
Module Information .....	7-7
Change Protocol .....	7-8
Ethernet Stats .....	7-8
RX/WX Settings .....	7-9
Record the .....	7-9
Module Settings .....	7-9
<b>Replacing the ECOM Module .....</b>	<b>7-10</b>
<b>Diagnosing Network Cable Problems .....</b>	<b>7-11</b>

## **Appendix A: General Specifications**

<b>General Specifications .....</b>	<b>A-2</b>
<b>Ethernet Standards .....</b>	<b>A-4</b>