

Table of Contents

Chapter 1: Introduction

Manual Overview	1-2
The Purpose of this Manual	1-2
Other Reference Materials	1-2
Who Should Read this Manual	1-2
Quality Technical Manuals and Technical Support	1-2
Conventions Used	1-3
ECOM Module Introduction	1-4
ECOM Communication Possibilities	1-4
Your Network PC	1-5
Frequently Asked Questions	1-6

Chapter 2: Setup and Installation

ECOM Network Identifiers	2-2
Module ID	2-3
Name	2-3
IP Address	2-4
Ethernet (MAC) Address	2-4
Using Multiple Network Identifiers	2-4
Setting the Module ID with the DIP Switch	2-5
H0 / H2 Series ECOM DIP Switch	2-5
The H4 Series ECOM DIP Switch	2-6
Inserting the ECOM Module in the PLC Base	2-7
H0 Series ECOM Module Installation	2-7
DL205 Slot Choices	2-7
H2 Series ECOM Module Installation	2-8
DL405 Slot Choices	2-9
H4 Series ECOM Module Installation	2-10
ECOM Network Layouts	2-10
Network Cabling	2-12
ECOM Supports Two Standards	2-12
10/100BaseT Networks	2-12
10/100BaseT Connections	2-13
UTP Cable	2-13
10BaseFL Connections	2-13
Fiber Optic Cable	2-13
Fiber Optic Module ST Connector	2-13
Maximum Cable Length	2-14
Maximum Number of ECOM Modules on the Network	2-15

Chapter 3: Configuring ECOMs Using NetEdit3

NetEdit3 Software	3-2
Installing NetEdit3	3-2
Launching NetEdit3	3-3
The NetEdit3 Screen	3-3
Adding Network Protocol Support to the NetEdit3 PC	3-4
Using NetEdit3	3-5
Ethernet Communication Protocol	3-5
Ethernet Address	3-6
Module Type, IP Address and ID	3-6
Module Info> General Information	3-7
Module Info> Ethernet Stats	3-7
ECOM Settings	3-7
ECOM Settings> Configuration> General	3-8
ECOM Settings> Configuration> Advanced	3-9
ECOM Settings> Configuration> Peer to Peer	3-10
ECOM Settings> Utils> Test CPU Access	3-12
ECOM Settings> Firmware	3-12
FileMenu> Live Update	3-13
F / B / C Columns	3-13

Chapter 4: RLL Programming for Communications

PLC-to-PLC Communications	4-2
How RLL is Used for Communications	4-2
Network Instructions	4-3
Read (RX) and Write (WX) Instructions	4-3
Building the Read (RX) or Write (WX) Routine	4-3
The First LD Instruction	4-3
The Second LD Instruction	4-4
The LDA Instruction	4-4
Write (WX) Instruction	4-5
Addressing the Different Memory Types	4-6
Bit Memory	4-6
Word Memory and Aliases	4-6
DL05 CPU	4-7
DL06 CPU	4-7
D2-240 CPU	4-8
D2-250-1 CPU	4-8
D2-260 CPU	4-9
D4-430 CPU	4-9
D4-440 CPU	4-10
D4-450 CPU	4-10
Special Relays for Communications	4-11
Program with One Read Instruction	4-13
Program for the Initiating PLC	4-13
Program for the Responding PLC	4-13
Rung 1	4-14
Rung 2	4-14
Rung 3	4-14

Rung 4	4-14
Program for the Responding PLC	4-14
Example Program with One Write Instruction	4-15
Program for the Initiating PLC	4-15
Program for the Responding PLC	4-15
Rung 1	4-16
Rung 2	4-16
Rung 3	4-16
Rung 4	4-16
Program for the Responding PLC	4-16
Integrating Multiple Read and Write Instructions	4-17
Interlocking Relays	4-17
First RX/WX Instruction	4-18
Second RX/WX Instruction	4-19
Third RX/WX Instruction	4-19
Returning to the First RX/WX Instruction	4-19
Shift Register	4-20
Store If Equal	4-20
First RX/WX Instruction	4-21
Second RX/WX Instruction	4-21
Third RX/WX Instruction	4-21
Chapter 5: MODBUS TCP for H0/H2/H4-ECOM100	
MODBUS TCP	5-2
Client / Server Model	5-2
Protocol Description	5-2
Supported MODBUS Function Codes	5-4
Network Server (slave) Operation	5-5
MODBUS Function Codes Supported	5-5
Determining the MODBUS Address	5-5
If Your Host Software or Client Requires the Data Type and Address	5-6
Example 1: V2100	5-11
Example 2: Y20	5-11
Example 3: T10 Current Value	5-11
Example 4: C54	5-11
If the Host Software or Client Requires an Address ONLY	5-12
Example 1: V2100	5-14
Example 2: Y20	5-14
Example 3: C54	5-14
Network Client (master) Operation	5-15
MODBUS Function Codes Supported	5-15
PLC Memory Supported for Client Operation	5-16
Example 1: Calculating Word PLC Address	5-17
Example 2: Calculating Discrete Input PLC Address	5-17
Building the Read (RX) or Write (WX) Routine	5-18
Step 1: Identify ECOM Slot Location and Server Node #	5-18
Step 2: Load Number of Bytes to Transfer	5-19
Step 3: Specify Master Memory Area	5-19
Step 4: Specify Slave Memory Area	5-19
Communications from a Ladder Program	5-20

Multiple Read and Write Interlocks	5-20
H0/H2-ECOM100 System Memory	5-21

Chapter 6: H0/H2/H4-ECOM100 DHCP & HTML Configuration

H0/H2/H4-ECOM100 DHCP	6-2
DHCP Issues	6-2
Disabling DHCP and Assigning a Static IP Address	6-2
Using HTML Configuration	6-3
Connecting to the H0/H2/H4-ECOM100	6-3
H0/H2/H4-ECOM100 Client Peer to Peer Configuration	6-5

Chapter 7: Maintenance and Troubleshooting

Isolating a Communication Problem	7-2
Diagnostic Tools and Techniques	7-2
Troubleshooting Chart	7-2
ECOM Module Diagnostic LEDs	7-4
H0 Series Indicators	7-4
H24-ECOM-(F) Indicators	7-5
H2/H4-ECOM100 Indicators	7-6
Using NetEdit3 for Troubleshooting	7-7
Select a Module	7-7
Module Information	7-7
Change Protocol	7-8
Ethernet Stats	7-8
RX/WX Settings	7-9
Record the	7-9
Module Settings	7-9
Replacing the ECOM Module	7-10
Diagnosing Network Cable Problems	7-11

Appendix A: General Specifications

General Specifications	A-2
Ethernet Standards	A-4