


IRONHORSE® HELICAL BEVEL GEARBOX USER MANUAL TABLE OF CONTENTS

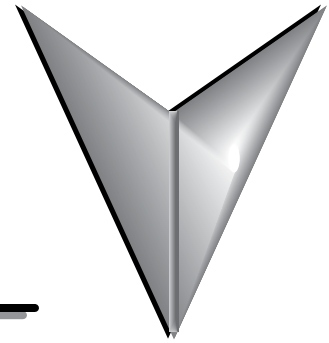

IronHorse® Helical Bevel Gearbox User Manual

WARNINGS AND TRADEMARKS	W-1
~ WARNING ~	W-1
Trademarks	W-1
~ AVERTISSEMENT ~	W-2
Marques de commerce	W-2
USER MANUAL REVISION HISTORY	H-1
USER MANUAL TABLE OF CONTENTS	TOC-1
CHAPTER 1: GETTING STARTED	1-1
Manual Overview	1-2
IronHorse® Helical Bevel Gearbox Introduction	1-2
Part Number Explanation	1-3
Nameplate Information	1-3
CHAPTER 2: SPECIFICATIONS	2-1
IronHorse® Cast-Iron Helical Bevel Gearboxes	2-2
Gearbox Selection Factors	2-2
IronHorse® Cast-Iron Helical Bevel Gearbox Specifications	2-3
IronHorse® Cast-Iron Helical Bevel Gearbox Accessories	2-5
IronHorse® Cast-Iron Helical Bevel Gearbox Dimensions	2-6
CHAPTER 3: INSTALLATION, MAINTENANCE, AND LUBRICATION.	3-1
Safety Notification	3-2
Installation	3-3
Mounting Positions	3-4
Startup Procedure	3-4
Inspection and Maintenance	3-4
Lubrication	3-5
Seal Sizes	3-7
Bearing Sizes	3-7
Storage	3-8
APPENDIX A: GLOSSARY OF TERMS	A-1
Glossary of Gearbox Terms	A-2
APPENDIX B: GEARBOX SELECTION	B-1
Gearbox Selection Procedure	B-2
AGMA Service Factors	B-5

BLANK
PAGE