



# TABLE OF CONTENTS

---

## Chapter 1: Getting Started

Manual Overview . . . . .	1-2
Overview of this Publication . . . . .	1-2
Who Should Read This Manual . . . . .	1-2
Technical Support . . . . .	1-2
Special Symbols . . . . .	1-2
Available Models . . . . .	1-3
MTR Rolled-Steel 56C-Frame Single-Phase Motors Features and Specifications . . . . .	1-3
MTR Rolled-Steel 56C-Frame Three-Phase Motors Features and Specifications . . . . .	1-4
MTCP Premium-Efficiency Cast-Iron Three-Phase Motors Features and Specifications . . . . .	1-7
MTC EPart Cast-Iron Three-Phase Motors Features and Specifications	1-15
Receiving and Inspection . . . . .	1-23
Unpacking . . . . .	1-23
IronHorse Part Number Explanation . . . . .	1-23
Reshipping . . . . .	1-24
Long Term Storage . . . . .	1-24
Warranty . . . . .	1-24

Chapter 2: Mounting & Initial Startup

Safety Information . . . . .2-2

Motor Dimensions . . . . .2-3

    MTR 56C-Frame Single-phase Motor Dimensions . . . . .2-3

    MTR 56C-Frame Three-phase Motor Dimensions . . . . .2-3

    MTCP Premium Efficiency T-Frame Three-Phase Motor Dimensions . . .2-4

    MTCP Premium Efficiency TC-Frame Three-Phase Motor Dimensions . .2-8

    MTC EAct T-Frame Three-Phase Motor Dimensions . . . . .2-10

    MTC EAct TC-Frame Three-Phase Motor & C-Flange Dimensions . . .2-14

Terminal Diagrams . . . . .2-15

Motor Mounting . . . . .2-16

    STABLE™ Slide Bases . . . . .2-16

    Proper Installation Conditions . . . . .2-17

    Coupling Alignment . . . . .2-17

Motor Nameplate & Starter Information . . . . .2-18

    Typical IronHorse Motor Nameplate . . . . .2-18

    Motor Starter Information . . . . .2-18

    Locked Rotor Amps . . . . .2-19

Inspection Before Startup . . . . .2-20

Initial Startup Inspection . . . . .2-20

Chapter 3: Preventive Ongoing Maintenance

Routine Maintenance . . . . .3-2

Bearing Size Information . . . . .3-3

## Chapter 4: Accessories

Replacement Parts . . . . .	4-2
Capacitors and Centrifugal Switches for MTR Single-Phase Motors . . . . .	4-2
Replacement Parts for MTCP Premium Efficiency Three-Phase Motors . . . . .	4-3
C-Flange Kits . . . . .	4-5
C-Flange Kits for MTCP Premium Efficiency Three-Phase Motors . . . . .	4-5
C-Flange Kits for MTC EAct Three-Phase Motors . . . . .	4-6
STABLE Slide Bases . . . . .	4-8
Slide Base Selection . . . . .	4-9
Slide Base Dimensions . . . . .	4-10

## Chapter 5: Reference

Using IronHorse Motors with AC Drives . . . . .	5-2
Voltage Spike Considerations for AC Drive Control . . . . .	5-2
Double Punched Motors . . . . .	5-3
F1 and F2 Mounting . . . . .	5-4
Junction Box Dimensions . . . . .	5-5
Minimum Sheave Diameters . . . . .	5-6
Decibel Levels . . . . .	5-7
Shipping Crate Dimensions . . . . .	5-8

BLANK  
PAGE