


TABLE OF CONTENTS

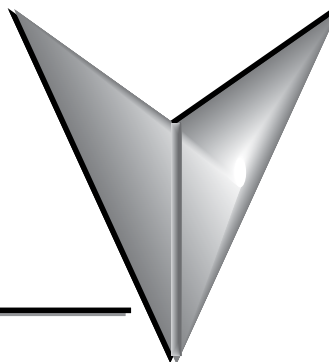

Chapter 1: Getting Started

Introduction.....	1-2
Conventions Used.....	1-3
What's in the Box?.....	1-4
Getting Started.....	1-5
Before You Begin.....	1-6
Step 1 - Install Configuration Software	1-7
Step 2 - Launch Configuration Software	1-8
Step 3 - Connect Power Wiring	1-9
Step 4 - Connect the ViewMarq Message Display to a PC	1-10
Step 5 - Apply Power to the Display.....	1-11
Step 6 - Create Link between the ViewMarq and your PC	1-12
Step 7 - Creating Messages.....	1-15
Step 8 - Simulating Messages	1-16
Step 9 - Sending Messages to the ViewMarq Message Display	1-17
Step 10 - Sending Messages from your PLC to the ViewMarq.....	1-18

Chapter 2: Specifications

Overview	2-2
Specifications	2-3
Environmental Specifications.....	2-6
Power Supply and Communication Specifications.....	2-7
Power Supply Removable Terminal Blocks.....	2-7
AC Power Supply Specifications.....	2-8
External DC Power Supply Requirements	2-8

Communication and Discrete Input Connections	2-9
RS-232 Port 1 RJ12 Connector	2-10
Port 1 RS-232 Terminal Block Connection	2-11
Port 2 RS-485 Terminal Block Connection	2-11
Port 3 Ethernet Connection	2-12
Discrete Input Specifications	2-13
Communication LEDs	2-14
Mechanical Features	2-15
Front View	2-15
Back View	2-15
Dimensional Drawings	2-16
MD4-0112T, MD4-0124T, MD4-0112T-1 and MD4-0124T-1	2-16
MD4-0212T, MD4-0224T, MD4-0212T-1 and MD4-0224T-1	2-17
MD4-0412T, MD4-0424T, MD4-0412T-1 and MD4-0424T-1	2-18

Chapter 3: Hardware Installation

Safety Guidelines	3-2
Plan for Safety	3-2
Introduction to ViewMarq Mechanical Design	3-3
Power Connections and Specifications	3-4
Power Connections Cover	3-4
Power Installation	3-4
Power Supply Removable Terminal Blocks	3-5
Grounding	3-6
Ambient Temperature	3-6
Communications Connections	3-7
Communication Connections Cover	3-7
Communication Connectors	3-7
RS-232 Port 1 RJ12 Connector	3-8
Port 1 RS-232 / Port 2 RS-485 Terminal Block Connection	3-8
Port 3 Ethernet Connection	3-9
Port 4 Discrete Inputs	3-9
ViewMarq Mounting	3-10
Installation Notes	3-10

Mounting Position.....	3-10
Mounting Clearance.....	3-10
Viewing Angle and Distances	3-11
Mounting Brackets	3-12
Wall Mounting	3-13
Chain Mounting.....	3-15

Chapter 4: PC to ViewMarq Communication

Introduction.....	4-2
Links.....	4-2
Adding a New Link.....	4-5
Ethernet Link.....	4-6
Serial Link.....	4-9
Reset Communications to Factory Default	4-12

Chapter 5: Creating and Previewing Messages

Creating and Previewing Messages.....	5-2
The Software Workspace.....	5-3
Select the ViewMarq Size	5-3
Saving the Message.....	5-4
Open a Saved Message	5-5
Text Editor Overview.....	5-6
Software Purpose	5-6
Supported Characters.....	5-6
Message Length	5-6
Message Formatting.....	5-7
Character Toolbar	5-7
Line Toolbar	5-8
Scrolling Multiple Lines Together	5-10
Other Tools	5-10
LED Display ID	5-11
Message Simulator	5-12
Command String Window.....	5-13

Chapter 6: Configuring the ViewMarq LED Display

Introduction	6-2
Message Display Selection and Configure Message Display	6-2
Message Display Settings	6-5
Global Settings.....	6-5
Communication Setting	6-7
Export and Import Configuration	6-12
Export Configuration File.....	6-12
Import Configuration File.....	6-13

Chapter 7: Sending Messages from a PLC to ViewMarq

Introduction	7-4
ASCII	7-5
Modbus.....	7-5
Reading the ASCII Reply when using Modbus	7-6
String Length Limitations with PLCs	7-6
Sending Strings from multiple PLCs	7-11
Modbus with Multiple Displays or other Slave Devices.....	7-12
CLICK PLC by AutomationDirect	7-13
RS-232	7-13
RS-485	7-13
ASCII	7-14
Modbus.....	7-17
Optional Error Checking.....	7-21
Productivity3000 PAC by AutomationDirect	7-25
Ethernet	7-25
RS-232	7-25
RS-485	7-26
Embedding the String into PAC memory	7-27
Sending Strings from Productivity3000 to the ViewMarq display by ASCII over Serial	7-28
Sending Strings from Productivity3000 to the ViewMarq display via Modbus	7-31
Modbus Serial	7-34
Optional Error Checking.....	7-38

Ethernet Modbus TCP	7-42
Optional Error Checking.....	7-44
Do-More PLC by AutomationDirect.....	7-47
RS-232	7-47
RS-485	7-47
Ethernet	7-48
ASCII	7-48
Modbus.....	7-53
Modbus TCP	7-63
DirectLogic PLC by AutomationDirect.....	7-66
Sending Strings from DirectLogic to the ViewMarq display by ASCII over Serial.....	7-66
Using the DirectLogic PRINT instruction.....	7-67
Using PRINTV instruction (D2-260 or D0-06 only)	7-68
Embedding the String into PLC memory.....	7-68
Sending Strings from DirectLogic to the ViewMarq display by Modbus over Serial .	7-70
Optional Error Checking.....	7-73
Sending Strings from DirectLogic to the ViewMarq display by Modbus over Ethernet	7-76
PLC Cabling Chart	7-83
Allen Bradley MicroLogix and SLC PLCs	7-84
RS-232	7-84
ASCII	7-85
Modbus.....	7-91
Allen Bradley CompactLogix and ControlLogix PLCs.....	7-103
RS-232	7-103
ASCII	7-103
 Chapter 8: Variables	
Variables.....	8-2
Inserting a Variable.....	8-2
Editing a Variable	8-3
String Variables	8-4
String Variable Setup.....	8-4
Setting String Variable Value	8-6

Numeric Variables	8-9
Numeric Variable Setup.....	8-9
Setting Numeric Variable Value	8-11
Using an ASCII Command String to Update the Numeric Value.....	8-11

Chapter 9: Maintenance and Troubleshooting

Introduction	9-2
Updating Firmware	9-2
Load Firmware Message	9-4
Reboot LED Display	9-4
Reset Factory Defaults	9-5
Reset Communications to Factory Default	9-6
LED Test	9-7
Error Messages	9-8
ASCII Command String Syntax Error Messages	9-9
Diagnostic LED	9-10

Chapter 10: Message List

Introduction	10-2
Message List Features	10-2
Main Window Message List Toolbar	10-3
The Message List Management Window	10-5
Adding Messages to a Message List	10-6
Editing an Existing Message List	10-7
Autoloading Message	10-7
Configuring the ViewMarq display for Message List	10-8
Downloading Messages to the ViewMarq Display	10-10
Triggering Messages in the Display	10-11
Using the <DO n> command	10-11
Using the Discrete Inputs	10-11
Testing a Message List	10-12

Compare Message Lists	10-13
Backup a Message List to a File.....	10-14
Restore a Message List File to a ViewMarq Display	10-15
Clear Message List in the LED Display.....	10-16
Format of Stored Messages.....	10-16

Appendix A: ViewMarq ASCII Command Specifications

ViewMarq Commands	A-2
ASCII String Commands	A-3
ASCII String format	A-3
Basic Commands.....	A-5
Embedded Variables.....	A-16
Advanced Commands.....	A-18
Display Commands.....	A-19
Non Display Commands.....	A-20

Appendix B: Modbus Registers

Modbus Registers	B-2
Option Flags.....	B-4
Supported Modbus Function Codes	B-4

Appendix C: ViewMarq Characters

ViewMarq Character List.....	C-2
------------------------------	-----

Index