

Table of Contents



Getting Started

The Purpose of this Manual	2
The Contents of the Manual	2
Additional Manuals	2
Technical Assistance	2
How the OP-1124 Works	3

Using the Lamp Annunciator Panel...5 Easy Steps

4

Step 1: Prepare the Lamp Labels (Pages 5–6)	4
Step 2: Install the Panel (Pages 7–14)	4
Step 3: Configure the Panel with OPEditor Software (Page 15)	4
Step 4: Configure the Panel to Work with your CPU (Pages 16–19)	4
Step 5: Write the Ladder Logic (Pages 20–33)	4

Preparing the Labels

Applying Text to Each Label	5
Replacing LED Bars	5
Template for Creating Labels	6

Installing the Panel

Panel Specifications:

7

Physical Specifications	7
Environmental Specifications	7
Operating Specifications	7
Dimensions for Mounting	8

Power and Cabling Requirements

9

What Are Your Application Needs?	9
Programming Cable	10
PLC to Panel Cable	10

Choosing the Proper Connecting Cables

11

OptiMate Panel Cables	11
OP-9001 Cable Connectors	11
PLC to Panel Cable	11

Connecting a Power Supply

12

Power Supply Connections	12
--------------------------------	----

Connecting the Panel to your Personal Computer

13

Assigning an Address to the OP-1124	13
How to Set the Address	13
The Termination Resistor	13

Using the OP-9001 to Connect Multiple Panels

14



Configuring the Panel

System Requirements	15
How to Install	15
Step-by-Step Procedure	16
Step 1: Load the OPEditor and Complete the Editor Setup	16
Step 2: Select the LPT and COM ports	16
Step 3: Choose from Single or Multiple Configurations	16
Step 4: Select the Source for your Configuration	17
Step 5: Enter the Correct PLC Brand and Type	17
Step 6: Select Configure Protocol	17
Step 7A: Complete the Communications Information	18
Step 7B: Select the Base Register Address and File Number	18
Step 8: Set the Flash Option	19
Step 9: Save and Download	19

Applying Ladder Logic

General Concepts	20
Memory Mapping	20
Addressing Conventions	21
Controlling Lamps with a PLCDirect PLC	22
Internal Relays Controlling a Single Lamp	22
Internal Relays Controlling Multiple Lamps	23
Internal Relays Used to Add Flashing	24
Controlling a Lamp with User Memory (DL205/DL405 Only)	25
Controlling a Lamp with Bit-of-Word (DL450 Only)	26
Controlling Multiple Lamps with User Memory (DL205/DL405 Only)	27
Controlling Multiple Lamps with Bit-of-Word (DL450 Only)	28
Adding the Flashing with User Memory (DL205/DL405 Only)	29
Adding Flashing with Bit-of-Word (DL450 Only)	30
Controlling Lamps with an Allen-Bradley PLC	31
Turning ON Multiple Lamps (Allen-Bradley PLC)	31
Adding the Flash Option (Allen-Bradley PLC)	32
Test Routine for Checking Lamp Operation	33

Index