

Table of Contents

Chapter 1: Getting Started

Introduction	1-2
The Purpose of this Manual	1-2
Supplemental Manuals	1-2
Technical Support	1-2
Chapters	1-3
Appendices	1-3
Conventions Used	1-3
Key Topics for Each Chapter	1-3
OP-420 Overview	1-4
Plan your System	1-4
General Panel Information	1-4
LCD Display Window	1-4
About the Pushbuttons	1-5
Back-Panel Layout	1-5
Serial Communications Port	1-5
Power Receptacle	1-5
Frequently Asked Questions	1-6

Chapter 2: Installation and Specifications

Labeling the Pushbuttons	2-2
Labeling the Pushbuttons	2-2
Creating the Labels	2-2
Creating Labels Using OP-WINEDIT	2-2
Template for Manually Creating Labels	2-4
Dimensions for Mounting	2-5
Panel Specifications	2-6
Physical Specifications	2-6
Environmental Specifications	2-6
Operating Specifications	2-6
Power Supply Connections	2-7
Power Supply Connections	2-8
Connecting the Configuration Cable	2-8
Configuration Cable	2-8
Selecting a Communications Cable	2-9
Communications Cable Details	2-10
OP400 Series Communications Cables	2-10

Chapter 3: Understanding the Features

Learning the Features	3-2
Status Register	3-3

Status Register Overview	3-3
Bit Level Access	3-3
Register Definition	3-3
Messages	3-4
Displaying Messages on the LCD Screen	3-4
Static Messages	3-4
Dynamic Messages	3-4
Displaying Messages	3-5
Static Message Operation	3-5
Static Display	3-5
Dynamic Message Operation	3-6
Dynamic Message Top Line	3-7
Dynamic Message Bottom Line	3-7
Displaying Data With a Decimal Point	3-8
Displaying BCD and Binary Numbers	3-8
Displaying BCD Double Numbers	3-8
Displaying Floating Point Numbers	3-9
Pushbuttons	3-10
Pushbutton Operation	3-10
Pushbutton Example	3-11
Pushbuttons Using Direct Access to Status Register Bits	3-11
Pushbutton LEDs	3-11
Memory Mapping Process	3-12
OP Base Register Memory Definition	3-12
Operator Panel Base Memory	3-12
OP Panel User Memory	3-13
DirectLOGIC User Memory Overview	3-14
Mapping Operation	3-15
Mapping Example (DL105, DL205, D3-350, and DL405)	3-15
DL105, DL205, D3-350, and DL405	3-15
Mapping Example (D3-340)	3-16
DL305 Family	3-16

Chapter 4: Configuring Your Operator Panel

Preparing for Configuration	4-2
OP-WINEDIT Software	4-2
More about OP-WINEDIT	4-2
HELP Screens	4-2
Application Worksheets	4-3
Computer System Requirements	4-3
How to Configure Your Panel	4-3
Step 1	4-3
Step 2	4-3
Step 3	4-4
Step 4	4-4
Step 5	4-4
Step 6	4-5
Step 7	4-6
Step 8	4-6

Chapter 5: Programming Examples

Examples Using PLCDirect PLCs	5-2
Register Usage	5-2
Examples Using DL105, DL205, D3-350 and DL405	5-2
Defining the Status Register	5-2
Using a Function Button	5-4
Displaying Messages	5-5
Displaying Binary Numbers	5-6
Displaying BCD Double Numbers	5-7
Displaying Floating Point Numbers Example 1	5-8
Displaying Floating Point Numbers Example 2	5-8
Example Using D3-340	5-9
Defining the Status Register	5-9
Examples Using Allen-Bradley SLC 5/03, 5/04 and Micrologix	5-10
Interfacing to A-B Memory	5-10
Using a Function Button	5-10
Displaying Messages	5-11
Displaying Binary Numbers	5-12
Displaying BCD Double Numbers	5-13
Displaying Floating Point Numbers	5-13
Troubleshooting the OP-420 Panels	5-14
Troubleshooting	5-14
Power Supply Problems	5-14
Configuration Problems	5-14
Communication Problems	5-14
Getting Help	5-14

Appendix A: Worksheets

Index