## How to Combine Sounds (BSV)

Items prepared by customer: SD card (type: SDV-2GP, sold separately), Personal computer, SD card reader/writer

Note: SD card must be formatted in FAT or FAT16

## 1 PREPARING THE FILE

- Change the Recording Rate to 32 kbps or 64 kbps
- Change the Sampling Rate to 44.1 kHz
- Change the file to mono sound type
- Remove any ID3 tags from the file
- Repeat for all MP3s desired

Note: Be sure to use the naming convention of 'XXX.mp3' Where XXX is a numeric value from 001 to 015 0 Example: 001.mp3, 002.mp3 0 9 New folder Organize 🔻 Include in library 🔻 Share with 💌 Play all # Name 쑦 Favorites 📕 Desktop ) 001 Downloads references Libraries Documents Music

## 2 COPYING MP3 TO BSV UNIT

- Connect the SD card reader/writer to PC and insert SD card
- Open the drive into which the SD card is inserted
- Copy prepared MP3 to SD card

Note: Just the MP3 files need to be copied. Copying the folder can result in an error.

| Computer > Removable  | Disk (F:)            |                    |                | • <del>4</del> 9 | Search Removable Disk | • X   |
|---|----------------------|--------------------|----------------|------------------|-----------------------|-------|
| Organize ▼ Share with ▼ New folder 🔠 ▼ 🗍 💿  |                      |                    |                |                  |                       |       |
| ☆ Favorites   | *                    | Date modified      | Туре           | Size             |                       |       |
| E Desktop<br>Desktop<br>Desktop<br>Pownloads<br>Preferences<br>Libraries<br>Documents | MP3                  |                    | lder is empty. |                  |                       |       |
| Music   |                      |                    |                |                  |                       |       |
| Pictures     Videos   | New folder           |                    |                |                  |                       |       |
| I Computer  | Organize 🔻 🚺 Play 🔻  | Play all Share wit | h 🔻 Burn       | New folder       |                       |       |
| S (C:)  | ☆ Favorites          | Name               | # Title        | e                | Contributing artists  | Album |
| Removable Disk (F:)   | 📃 Desktop            | 001                |                |                  |                       |       |
|   | Downloads references |                    |                |                  |                       |       |

- Eject SD card. Insert SD card into BSV unit
- Turn on power to the unit
- You will hear a short beep indicating writing process has started
- When you hear a long beep the process is completed and the SD card can be removed.

Note: short repeated beeps are an error and the process must be started over

Note: if the volume control is set to the minimum, you will not hear the sound of completion