
Table of Contents

Chapter 1.0 Introduction	1
Chapter 2.0 Installation of DataWorx PLC	2
Chapter 3.0 Registration	11
Chapter 4.0 Hardware	14
Chapter 5.0 Ladder Logic	18
5.1 WX/RX Commands	19
Chapter 6.0 DataWorx PLC	26
6.1 Server	26
6.1.1 Installing Service	26
6.1.2 Running Service	28
6.1.3 Multiple Network Adapters	28
6.1.4 Pausing Service	29
6.1.5 Stopping Service	30
6.1.6 Viewing Error Log	31
6.1.7 Hiding	31
6.1.8 Uninstalling Service	33

Table of Contents

6.2 Monitor	36
6.2.1 Connecting to the Server	38
6.2.2 Configuring the Server	39
6.2.3 PLC Configuration Help	46
6.2.4 Modifying a PLC	49
6.2.5 Deleting	51
6.2.6 Duplicating	52
6.2.7 Listening	54
6.2.8 Backing up and Restoring	55
6.2.9 Hiding	56
6.2.10 Locking / Unlocking	57
6.2.11 Viewing Data Log Files	58
Chapter 7.0 Troubleshooting	60