

Table of Contents

Introduction	1
The Purpose of this Supplementary Manual	1
Make Backup Copies of Your Diskettes	1
Who Can and Should Use DirectSOFT?	1
PLC Compatibility	2
System Requirements	2
Installing the Software	3
Step1: Start Windows	3
Step 2: Load the Setup Program from your Disks	3
Step 3: Complete the Registration Information	4
Step 4: Select the Installation Options	4
The Installation Process	5
Step 5: Return to the Windows Main Screen	5
Building an Example Program	6
What You Will Learn	6
A Simple Example	6
Sample Ladder Logic	6
Step 1: Enter the Programming Mode	7
Step 2: Start a New Project	7
Step 3: Switch to the Edit Mode	8
The Tool Palette	9
Step 4: Using the Tool Palette to Enter the First Element	9
Step 5: Using the SP0 Relay in Our Program.	10
Step 6: Using the Box Browser	11
Step 7: Scrolling the Box Class Window	11
Step 8: Entering a Preset in the Accumulator	12
Step 9: Connecting Elements in Parallel	13
Step 10: Inserting an Output Box	13
Step 11: Entering the Address to Hold the Preset	14
Step 12: Enabling the Documentation Options	15
Step 13: Entering a Comment	15
Step 14: Assigning a Nickname to the Preset Output	17
Step 15: Adding an Internal Relay to Start the Timer	19
Step 16: Assigning a Nickname to the Start Contact	20
Step 17: Adding a Normally Closed Contact	21
Step 18: Adding a Nickname to the Normally Closed Contact	21
Step 19: Inserting the Timer Box	22
Step 20: Adding the Counter	24
Step 21: Entering the Counter Data	25
Step 22: Assigning a Nickname to the Counter	25
Step 23: Making the Counter Self-Resetting	26
Step 24: Adding a Coil for Resetting on the First Scan	28
Step 25: Documenting the Function of the Counter	30
Step 26: Adding a Comparative Boolean Instruction	31
Step 27: Adding a Conditional Output	31
Step 28: Copying to the Clipboard	33
Step 29: Pasting to your Program	34
Step 30: Ending the Program	36

Connecting Online to a PLC & Downloading the Program	37
Starting the Linking Process	37
Adding a New Link	37
Selecting a COM port	38
Selecting a PLC family	38
Selecting a Communications Protocol	39
Enabling the Auto-Link Feature and Naming your Link	39
Comparing Disk to PLC Memory	40
Writing your Program to the PLC	41
Monitoring the Program with a Data View	42
Creating a Data View	42
Adding Dynamic ON/OFF Edit Buttons	43
Entering the Run Mode	44
Observing the Status of Elements	45
Using the Edit Buttons to Change Status	45
Writing Edits to the PLC	46
Special Data View Instructions for DL305 Family	47
DirectNET Restrictions	47
Changing the Value to Binary to Observe All 8 Bits.	48
Changing to the Run Mode	49
Enabling the All Status ON	49
Entering Data for the Status Register	49
Writing the Edits to the PLC	50
Troubleshooting Guide	51
Software Installation Problems	51
Communication Problems	51
Comm Error Connecting to PLC	52
Internal Modem Card Conflicts	52
Mouse Driver Conflicts	52
Swapping Ports to Solve a Mouse Conflict	53
Other Driver Conflicts	53
Driver Conflicts with Laptop Computers	53
Power Management Conflicts	54
Specialized Video Device Driver Problems	54
Serial Device Driver Bug with Some Computers	54
Conflicts with other PLC Vendor Software Drivers	54
Non-Shunted Power Supplies	54
Screen Saver Conflicts	54
Printing Problems	55
Programming Cables	55
