

TABLE OF CONTENTS



Chapter 1: Getting Started

Manual Overview	1–2
SOLO Temperature Controller Introduction	1–3
SOLO Temperature Controller Specifications	1–5

Chapter 2: Installation and Wiring

Ambient Conditions	2–2
Installation Considerations	2–2
Mounting Instructions	2–3
Controller and Panel Cutout Dimensions	2–4
Safety Information	2–6
Terminal Identification	2–8
SL4824 Series Inputs	2–8
SL4824 Series Wiring	2–9
SL4848 Series Inputs	2–10
SL4848 Series Wiring	2–11
SL4896 Series Inputs	2–12
SL4896 Series Wiring	2–13
SL9696 Series Inputs	2–14
SL9696 Series Wiring	2–15

Chapter 3: Keypad Operation and Setup Parameters

Display, LED and Keypad	3–2
Keypad Operation	3–3
Setup Parameter Listing	3–4
Regulation Mode Parameters	3–7
Operation Mode Parameters	3–15

Initial Setting Parameters	3-17
Reset to Factory Default	3-22
Chapter 4: Controller Inputs and Outputs	
Control Input Types	4-2
Event Inputs	4-3
Control Output Types	4-4
Alarm Outputs	4-8
Chapter 5: Control Modes	
PID Control	5-2
On / Off Control	5-3
Ramp / Soak Control	5-4
Manual Control	5-5
Error Display Information	5-5
Chapter 6: Configuration Software	
PC Connection	6-2
Software Installation	6-3
Com Port Settings	6-4
Configuration	6-4
Recorder	6-7
Chapter 7: Modbus Communication	
Modbus protocol	7-2
Register	7-2
Connection with the DirectLogic PLC	7-8
Connection with the C-more and C-more Micro HMI	7-10
Appendix: Modbus Address Map for Ramp / Soak Control	
Last Step Number	A-2
Additional Cycles	A-2
Next Pattern Number	A-2
Ramp / Soak SV	A-3
Ramp / Soak Time	A-4
Index	