

# TABLE OF CONTENTS

---



<b>Chapter 1: Getting Started</b>	
Manual Overview	1–2
SOLO Temperature Controller Introduction	1–3
SOLO Temperature Controller Specifications	1–5
<b>Chapter 2: Installation and Wiring</b>	
Ambient Conditions	2–2
Installation Considerations	2–2
Mounting Instructions	2–3
Controller and Panel Cutout Dimensions	2–4
Safety Information	2–6
Terminal Identification	2–8
<b>Chapter 3: Keypad Operation and Setup Parameters</b>	
Display, LED and Keypad	3–2
Keypad Operation	3–3
Setup Parameter Listing	3–4
Regulation Mode Parameters	3–7
Operation Mode Parameters	3–15
Initial Setting Parameters	3–17
Reset to Factory Default	3–22
<b>Chapter 4: Controller Inputs and Outputs</b>	
Control Input Types	4–2
Event Inputs	4–3
Control Output Types	4–4
Alarm Outputs	4–8

## Chapter 5: Control Modes

PID Control	5-2
On / Off Control	5-3
Ramp / Soak Control	5-4
Manual Control	5-5
Error Display Information	5-5

## Chapter 6: Configuration Software

PC Connection	6-2
Software Installation	6-3
Com Port Settings	6-4
Configuration	6-4
Recorder	6-7

## Chapter 7: Modbus Communication

Modbus protocol	7-2
Register	7-2
Connection with the DirectLogic PLC	7-7
Connection with the C-more and C-more Micro HMI	7-9

## Appendix: Modbus Address Map for Ramp / Soak Control

Last Step Number	A-2
Additional Cycles	A-2
Next Pattern Number	A-2
Ramp / Soak SV	A-3
Ramp / Soak Time	A-4

## Index