


# SR35 USER MANUAL

## TABLE OF CONTENTS

---

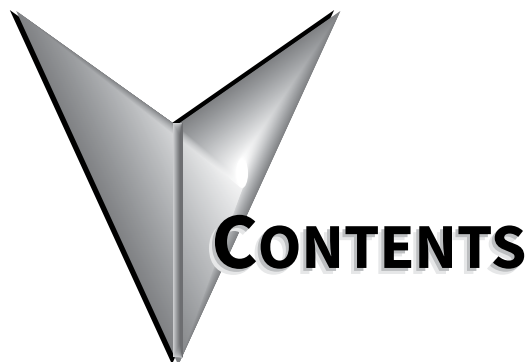

### Contents of Stellar SR35 Soft Starters User Manual

<i>Stellar SR35 Soft Starters User Manual</i> . . . . .	CF-1
<i>Warnings and Trademarks</i> . . . . .	W-1
~ WARNING ~ . . . . .	W-1
Trademarks . . . . .	W-1
~ AVERTISSEMENT ~ . . . . .	W-2
Marques de commerce . . . . .	W-2
Warnings . . . . .	W-3
<i>User Manual Revision History</i> . . . . .	H-1
<i>SR35 Soft Starters User Manual Table of Contents.</i> . . . .	TOC-1
<b>Chapter 1: Mechanical Installation</b> . . . . .	1-1
<i>User Manual Overview.</i> . . . .	1-2
<i>Overview of this Publication.</i> . . . .	1-2
<i>Who Should Read This Manual</i> . . . . .	1-2
<i>Supplemental Publications</i> . . . . .	1-2
<i>Technical Support</i> . . . . .	1-2
<i>Special Symbols</i> . . . . .	1-2
<i>Mounting</i> . . . . .	1-3
<i>Requirements for an Enclosure</i> . . . . .	1-3
<i>Starting</i> . . . . .	1-3
<i>Altitude Derate</i> . . . . .	1-3
<i>Ambient Temperature Derate</i> . . . . .	1-3
<i>Handling</i> . . . . .	1-3
<i>Accessories</i> . . . . .	1-4
<i>Dimensions and Clearance - SR35-017–SR35-065</i> . . . . .	1-5
<i>Dimensions and Clearance - SR35-077–SR35-192</i> . . . . .	1-6
<i>Dimensions and Clearance - SR35-242–SR35-361</i> . . . . .	1-7
<i>Environmental Specifications</i> . . . . .	1-8
<i>Horizontal Mounting.</i> . . . .	1-8
<b>Chapter 2: Electrical Installation.</b> . . . . .	2-1
<i>Warnings</i> . . . . .	2-2
<i>Isolation.</i> . . . .	2-2
<i>Electrical Control Supply Requirements</i> . . . . .	2-2
<i>Fuse Protection.</i> . . . .	2-2
<i>Safety</i> . . . . .	2-2
<i>Electrical Supplies</i> . . . . .	2-2
<i>General Specifications</i> . . . . .	2-3

Rating Tables . . . . .	2-5
Short Circuit Protection . . . . .	2-7
Electromagnetic Compatibility . . . . .	2-8
Fan Option . . . . .	2-8
Wire Sizes and Torques . . . . .	2-8
Motor Overload Protection . . . . .	2-9
Electrical Connections . . . . .	2-10
Main Circuit Wiring Diagram . . . . .	2-10
Single Phase Operation . . . . .	2-11
Electrical Connection. . . . .	2-11
Control Terminal Connection . . . . .	2-15
Control Terminal Functions . . . . .	2-15
Digital Input 2 (D2) Selectable Functions. . . . .	2-15
Digital Outputs Selectable Functions (13/14 and 21/22) . . . . .	2-15
3-Wire Control Circuit Wiring Diagram. . . . .	2-16
2-Wire Control Wiring Diagram. . . . .	2-16
<b>Chapter 3: Configuration and Parameters . . . . .</b>	<b>3-1</b>
Display and Controls. . . . .	3-2
Keypad Guidance Examples . . . . .	3-3
Operation – Local Motor Start . . . . .	3-3
Example Navigation Method . . . . .	3-3
Auto Application Setup . . . . .	3-4
Auto Setup Procedure (Auto App) . . . . .	3-5
Setup by Individual Parameter Settings (Advanced). . . . .	3-5
Auto Application Setup Parameter Settings . . . . .	3-5
Menu Structure. . . . .	3-6
Parameter Details by Parameter Number . . . . .	3-14
Function Descriptions . . . . .	3-40
Trip and Fault Codes . . . . .	3-45
Auto Reset Function . . . . .	3-47
Auto Reset Assignable Trips . . . . .	3-49
Auto Reset Function Descriptions. . . . .	3-49
Two-Wire, Three-Wire and Communications Control (Control Supply maintained) . . . . .	3-51
Control Supply Loss . . . . .	3-52
Two Wire . . . . .	3-52
Three Wire . . . . .	3-52
Modbus/Communications. . . . .	3-53
Auto Restart Termination . . . . .	3-53
Overload Trip . . . . .	3-53
Remote Start on Trip. . . . .	3-53
<b>Chapter 4: Communications. . . . .</b>	<b>4-1</b>
Modbus RTU Serial Communications. . . . .	4-2
Modbus RTU Communications Interface. . . . .	4-2
Modbus RTU Connections. . . . .	4-3
Single SR35 RS-485 network . . . . .	4-3
Multiple SR35 RS-485 network . . . . .	4-3

Modbus Communications Configuration . . . . .	4-3
Transmission Modes . . . . .	4-3
Message Structure For RTU Mode . . . . .	4-4
Address . . . . .	4-4
Function Code . . . . .	4-4
Data Field . . . . .	4-4
CRC . . . . .	4-4
Supported Functions. . . . .	4-5
Read Holding Registers . . . . .	4-5
Write Single Register. . . . .	4-5
Write Multiple Registers . . . . .	4-6
Memory Map . . . . .	4-6
Message Timing . . . . .	4-7
Modbus Parameter Values. . . . .	4-7
Special Modbus Registers . . . . .	4-8
Window registers. . . . .	4-8
Memory Probes . . . . .	4-12
Modbus PNU Alphabetical Cross Reference . . . . .	4-13
Chapter 5: Accessories. . . . .	5-1
Finger Guards (SR35-FG-1 and SR35-FG-2) . . . . .	5-2
Tools required. . . . .	5-2
Steps for installation . . . . .	5-2
Removal . . . . .	5-4
Terminal Covers (SR35-TC-3) . . . . .	5-5
Fan (SR35-Fan 1) . . . . .	5-6
Installation . . . . .	5-6
Fan (SR35-Fan-2). . . . .	5-8
Power Supply (SR35-PSU) . . . . .	5-10
Connections . . . . .	5-11
Control Terminal Functions . . . . .	5-11
Wiring Specifications. . . . .	5-11
Ambient Operating Temperature . . . . .	5-11
2-Wire Control Using the SR35-PSU . . . . .	5-12
Expansion Module (SR35-AUX-IO) . . . . .	5-13
Introduction. . . . .	5-13
Installation . . . . .	5-13
SR35-AUX-IO Connections . . . . .	5-16
Programming (For Use with SR35 Models). . . . .	5-18
Remote Keypad (SR35-KPD-REM) . . . . .	5-22
Connection and Operation . . . . .	5-22
Initial Power-Up. . . . .	5-24
Selecting Units to Monitor/Configure . . . . .	5-26
Installation . . . . .	5-27
Appendix A: Updating Firmware . . . . .	A-1
Updating SR35 Firmware . . . . .	A-2
Update Procedure . . . . .	A-2

<i>Instruction for Updating</i> . . . . .	A-2
<i>Appendix B: Soft Starter Application Considerations</i> . . . . .	B-1
<i>Motor Suitability and Associated Considerations</i> . . . . .	B-2
<i>Suitability</i> . . . . .	B-2
<i>Induction Motor Characteristics</i> . . . . .	B-2
<i>Rating</i> . . . . .	B-2
<i>Maximum Motor Cable Length</i> . . . . .	B-3
<i>Power Factor Correction Capacitors</i> . . . . .	B-3
<i>Lightly Loaded, Small Motors</i> . . . . .	B-3
<i>Motors Fitted with Integral Brakes</i> . . . . .	B-3
<i>Older Motors</i> . . . . .	B-3
<i>Wound-rotor or Slip-ring Motors</i> . . . . .	B-3
<i>Enclosures</i> . . . . .	B-3
<i>EU Compliance with the EMC Directive</i> . . . . .	B-3
<i>Fuses</i> . . . . .	B-4
<i>Rules for Specific Applications</i> . . . . .	B-4
<i>High Inertia Loads</i> . . . . .	B-4
<i>Frequent Starting</i> . . . . .	B-4
<i>Soft-Stopping</i> . . . . .	B-4
<i>Reversing Configuration</i> . . . . .	B-4
<i>Replacement of Fluid Couplings</i> . . . . .	B-4
<i>Two-speed Motor Applications</i> . . . . .	B-5
<i>Application Table</i> . . . . .	B-5
<i>Concepts and principles of fixed-speed induction motor starting and control</i> . . . . .	B-7
<i>Introduction</i> . . . . .	B-7
<i>The Induction Motor</i> . . . . .	B-7
<i>Torque/Speed Curve – Induction Motor</i> . . . . .	B-8
<i>Torque/Speed Curve – Coupled Load</i> . . . . .	B-8
<i>Torque/Speed Curve – Accelerating Torque</i> . . . . .	B-9
<i>Torque/Speed Curve – High Starting Torque</i> . . . . .	B-9
<i>Starting Induction Motors</i> . . . . .	B-10
<i>Electro-Mechanical Methods Of Starting</i> . . . . .	B-10
<i>The Semiconductor Motor Controller</i> . . . . .	B-11
<i>Running Induction Motors</i> . . . . .	B-12
<i>Reliability Considerations</i> . . . . .	B-14
<i>Appendix B Glossary of Terms</i> . . . . .	B-15
<i>Appendix C: Sizing an SR35 Soft Starter</i> . . . . .	C-1
<i>SR35 Soft Starter Selection Steps</i> . . . . .	C-2