

FAN (SR35-FAN-1)



SR35-FAN-1

Increases the number of starts to 40/hour. The fan operates automatically during a soft start or soft stop and will continue to run if the heatsink temperature is $> 45^{\circ}\text{C}$. The fan stops when the heatsink temperature has fallen below 40°C .

Fan Model	Soft Starter Model
<i>SR35-FAN-1</i>	SR35-017 SR35-022 SR35-027 SR35-034 SR35-041 SR35-052 SR35-065

INSTALLATION

