

# Table of Contents

---

## Chapter 1: Introduction

<b>Manual Overview</b> .....	<b>1-2</b>
Overview of this Manual .....	1-2
Other Reference Materials .....	1-2
Who Should Read This Manual .....	1-2
Technical Support .....	1-2
Key Topics for Each Chapter .....	1-3
<b>Ethernet Base Controller Overview</b> .....	<b>1-4</b>
I/O Values Stored in Cache Memory .....	1-4
Industry Standard Ethernet .....	1-5
T1H-EBC/T1H-EBC100 .....	1-5
RS-232C Serial Port .....	1-5

## Chapter 2: Installation and Setup

<b>Installing the Ethernet Base Controller</b> .....	<b>2-2</b>
<b>Setting the Node Address</b> .....	<b>2-3</b>
Several Methods for Setting Node Address .....	2-3
Setting the Node Address Using the Rotary Switches .....	2-3
Setting Node Address with Software Tool .....	2-3
<b>10BaseT / 100BaseT Network Cabling</b> .....	<b>2-4</b>
10BaseT/100BaseTconnections .....	2-4
Serial Port (RS-232) .....	2-5
<b>Maximum 10BaseT / 100BaseT Cable Length</b> .....	<b>2-5</b>
<b>T1H-EBC Ethernet Base Controller Specifications</b> .....	<b>2-6</b>
<b>T1H-EBC100 Ethernet Base Controller Specifications</b> .....	<b>2-7</b>
<b>LED Indicators and Hot Swapping I/O Modules</b> .....	<b>2-8</b>
Check External 24VDC Wiring Before Hot Swapping .....	2-9
Hot Swap: I/O Module Replacement .....	2-9
<b>Ethernet Standards</b> .....	<b>2-10</b>

## Chapter 3: Configuring the T1H-EBC(100) Using NetEdit3

<b>NetEdit3 Software</b> .....	<b>3-2</b>
Installing NetEdit3 .....	3-2
Launching NetEdit3 .....	3-3
The NetEdit3 Screen .....	3-3
Adding Network Protocol Support to the NetEdit3 PC .....	3-4

---

<b>Using NetEdit3</b> .....	<b>3-5</b>
Ethernet Communication Protocol .....	3-5
Ethernet Address .....	3-6
Module Type, IP Address and ID .....	3-6
Module Info>General Information .....	3-7
Module Info>Ethernet Stats .....	3-7
EBC Settings .....	3-7
EBCSettings>Configuration>General .....	3-8
IP Address .....	3-8
EBC Settings>Configuration>Serial Port .....	3-8
EBC Settings>Utils>Show Base Contents .....	3-10
EBC Settings>Firmware .....	3-10
FileMenu>Live Update .....	3-11
F / B / C Columns .....	3-11
<b>Locating the MAC Address Label</b> .....	<b>3-12</b>
MAC Address .....	3-12

## Chapter 4: MODBUS® TCP/IP for T1H-EBC100

<b>MODBUS TCP/IP</b> .....	<b>4-2</b>
Client / Server Model .....	4-2
Protocol Description .....	4-2
<b>Supported MODBUS Function Codes</b> .....	<b>4-4</b>
<b>MODBUS 584/984 Addressing</b> .....	<b>4-5</b>
<b>MODBUS 584/984 Addressing for Function Code 3 Clients</b> .....	<b>4-6</b>
<b>T1H-EBC100 System Memory</b> .....	<b>4-7</b>
<b>Current / Last State Error Codes</b> .....	<b>4-10</b>
<b>Extended Error Codes</b> .....	<b>4-10</b>
<b>Analog Input Module Configuration</b> .....	<b>4-11</b>
<b>Analog Output Module Configuration</b> .....	<b>4-11</b>

## Chapter 5: T1H-EBC100 DHCP & HTML Configuration

<b>T1H-EBC100 DHCP</b> .....	<b>5-2</b>
<b>Disabling DHCP and Assigning a Static IP Address</b> .....	<b>5-2</b>
<b>Using HTML Configuration</b> .....	<b>5-3</b>
Connecting to the T1H-EBC100 .....	5-3

## Appendix A: Using the T1H-EBC(100) with Think & DO

<b>Mapping T1H-EBC(100) I/O Points</b> .....	<b>A-2</b>
Launching Connectivity Center Tool .....	A-2
Connecting to the EBC .....	A-2
Mapping I/O Points to Data Items .....	A-2
<b>Hot Swap Setup</b> .....	<b>A-3</b>
Hot Swap: Automatic Mode .....	A-3
Hot Swap: Manual Mode Reset .....	A-3
<b>Analog I/O Module Configuration</b> .....	<b>A-4</b>
<b>I/O Module Status Word / Bits</b> .....	<b>A-4</b>
<b>Using EZTouch/EZText Panel with the RJ-12 Serial Port</b> .....	<b>A-5</b>
Adding Operator Interface Device .....	A-5
Using Monitor I/O to Verify Panel Operation .....	A-6

## Appendix B: Using the T1H-EBC(100) with KEPDirect OPC Server

<b>Introduction to KEPDirect</b> .....	<b>B-2</b>
Introduction to OPC .....	B-2
DDE Support .....	B-2
KEPDirect .....	B-2
<b>KEPDirect Project: Adding and Configuring a Channel</b> .....	<b>B-4</b>
Running the Server .....	B-4
Adding a Channel .....	B-4
Selecting the Device Driver .....	B-5
Selecting the Network Adapter .....	B-5
Setting the Server Writes Optimizations .....	B-6
Saving the New Channel Settings .....	B-7
Using Multiple Channels in a Project .....	B-7
<b>KEPDirect Project: Adding and Configuring a Device</b> .....	<b>B-8</b>
Adding a Device .....	B-8
Selecting the Device Model .....	B-8
Setting the Device Timeout Properties .....	B-9
Automatic OPC Tag Database Generation .....	B-10
Saving the New Device Settings .....	B-10
<b>KEPDirect Project: Adding Tags to the Project</b> .....	<b>B-11</b>
User Defined Tags .....	B-11
Creating a User Define Tag .....	B-13
<b>T1H-EBC(100) I/O Addressing</b> .....	<b>B-14</b>
T1H-EBC(100) I/O Addressing Example .....	B-14
<b>Analog Output Module Configuration</b> .....	<b>B-15</b>

## **Appendix C: Using the KEPDirect OPC Quick Client**

<b>Creating a KEPDirect Quick Client Project</b> .....	<b>C-2</b>
Connecting the Client to the OPC Server .....	C-2
Creating a Client Group .....	C-2
Selecting a Group Item .....	C-3
Item Operations .....	C-4
<b>Using the RJ12 Serial Port in ASCII Mode</b> .....	<b>C-5</b>

## **Appendix D: T1H-EBC100 Analog Module Addressing - Modbus TCP**

T1H-EBC100 Analog Module Addressing - Modbus TCP .....	D-2
--	-----

## **Appendix E: T1H-EBC(100) Analog Module Addressing - H2/4-ERM(100)**

T1H-EBC(100) Analog Module Addressing - H2/4-ERM(100) .....	E-2
---	-----