

Table of Contents

Chapter 1: Introduction

| | |
|---|------------|
| Manual Overview | 1-2 |
| Overview of this Manual | 1-2 |
| Supplemental Manuals | 1-2 |
| Who Should Read this Manual | 1-2 |
| Technical Support | 1-2 |
| Symbols Used | 1-3 |
| Key Topics for Each Chapter | 1-3 |
| Introduction to Profibus | 1-4 |
| PROFIBUS Concepts | 1-4 |
| PROFIBUS International | 1-4 |
| PROFIBUS Trade Organization | 1-4 |
| DP Communication Profile | 1-5 |
| Terminator I/O System | 1-6 |
| T1H-Profibus Base Controller | 1-7 |
| T1H-PBC Base Controller Features | 1-7 |
| Mini Glossary | 1-8 |

Chapter 2: Installation and Setup

| | |
|---|-------------|
| Installing the T1H-PBC | 2-2 |
| Mounting on DIN Rail | 2-2 |
| Connecting the Controller to a Power Supply | 2-2 |
| Assembling the I/O Modules and Bases | 2-3 |
| Connecting the Components on the DIN Rail | 2-3 |
| Removing I/O Modules from the Base | 2-4 |
| Serial Port (RS-232) | 2-5 |
| DIP Switch Settings | 2-5 |
| The Profibus Network | 2-6 |
| Wiring the Controller to a PROFIBUS Network | 2-6 |
| Setting the Node Address | 2-10 |
| Status Indicators | 2-10 |
| Hot-Swapping I/O Modules | 2-11 |
| Check External 24VDC Wiring Before Hot-Swapping | 2-11 |
| Hot-Swap: I/O Module Replacement | 2-11 |
| Configuring the Controller | 2-12 |
| GSD File | 2-12 |
| T1H-PBC Configuration | 2-12 |
| Master/Slave Communications | 2-13 |
| Terminator I/O Backplane Communications | 2-14 |
| T1H-PBC Memory Map | 2-14 |
| T1H-PBC Memory Map | 2-14 |
| Terminator I/O Memory Map | 2-14 |
| Calculate I/O Memory Consumption | 2-15 |

Appendix A: Specifications

| | |
|--|-----|
| T1H–PBC Profibus Base Controller | A–2 |
| General Specifications | A–2 |
| Cable Specifications | A–3 |

Appendix B: T1H–PBC Profibus DP Base Controller GSD File

| | |
|--|-----|
| T1H–PBC Profibus DP Base Controller GSD File | B–2 |
|--|-----|

Appendix C: Terminator I/O Modules

| | |
|---------------------------------------|-----|
| Terminator Discrete I/O Modules | C–2 |
| Terminator Analog I/O Modules | C–2 |
| Terminator Specialty Modules | C–2 |

Appendix D: Think & Do Profibus Network Setup with the T1H–PBC

| | |
|--|------|
| Think & Do Profibus Network Setup with T1H–PBC | D–2 |
| Getting the T & D Network Started | D–2 |
| T & D Studio setup for PC control | D–2 |
| Hot–Swap Setup | D–10 |
| Hot–Swap: Automatic Mode | D–10 |
| Hot–Swap: Manual Mode Reset | D–10 |

Appendix E: Siemens Profibus Network Set up with T1H–PBC

| | |
|---|------|
| Setup a T1H–PBC on Siemens Profibus Network | E–2 |
| Simantic Manager | E–2 |
| Hot–Swap Setup | E–12 |
| Hot–Swap: Automatic Mode | E–12 |
| Hot–Swap: Manual Mode Reset | E–12 |

Appendix F: T1H–PBC Profibus Extended Diagnostics Error Format

| | |
|--|-----|
| Profibus Extended Diagnostics Error Format | F–2 |
|--|-----|