



TABLE OF CONTENTS

Table of Contents

Chapter 1 - Getting Started

Introduction	1-2
The Purpose of this Manual.....	1-2
Supplemental Manuals.....	1-2
Technical Support.....	1-2
Conventions Used	1-3
Key Topics for Each Chapter.....	1-3
Physical Characteristics	1-3
Analog Input Module Terminology	1-4
Analog Output Module Terminology	1-5
Selecting the Appropriate Module	1-6
Wide Variety of Modules.....	1-6
Diagnostic Features	1-6
Analog Made Easy – Four Steps	1-9

Chapter 2 - F2-04AD-1, F2-04AD-1L 4-Channel Analog Current Input

Module Specifications	2-2
F2-04AD-1.....	2-2
Analog Input Configuration Requirements	2-4
Special Placement Requirements (D2-230 and Remote I/O Bases).....	2-4
Setting the Module Jumpers	2-6
Selecting the Number of Channels.....	2-6
Connecting the Field Wiring	2-7

Wiring Guidelines	2-7
User Power Supply Requirements	2-7
Current Loop Transmitter Impedance	2-8
Wiring Diagram.....	2-9
Module Operation	2-10
Channel Scanning Sequence (Multiplexing) for a D2-230 CPU	2-10
Channel Scanning Sequence (Pointer method) for D2-240, D2-250-1, D2-260 or D2-262 CPU.....	2-11
Analog Module Updates.....	2-11
Understanding the Input Assignments.....	2-12
Analog Data Bits.....	2-12
Active Channel Indicator Inputs.....	2-13
Module Diagnostic Inputs	2-13
Module Resolution	2-13
Writing the Control Program.....	2-14
Reading Values: Pointer Method and Multiplexing	2-14
Pointer Method for D2-240, D2-250-1, D2-260 and D2-262	2-14
Reading Values (Multiplexing) for D2-230, D2-240, D2-250-1, D2-260 and D2-262 CPUs.....	2-16
Single Channel Selected	2-16
Analog Power Failure Detection.....	2-17
Scaling the Input Data	2-17
The Conversion Program.....	2-18
Analog and Digital Value Conversions	2-18
Filtering Input Noise for D2-250-1, D2-260 and D2-262 CPUs Only	2-19
Chapter 3 - F2-04AD-2, F2-04AD-2L 4-Channel Analog Voltage Input	
Module Specifications	3-2
F2-04AD-2.....	3-2
F2-04AD-2L is Obsolete.....	3-2
Analog Input Configuration Requirements	3-2
Special Placement Requirements (D2-230 and Remote I/O Bases).....	3-4
Setting the Module Jumpers	3-5
Selecting the Number of Channels.....	3-5
Selecting the Input Signal Range.....	3-6

Connecting the Field Wiring	3-7
Wiring Guidelines	3-7
User Power Supply Requirements	3-7
Custom Input Ranges	3-8
Wiring Diagram	3-9
Module Operation	3-10
Channel Scanning Sequence (Multiplexing) for a D2-230 CPU	3-10
Channel Scanning Sequence (Pointer method) for D2-240, D2-250-1, D2-260 or D2-262 CPUs	3-11
Analog Module Updates	3-11
Understanding Input Assignments	3-12
Analog Data Bits	3-12
Active Channel Indicator Inputs	3-13
Module Diagnostic and Sign Inputs	3-13
Module Resolution	3-14
Writing the Control Program	3-15
Reading Values: Pointer Method and Multiplexing	3-15
Pointer Method for the D2-240, D2-250-1, D2-260 and D2-262 CPUs	3-15
Using Bipolar Ranges (Pointer Method) for D2-240, D2-250-1, D2-260 and D2-262 CPUs	3-17
Reading Values (Multiplexing) for D2-230, D2-240, D2-250-1, D2-260 and D2-262 CPUs	3-18
Single Channel Selected	3-19
Using Bipolar Ranges (Multiplexing)	3-19
Using 2's Complement (Multiplexing) for D2-230, D2-240, D2-250-1, D2-260 and D2-262 CPUs	3-20
Analog Power Failure Detection	3-21
Scaling the Input Data	3-21
The Conversion Program	3-22
Analog and Digital Value Conversions	3-22
Filtering Input Noise for D2-250-1, D2-260 and D2-262 CPUs	3-23
 Chapter 4 - F2-08AD-1, 8-Channel Analog Current Input	
Module Specifications	4-2
Firmware Requirements:	4-2

Table of Contents

Analog Input Configuration Requirements	4-2
Special Placement Requirements (D2-230 and Remote I/O Bases).....	4-4
Setting the Module Jumpers	4-5
Selecting the Number of Channels.....	4-5
Connecting the Field Wiring	4-6
Wiring Guidelines	4-6
User Power Supply Requirements	4-6
Current Loop Transmitter Impedance.....	4-7
Wiring Diagram.....	4-8
Module Operation	4-9
Channel Scanning Sequence (Multiplexing) for a D2-230 CPU	4-9
Channel Scanning Sequence (Pointer method) for D2-240, D2-250-1, D2-260 or D2-262 CPUs	4-10
Analog Module Updates.....	4-10
Understanding the Input Assignments.....	4-11
Analog Data Bits.....	4-11
Active Channel Indicator Inputs.....	4-12
Module Diagnostic Inputs	4-12
Module Resolution	4-12
Writing the Control Program.....	4-13
Reading Values: Pointer Method and Multiplexing	4-13
Pointer Method for D2-240, D2-250-1, D2-260 and D2-262 CPUs	4-13
Reading Values (Multiplexing) for D2-230, D2-240, D2-250-1, D2-260 and D2-262 CPUs	4-15
Single Channel Selected	4-15
Analog Power Failure Detection.....	4-16
Scaling the Input Data	4-16
The Conversion Program.....	4-17
Analog and Digital Value Conversions	4-17
Filtering Input Noise for D2-250-1, D2-260 and D2-262CPUs.....	4-18

Chapter 5 - F2-08AD-2 8-Channel Analog Voltage Input

Module Specifications	5-2
Firmware Requirements:.....	5-2
Analog Input Configuration Requirements	5-2
Special Placement Requirements (D2-230 and Remote I/O Bases).....	5-4

Setting the Module Jumpers	5-5
Selecting the Number of Channels.....	5-5
Selecting the Input Voltage	5-6
Connecting the Field Wiring	5-7
Wiring Guidelines	5-7
User Power Supply Requirements	5-7
Wiring Diagram.....	5-8
Module Operation	5-9
Channel Scanning Sequence (Multiplexing) for a D2-230 CPU	5-9
Channel Scanning Sequence (Pointer method) for D2-240, D2-250-1, D2-260 or D2-262 CPUs	5-10
Analog Module Updates.....	5-10
Understanding the Input Assignments.....	5-11
Analog Data Bits.....	5-11
Active Channel Indicator Inputs.....	5-12
Module Resolution	5-13
Writing the Control Program	5-14
Reading Values: Pointer Method and Multiplexing	5-14
Pointer Method for D2-240, D2-250-1, D2-260 and D2-262 CPUs	5-14
Using Bipolar Ranges (Pointer Method) for D2-240, D2-250-1, D2-260 and D2-262 CPUs.....	5-16
Reading Values (Multiplexing) for D2-230, D2-240, D2-250-1, D2-260 and D2-262 CPUs	5-17
Single Channel Selected	5-18
Using Bipolar Ranges (Multiplexing).....	5-18
Using 2's Complement (Multiplexing) for D2-230, D2-240, D2-250-1, D2-260 and D2-262 CPUs.....	5-19
Analog Power Failure Detection.....	5-20
Scaling the Input Data	5-20
The Conversion Program.....	5-21
Analog and Digital Value Conversions	5-21
Filtering Input Noise for D2-250-1, D2-260 and D2-262 CPUs.....	5-22

Chapter 6 - F2-04RTD 4-Channel RTD Input

Module Specifications	6-2
Module Calibration	6-2
RTD Input Configuration Requirements.....	6-2
Input Specifications	6-3
Special Placement Requirements (D2-230 and Remote I/O Bases).....	6-4
Setting the Module Jumpers	6-5
Jumper Locations.....	6-5
Selecting the Number of Channels.....	6-5
Setting Input Type.....	6-5
Selecting the Conversion Units.....	6-6
Connecting the Field Wiring	6-7
Wiring Guidelines	6-7
RTD - Resistance Temperature Detector.....	6-7
Ambient Variations in Temperature.....	6-8
Wiring Diagram.....	6-8
Module Operation	6-9
Channel Scanning Sequence (Multiplexing) for a D2-230 CPU	6-9
Channel Scanning Sequence (Pointer Method) for D2-240, D2-250-1, D2-260 or D2-262 CPUs	6-10
Analog Module Updates.....	6-10
Writing the Control Program	6-11
Reading Values: Pointer Method and Multiplexing	6-11
Pointer Method for the D2-240, D2-250-1, D2-260 or D2-262 CPUs.....	6-11
Negative Temperature Readings with Magnitude Plus Sign (Pointer Method) for the D2-240, D2-250-1, D2-260 or D2-262 CPUs	6-13
Magnitude Plus Sign (Binary)	6-14
Magnitude Plus Sign (BCD).....	6-14
Negative Temperatures 2's Complement (Binary/Pointer Method) for the D2-240, D2-250-1, D2-260 or D2-262 CPUs	6-15
Understanding the Input Assignments (Multiplexing Ladder Only)	6-15
Analog Data Bits.....	6-16
Active Channel Bits.....	6-16
Broken Transmitter Bits (Multiplexing Ladder Methods).....	6-16

Reading Magnitude Plus Sign Values (Multiplexing)	6-17
Reading 2's Compliment Values (Multiplexing)	6-18
Scaling the Input Data	6-18
Filtering Input Noise (D2-250-1, D2-260 and D2-262 CPUs Only)	6-19

Chapter 7 - F2-04THM 4-Channel Thermocouple Input

Module Specifications	7-2
Module Calibration	7-4
Thermocouple Input Configuration Requirements	7-4
Special Placement Requirements (D2-230 and Remote I/O Bases)	7-5
Setting the Module Jumpers	7-6
Jumper Locations	7-6
Calibrate Enable	7-6
Selecting the Number of Channels	7-7
Setting Input Type	7-7
Selecting the Conversion Units	7-8
Thermocouple Conversion Units	7-8
Voltage Conversion Units	7-8
Connecting the Field Wiring	7-9
Wiring Guidelines	7-9
User Power Supply Requirements	7-9
Thermocouples	7-10
Ambient Variations in Temperature	7-10
Wiring Diagrams	7-11
Module Operation	7-13
Channel Scanning Sequence (Multiplexing) for a D2-230 CPU	7-13
Channel Scanning Sequence (Pointer Method) for D2-240, D2-250-1, D2-260 and D2-262 CPUs	7-14
Analog Module Updates	7-14
Writing the Control Program	7-15
Reading Values Pointer Method and Multiplexing	7-15
Pointer Method for the D2-240, D2-250-1, D2-260 and D2-262 CPUs	7-15
Negative Temperature Readings with Magnitude Plus Sign (Pointer Method) for D2-240, D2-250-1, D2-260 and D2-262 CPUs	7-17
Magnitude Plus Sign (Binary)	7-17

Magnitude Plus Sign (BCD).....	7-18
Negative Temperatures 2's Complement (Binary/Pointer Method) for D2-240, D2-250-1, D2-260 and D2-262 CPUs.....	7-19
Understanding the Input Assignments (Multiplexing Ladder Only)	7-19
Analog Data Bits.....	7-20
Active Channel Bits.....	7-20
Broken Transmitter Bits (Pointer and Multiplexing Ladder Methods)	7-20
Reading Magnitude Plus Sign Values (Multiplexing).....	7-21
Reading 2's Compliment Values (Multiplexing)	7-22
Scaling the Input Data	7-22
Module Resolution 16-Bit (Unipolar Voltage Input)	7-23
Module Resolution 15-Bit Plus Sign(Bipolar Voltage Input).....	7-23
Analog and Digital Value Conversions	7-24
Filtering Input Noise (D2-250-1, D2-260 and D2-262 CPUs Only)	7-25

Chapter 8 - F2-02DA-1,F2-02DA-1L 2-Channel Analog Current Output

Module Specifications	8-2
Analog Output Configuration Requirements	8-2
Special Placement Requirements (D2-230 and Remote I/O Bases).....	8-4
Connecting and Disconnecting the Field Wiring	8-5
Wiring Guidelines	8-5
User Power Supply Requirements	8-5
Wiring Diagram.....	8-6
Load Range	8-6
Module Operation	8-7
Channel Scanning Sequence (Multiplexing) for a D2-230 CPU	8-7
Channel Scanning Sequence (Pointer Method) for D2-240, D2-250-1, D2-260 and D2-262 CPUs	8-8
Understanding the Output Assignments.....	8-9
Channel Select Outputs.....	8-9
Analog Data Bits.....	8-10
Module Resolution	8-10
Writing the Control Program	8-11
Writing Values: Pointer Method and Multiplexing	8-11
Pointer Method for the D2-240, D2-250-1, D2-260 and D2-262 CPUs.....	8-11
Writing Data (Multiplexing).....	8-13

Write Data to One Channel.....	8-14
Write Data to Both Channels.....	8-14
Calculating the Digital Value	8-15
Analog and Digital Value Conversions	8-15
The Conversion Program.....	8-16

Chapter 9 - F2-02DA-2, F2-02DA-2L, 2-Channel Analog Voltage Output

Module Specifications	9-2
Analog Output Configuration Requirements	9-2
Special Placement Requirements (D2-230 and Remote I/O Bases).....	9-4
Setting the Module Jumpers	9-5
Voltage Range and Output Combinations	9-6
Connecting and Disconnecting the Field Wiring	9-8
Wiring Guidelines	9-8
User Power Supply Requirements	9-8
Wiring Diagram.....	9-9
Module Operation	9-10
Channel Scanning Sequence (Multiplexing) for a D2-230 CPU	9-10
Channel Scanning Sequence (Pointer Method) for D2-240, D2-250-1, D2-260 and D2-262 CPUs	9-11
Understanding the Output Assignments.....	9-12
Channel Select Outputs.....	9-12
Analog Data Bits.....	9-13
Signal Sign Output.....	9-13
Bipolar Output Data.....	9-13
Module Resolution	9-14
Writing the Control Program.....	9-15
Calculating the Digital Value	9-15
The Conversion Program.....	9-16
Negative Values with Bipolar Range	9-17
Writing Values: Pointer Method and Multiplexing	9-18
Writing Values (Pointer Method) for D2-240, D2-250-1, D2-260 and D2-262 CPUs.....	9-18
Writing Data (Multiplexing).....	9-20

Write Data to One Channel	9-22
Write Data to Both Channels	9-22
Analog and Digital Value Conversions	9-23

Chapter 10 - F2-08DA-1, 8-Channel Analog Current Output

Module Specifications	10-2
Firmware Requirements:	10-2
Analog Output Configuration Requirements	10-2
Special Placement Requirements (D2-230 and Remote I/O Bases).....	10-4
Connecting and Disconnecting the Field Wiring	10-5
Wiring Guidelines	10-5
User Power Supply Requirements	10-5
Wiring Diagram.....	10-6
Load Range	10-6
Module Operation	10-7
Channel Scanning Sequence (Multiplexing) for a D2-230 CPU	10-7
Channel Scanning Sequence (Pointer Method) for D2-240, D2-250-1, D2-260 and D2-262 CPUs	10-8
Understanding the Output Assignments.....	10-8
Channel Select Outputs.....	10-9
Analog Data Bits.....	10-10
Output Enable.....	10-10
Module Resolution	10-10
Writing the Control Program	10-11
Calculating the Digital Value	10-11
The Conversion Program.....	10-11
Writing Values: Pointer Method and Multiplexing	10-12
Pointer Method for the D2-240, D2-250-1, D2-260 and D2-262 CPUs.....	10-12
Writing Data (Multiplexing Example)	10-14
Write Data (Multiplexing Example) Continued	10-15
Write Data to One Channel.....	10-16
Analog and Digital Value Conversions	10-16

Chapter 11 - F2-08DA-2, 8-Channel Analog Voltage Output

Module Specifications	11-2
Firmware Requirements:.....	11-2
Analog Output Configuration Requirements	11-3
Special Placement Requirements (D2-230 and Remote I/O Bases).....	11-4
Setting the Module Jumpers	11-5
Voltage Range and Output Combinations	11-5
Connecting the Field Wiring	11-6
Wiring Guidelines.....	11-6
User Power Supply Requirements	11-6
Wiring Diagram.....	11-7
Module Operation	11-8
Channel Update Sequence (Multiplexing) for a D2-230 CPU	11-8
Channel Update Sequence (Pointer Method) for D2-240, D2-250-1, D2-260 and D2-262 CPUs.....	11-9
Understanding the Output Assignments.....	11-10
Channel Select Outputs.....	11-10
Analog Data Bits.....	11-11
Output Enable.....	11-11
Module Resolution	11-11
Writing the Control Program	11-12
Calculating the Digital Value	11-12
The Conversion Program.....	11-13
Writing Values: Pointer Method and Multiplexing	11-14
Pointer Method for the D2-240, D2-250-1, D2-260 and D2-262 CPUs.....	11-14
Writing Data Example (Multiplexing)	11-16
Writing Data Example (Multiplexing) continued.....	11-17
Write Data to One Channel.....	11-18
Analog and Digital Value Conversions	11-18

Chapter 12 - F2-02DAS-1, 4–20 mA Isolated 2-Channel Analog Current Output

Module Specifications	12-2
Firmware Requirements:.....	12-2
Waiting for correct voltage values from Fuel.....	12-2

Table of Contents

Analog Output Configuration Requirements	12-3
Waiting for correct voltage values from Fuel.....	12-3
Special Placement Requirements (D2-230 and Remote I/O Bases).....	12-4
Connecting the Field Wiring	12-5
Wiring Guidelines	12-5
Loop Power Supply Requirements	12-5
Wiring Diagram.....	12-6
Module Operation	12-7
Channel Update Sequence (Multiplexing) for a D2-230 CPU	12-7
Channel Update Sequence (Pointer Method) for D2-240, D2-250-1, D2-260 and D2-262 CPUs	12-8
Understanding the Output Assignments.....	12-9
Channel Select Outputs.....	12-9
Analog Data Bits.....	12-10
Module Resolution	12-10
Writing the Control Program.....	12-11
Calculating the Digital Value	12-11
Engineering Units Conversion.....	12-12
Writing Values: Pointer Method and Multiplexing	12-13
Pointer Method for D2-240, D2-250-1, D2-260 and D2-262 CPUs	12-13
Write Data Example (Multiplexing).....	12-15
Write Data to One Channel.....	12-16
Write the same Data to Both Channels.....	12-16
Analog and Digital Value Conversions	12-17
Chapter 13 - F2-02DAS-2, 0-5V, 0-10V, 2-Channel Isolated Analog Output	
Module Specifications	13-2
Firmware Requirements:.....	13-2
Analog Output Configuration Requirements	13-3
Special Placement Requirements (D2-230 and Remote I/O Bases).....	13-4
Setting the Module Jumpers	13-5
Connecting the Field Wiring	13-6
Wiring Guidelines	13-6

Transmitter Power Supply Requirements	13-6
Wiring Diagram.....	13-7
Module Operation	13-8
Channel Update Sequence (Multiplexing) for a D2-230 CPU	13-8
Channel Update Sequence (Pointer Method) for D2-240, D2-250-1, D2-260 and D2-262 CPUs	13-9
Understanding the Output Assignments.....	13-9
Channel Select Outputs.....	13-10
Analog Data Bits.....	13-10
Module Resolution	13-11
Writing the Control Program.....	13-12
Calculating the Digital Value	13-12
Engineering Units Conversion.....	13-13
Writing Values: Pointer Method and Multiplexing	13-14
Pointer Method for the D2-240, D2-250-1, D2-260 and D2-262 CPUs.....	13-14
Write Data Example (Multiplexing).....	13-16
Write Data to One Channel.....	13-17
Write the same Data to Both Channels.....	13-17
Analog and Digital Value Conversions	13-18

Chapter 14 - F2-4AD2DA, 4-Ch. In / 2-Ch. Out Analog Combination

Module Specifications	14-2
Combination Analog Configuration Requirements	14-3
Special Placement Requirements (D2-230 and Remote I/O Bases).....	14-4
Connecting the Field Wiring	14-5
Wiring Guidelines.....	14-5
Loop Power Supply Requirements	14-5
Current Loop Transmitter Impedance.....	14-6
Wiring Diagram.....	14-7
Module Operation	14-8
Input Channel Scanning Sequence (Multiplexing) for a D2-230 CPU	14-8
Input Channel Scanning Sequence (Pointer Method) for D2-240, D2-250-1, D2-260 and D2-262 CPUs.....	14-8
Output Channel Update Sequence (Multiplexing) for a D2-230 CPU	14-9

Output Channel Update Sequence (Pointer Method) for D2-240, D2-250-1, D2-260 and D2-262 CPUs.....	14-9
Understanding the I/O Assignments.....	14-10
Input Data Bits	14-10
Active Channel Indicator Bits.....	14-11
Diagnostic Indicator Inputs	14-11
Output Data Bits	14-11
Output Channel Selection Bits.....	14-12
Module Resolution	14-12
Writing the Control Program.....	14-13
Analog Input Failure Detection.....	14-13
Calculating the Digital Value	14-13
Scaling the Input Data	14-15
Read / Write Program (Pointer Method) for D2-240, D2-250-1, D2-260 and D2-262 CPUs.....	14-16
Read Input Values (Multiplexing).....	14-18
Single Input Channel Selected (Multiplexing).....	14-19
Write Output Values (Multiplexing)	14-19
Write Data to One Channel.....	14-20
Write the same Data to Both Channels.....	14-20
Analog and Digital Value Conversions	14-20
Filtering Input Noise (D2-250-1, D2-260 and D2-262 CPUs Only).....	14-21
Chapter 15 - F2-8AD4DA-1, 8-Ch. In / 4-Ch. Out Analog Current Combination	
Module Specifications	15-2
F2-8AD4DA-1 Requirements.....	15-2
Module Placement and Configuration Requirements.....	15-5
Connecting the Field Wiring	15-6
Wiring Guidelines.....	15-6
User Power Supply Requirements	15-6
Current Loop Transmitter Impedance.....	15-7
Wiring Diagram.....	15-8

Module Operation	15-9
Input Channel Scanning Sequence (Pointer Method).....	15-9
Output Channel Update Sequence (Pointer Method).....	15-10
Understanding the I/O Assignments.....	15-11
Input Data Bits	15-12
Output Data Bits	15-12
Special V-Memory Locations	15-13
Module Configuration Registers	15-13
Number of I/O Channels Enabled & Data Format	15-14
Input Track and Hold Selection Bits	15-15
Writing the Control Program	15-16
Configuring the Module to Read/Write I/O (Pointer Method) for D2-250-1, D2-260 and D2-262.....	15-16
Module Configuration Example 1:.....	15-17
Module Configuration Example 2:.....	15-18
Module Configuration Example 3:.....	15-19
Module 12 Bit Input Resolution.....	15-20
Module 14 Bit Input Resolution.....	15-20
Module 16 Bit Input Resolution.....	15-20
Analog and Digital Input Data Value Conversion	15-21
Input Value Comparisons: Analog, Digital, Engineering Units	15-21
Scaling the Input Data	15-22
Scaling Example	15-22
Input Engineering Unit Conversion Example 1:	15-23
Input Engineering Unit Conversion Example 2:	15-23
Input Engineering Unit Conversion Example 3:	15-24
Input Engineering Unit Conversion Example 4:	15-25
Using the Input Track and Hold Feature	15-25
Track and Hold Example:.....	15-26
Module 16 Bit Output Resolution.....	15-27
Digital and Analog Output Data Value Conversion	15-27
Output Value Comparisons: Analog, Digital, Engineering Units	15-27
Calculating the Digital Output Value	15-28
Calculating Output Data: Engineering Units Conversion	15-28
Output Engineering Unit Conversion / Output Data Calculation Example:.....	15-28

Chapter 16 - F2-8AD4DA-2, 8-Ch. In / 4-Ch. Out Analog Voltage Combination

Module Specifications	16-2
F2-8AD4DA-2 Hardware and Firmware Requirements	16-2
Module Placement and Configuration Requirements.....	16-5
Connecting the Field Wiring	16-6
Wiring Guidelines	16-6
User Power Supply Requirements	16-6
Wiring Diagram.....	16-7
Module Operation	16-8
Input Channel Scanning Sequence (Pointer Method).....	16-8
Output Channel Update Sequence (Pointer Method).....	16-9
Understanding the I/O Assignments.....	16-10
Input Data Bits	16-11
Output Data Bits	16-11
Special V-Memory Locations	16-12
Module Configuration Registers	16-12
Number of I/O Channels Enabled & Data Format	16-13
Input Selection Resolution Bits	16-13
Input and Output Range Selection Bits.....	16-14
Input Track and Hold Selection Bits	16-15
Writing the Control Program	16-16
Configuring the Module to Read/Write I/O (Pointer Method) for D2-250-1, D2-260 and D2-262.....	16-16
Module Configuration Example 1:.....	16-17
Module Configuration Example 2:.....	16-18
Module Configuration Example 3:.....	16-19
Module 12 Bit Input Resolution.....	16-20
Module 14 Bit Input Resolution.....	16-20
Module 16 Bit Input Resolution.....	16-20
Analog and Digital Input Data Value Conversion	16-21
Scaling the Input Data	16-22
Scaling Example	16-22
Input Engineering Unit Conversion Example 1:	16-23
Input Engineering Unit Conversion Example 2:	16-23

Input Engineering Unit Conversion Example 3: 16-24
 Using the Input Track and Hold Feature 16-24
 Track and Hold Example:..... 16-25
 Module 16 Bit Output Resolution 16-26
 Digital and Analog Output Data Value Conversion 16-26
 Output Value Comparisons: Analog, Digital, Engineering Units 16-26
 Calculating the Digital Output Value 16-27
 Calculating Output Data: Engineering Units Conversion 16-27

Appendix A - DL205 Discrete I/O Memory Map

Input (X) / Output (Y) Bit Map..... A-2
 Control Relay Bit Map A-4
 Remote I/O Bit Map (D2-260 and D2-262 only) A-8