

Table of Contents

Introduction	1
Overview	2
Manual Layout	3
DCM Hardware	4
Applications	5
As a <i>Direct</i> NET Interface	5
As an Extra Communication Port	6
As a Modbus® Network Interface	6
Specifications	7
Environmental Specifications	7
Operating Specifications	7
Using Your DCM – Five Steps	8
Building the Communication Cable.	9
Consideration 1: Physical Configuration	10
Consideration 2: Electrical Specification RS232C or RS422	11
Consideration 3: Cable Schematics	12
Consideration 4: Cable Specifications	16
Consideration 5: Installation Guidelines	16
Consideration 6: A Quick Test Cable	19
Setting the DCM Switches	21
Host Computer or Operator Interface Connection	21
<i>Direct</i> NET Interface Connection	22
DCM Switch Settings	23
Online / Offline Switch	25
Address Selection Switch	26
Installing the DCM and Starting the Network	27
Install the DCM	27
Connect the Cables	27
If you're using <i>Direct</i> NET...	27
If you're using an Operator Interface or Host Computer...	28
If you're using Modbus®	28
Verification and Troubleshooting.	29
Appendix A: RLL Communications Programs	A-1
Why do you need a communications program?	A-2
The Master Initiates Requests	A-2
Why Ladder Logic?	A-2
Identifying the master and slave	A-4
Location of Master and Slave	A-4
Specifying the amount of data	A-5
Number of Bytes to Transfer	A-5

Designating the master station memory area	A-6
Memory Area of Master	A-6
Identifying the slave station memory area	A-7
Memory Area of Slave to Read or Write	A-7
Controlling the communications	A-8
Communications Special Relays	A-8
Multiple Read and Write Interlocks	A-9
DL305/405 Cross Reference	A-10
