



TABLE OF CONTENTS

Chapter 1 - Introduction

Introduction	1-2
The Purpose of this Manual.....	1-2
Who Can and Should Use DirectSOFT6	1-2
Only One DirectSOFT6 Version.....	1-3
Supplemental Manuals.....	1-4
Technical Support	1-4
Conventions Used	1-5
Menu Selections and Keystrokes.....	1-5
Key Topics for Each Chapter.....	1-5

Chapter 2 - Quick Start

Getting to Know Windows	2-2
System Requirements	2-2
Power Supply	2-2
DirectSOFT6 Package Contents.....	2-2
Installation of DirectSOFT6	2-3
Step 1: Load the CD	2-3
Step 2: Exit all other Windows Applications.....	2-3
Step 3: Enter the Product Key Code.....	2-4
Step 4: Installing an Upgrade.....	2-4
Step 5: License Agreement.....	2-5
Step 6: Enter the Customer Information.....	2-5
Step 7: Select the Type of Installation	2-6
Step 8: Ready to Install.....	2-6

Table of Contents

Step 9: Installation is Complete	2-7
If an Upgrade	2-7
Getting Started	2-8
Welcome to <i>DirectSOFT100</i>	2-11
What is <i>DirectSOFT100</i> ?	2-11
Using <i>DirectSOFT100</i> ?	2-12
Begin Editing a Program	2-13
Step 1: Start a New Project	2-13
Step 2: Select Edit Mode	2-16
Step 3: Enter an Input Element	2-18
Step 4: Enter an Output Element	2-19
Step 5: Enter the End Rung	2-20
Establish the Communication Link	2-23
Connect the PC to the PLC	2-23
Step 1: Select the Port.....	2-23
Step 2: Select the PLC	2-24
Step 3: Choose the Protocol and Node Address	2-24
Step 4: Name the Link	2-25
Monitor the Program	2-29
 Chapter 3 - Managing Projects	
Get Started Using <i>DirectSOFT6</i>	3-2
Understanding the Launch Window	3-2
Create a New Project	3-4
New Program.....	3-4
Enter the New Project Information	3-4
Importing Projects	3-5
Program Documentation Mapping from TISOFT and Logicmaster	3-6
Copy or Save Existing <i>DirectSOFT</i> Files	3-7
 Chapter 4 - Programming Environment	
Offline Toolbar Components	4-2
Offline Toolbar	4-2

Online Toolbar Components..... 4-5
 Online Toolbar 4-5

Additional Toolbars 4-6
 The File Toolbar 4-7
 The Edit Toolbar..... 4-8
 The Search Toolbar 4-9
 The View Toolbar 4-10
 The Tools Toolbar 4-11
 The PLC Toolbar..... 4-12
 The PLC Diagnostics Toolbar..... 4-13
 The PLC Setup Toolbar..... 4-13
 The Debug Toolbar 4-15
 The Window Toolbar..... 4-16
 The Help Toolbar 4-17
 The Custom Toolbar 4-17
 PLC System Information 4-19
 Communication/Link Information..... 4-20
 PLC Mode 4-20
 Program Memory Usage 4-20
 PLC Type..... 4-20
 Program Cursor Location..... 4-20

The Options Dialog 4-21
 Ladder Options 4-22
 Global Options..... 4-23

Colors in *DirectSOFT6* 4-24
 Select New Colors 4-24
 Color Selections 4-25
 The Default Settings..... 4-25
 Monochrome 4-25
 Colors Conveying Information..... 4-26
 Select a Theme..... 4-27

The Ladder Palette 4-28
 Be Familiar with the Ladder Palette 4-28

The Split Screen Feature 4-30

Split Screen Bar	4-30
The New Window Feature.....	4-31

Chapter 5 - Edit a Program

I/O Configuration	5-2
Referencing Program Elements.....	5-4
Data Types	5-4
Aliases	5-5
Timer/Counter Current Values.....	5-5
Accessing I/O Points as Memory Locations.....	5-5
Entering Program Instructions.....	5-6
The Instruction Editor.....	5-6
Using the Ladder Palette	5-8
Opening the Instruction Browser.....	5-8
Shortcuts for Entering Instructions.....	5-11
Entering NO and NC Contacts	5-12
Entering Instructions in Parallel.....	5-13
Entering Power Flow Instructions	5-14
Entering Special Case Elements	5-16
End Coil	5-17
Setting and Resetting a Bit	5-18
Using Floating Point Math.....	5-18
Drawing/Deleting Connecting Lines	5-19
Drawing the Lines	5-19
Create Midline Outputs.....	5-20
Deleting Connecting Lines	5-20
Selecting Rungs for Deleting, Cutting or Copying.....	5-21
Deleting Rungs	5-22
Copying Rungs.....	5-23
Cut and Paste Rungs	5-25
Merge (Combine) Rungs.....	5-26
Inserting Columns, Rows and Rungs	5-27
Insert a Column to Add an Instruction	5-27

Table of Contents

Insert a Row or Rung.....	5-28
Using Search and Replace	5-29
Using the Object Section.....	5-29
The Search Range Section	5-30
The Document Section.....	5-30
The Object Table Section	5-30
Common Mistakes	5-31
Failure to Enter the Edit Mode.....	5-31
AND above a Join.....	5-31
Forgetting to Select Rungs	5-31

Chapter 6 - Documentation

Turn Documentation On and Off.....	6-2
The Options Dialog	6-2
Documentation Selections.....	6-3
General Documentation	6-3
Using the Documentation Editor	6-4
Using the Scroll Buttons	6-4
Copying Documentation Between Elements.....	6-5
Documenting and Assigning Nicknames	6-6
Create an Unassigned Nickname.....	6-6
Assign the Nickname to an Element.....	6-6
Entering Rung Comments	6-9
Comments are Free-form	6-9
Selecting Rungs for Comments	6-9
Using the Scroll Buttons	6-10
Use the Editing Keys.....	6-10
Move Rung Comments	6-11
Entering Stage Comments	6-12
Use Stage View.....	6-12
Comments are Free-form	6-13
Selecting Stages to Comment	6-13
Editing the Comments	6-13

Table of Contents

Importing and Exporting	6-14
Exporting Program Documentation.....	6-14
Export Element Documentation	6-16
Export Rung Comments.....	6-18
Importing a Program.....	6-19
Importing Element Documentation.....	6-22
Importing Program Comments	6-24
Insert Instructions.....	6-24
Restore.....	6-27
Prevent Documentation Loss	6-28
Save Project.....	6-28
Backup Project	6-29

Chapter 7 - Other Views

Tabbed Views	7-2
The Primary Views.....	7-2
Stage (RLL^{PLUS}) View.....	7-4
Troubleshooting RLLplus vs. RLL.....	7-4
Stage Components.....	7-4
Mnemonic View.....	7-5
Handheld Programmer Aid.....	7-5
Cross Reference (XRef) View.....	7-6
XRef Mode	7-6
Change the XRef Query	7-7
XRef Toolbar	7-8
Usage Mode.....	7-9
Usage Mode Toolbar.....	7-9
XRef DB.....	7-10
PID View.....	7-11
PID Setup.....	7-11
Trend View.....	7-13
Creating a new Trend View.....	7-13
Output Window	7-15

Bookmark..... 7-17
View Terminology..... 7-18

Chapter 8 - Printing

Print the Current View 8-2
 Print the Ladder View..... 8-2
 Other Print Views 8-3
Print Multiple Views 8-5
Print View Common Setup..... 8-7
Using Print Preview 8-8
 Print Preview Setup 8-8
 Print Preview 8-9
Print Troubleshooting 8-10
 Parts of Program not Printed 8-10
 Program Prints "Garbage" 8-10
 DirectSOFT6 Crashes..... 8-10
 Print Setup Dialog 8-11

Chapter 9 - Setup and Manage Communication Links

Establish the Communications Link 9-2
Setup a Serial Link 9-2
 Link Status..... 9-6
Setup an Ethernet Link..... 9-7
 NetEdit3 Troubleshooting Tips 9-12
Setup a Modem Link 9-14
 Modem Setup 9-14
 Configuring the Link 9-18
Comm Link Options..... 9-22
Going Online 9-24
 Connect the PLC 9-24
 Use the Project Folder 9-24
 Use the Link 9-24

Chapter 10 - Debugging and Monitoring

Monitor with Data View	10-2
Using Data View.....	10-2
Open a New Data View Window.....	10-2
A Closer Look.....	10-3
Data View Options.....	10-4
Select Bits for Display.....	10-5
Data View Documentation Options.....	10-7
Apply Options.....	10-7
Data View Mode Options.....	10-8
Make Data View Entries.....	10-8
Data Format and Size.....	10-10
Write the Edits.....	10-11
Auto-increment.....	10-12
Editing Entries.....	10-12
Save the Data View Window.....	10-13
Using Pause Bits.....	10-14
Use Override Bits to Control I/O (DL05, DL06, D2-240, D2-250-1, D2-260, D2-262, D3-350, D4-450, D4-454) ...	10-15
Change Value Dialog	10-16
Use the Change Value Dialog.....	10-16
Specify an Element Reference or Nickname.....	10-17
Enter a New Value.....	10-18
Using the Memory Editor	10-20
Select the Locations to View.....	10-20
Test Mode Operations for Debugging	10-22
Select Test Mode.....	10-22
Test Program Operations.....	10-23
The Test Operations Window.....	10-24
Trap Monitor	10-25
Access the Trap Monitor.....	10-25
Use with Data View.....	10-27
Stack Monitor (D4-440 Only)	10-28
Access the Stack Monitor.....	10-28

Table of Contents

Trend View	10-29
Using the Trend View	10-29
The Crosshair Cursor	10-30
Check <i>Direct</i>SOFT6 File Revision	10-33

Appendix A - Protocols and Cable Diagrams

Protocols and Cables	A-2
Programming Cable Diagrams	A-6

Appendix B - Communications Troubleshooting

Communications Resources	B-2
Startup	B-2
USB-TO-SERIAL Devices	B-9
DUMP (used to troubleshoot SERIAL and MODEM links).....	B-10
Editing the DSxxx.ini file	B-10
Windows XP and Windows 7/8/10	B-10
Windows Vista	B-11
UAC = ON	B-11
UAC = OFF.	B-12
Other Editable Parameters	B-12
Other Possible Issues	B-15
How to Change USB-Serial Port Assignment	B-15
"PORT UNAVAILABLE OR IN USE"	B-15
Laptop AC Adapter Issue	B-15

Appendix C - Hardware - Software Compatibility Table

Hardware – Software Compatibility Table	C-2
--	------------