

---

# INDEX

---



## A

Auto-increment 10-12  
AutoSense=0 B-12

## B

Bookmark 7-18

## C

Cable Diagrams A-6  
Colors in DirectSOFT 6 4-24  
Communication Link 2-24  
    Link Wizard 2-24  
    Protocol and Node Address 2-25, 9-4  
    Select Link 2-24  
Compare Programs 2-27  
Connecting Lines 5-19  
Copy or Save Existing Files 3-7  
Current Value 10-17

## D

Data Types 5-4  
    Aliases 5-5  
Data View 10-2  
    Documentation 10-7  
    Editing Entries 10-12

Entries 10-8

Options 10-4

Documentation Editor 6-4  
Docked View 7-19  
DSxxx.ini B-10  
DSLlaunch window 3-2  
Dump B-10

## E

ECOM 9-7  
element references 10-8  
End Coil 5-17  
End Rung 2-21  
Error Log 9-22  
Ethernet link 9-7  
Exporting 6-14  
    Element Documentation 6-16  
    Program Documentation 6-14  
    Rung Comments 6-18

## F

Floating View 7-19

## I

I/O Configuration 5-2  
Importing 6-14

- A Program 6-19
  - Element Documentation 6-22
  - Program Comments 6-24
- Importing Projects 3-5
- Input Element 2-19
- Insert Instructions 6-24
- Install Software 2-3
- Installing an Upgrade 2-4
- Instruction Browser 5-8
- Instruction Editor 5-6

## L

- Ladder Palette 4-28, 5-8
- Link Status 9-6
- Link Wizard 2-24, 9-2

## M

- Menu Bar 5-10
- Modem Setup 9-14

## N

- New Project 3-4
- New Window 4-31
- Nicknames 6-6
  - Assign 6-6
  - Element 6-6

## O

- Options Dialog 4-21, 6-2
  - Documentaion 6-3
  - Documentation Editor 6-4
  - Global Options 4-23
  - Ladder Options 4-22
- Output Element 2-20
- Output Window 7-16
- Override Bits 10-15

## P

- Pause Bits 10-14
- PID View 7-12
- PLC Modes 2-28
- Power Flow 5-14
- Primary Views 7-2
- Product Key Code 2-4
- Protocol and Node Address 2-25, 9-4

## R

- Rung comments 6-9
- Rungs 5-21
  - Copying 5-23
  - Cut and Paste 5-25
  - Deleting 5-22
  - Merge 5-26
  - Selecting 5-21

## S

- Saving the Program 2-22
- Software License Agreement 2-5
- Split Screen 4-30
- Stage comments 6-12
- Start a New Project 2-14, 3-4
  - Ladder Palette 4-28, 5-8
  - Tip of the day 2-15
- Startup Issues B-2
- Status Bar Components 4-19
- Supported Cables A-2
- Supported Protocols A-4
- System Requirements 2-2

## T

- Themes 4-10, 4-27
- Toolbar Components 4-2

---

Custom Toolbar 4-17  
Debug Toolbar 4-15  
Edit Toolbar 4-8  
File Toolbar 4-7  
Help Toolbar 4-17  
Offline Toolbar 4-2  
Online Toolbar 4-5  
PLC Diagnostics Toolbar 4-13  
PLC Setup Toolbar 4-13  
PLC Toolbar 4-12  
Search Toolbar 4-9  
Tools Toolbar 4-11  
View Toolbar 4-10  
Window Toolbar 4-16  
Trap Monitor 10-25  
Trend View 10-29

## U

Usage Mode 7-10  
USB-to-Serial Devices B-9

## X

XRef Query 7-8  
XRef Toolbar 7-9

Notes: