



TABLE OF CONTENTS

Chapter 1 - Introduction

Introduction	1-2
The Purpose of this Manual.....	1-2
Other Reference Materials	1-2
Who Should Read this Manual	1-2
Quality Technical Support	1-3
Conventions Used	1-3
Key Topics for Each Chapter.....	1-3
ECOM Module Introduction.....	1-4
ECOM Communication Possibilities.....	1-4
Your Network PC.....	1-5
Frequently Asked Questions	1-6

Chapter 2 - Setup and Installation

ECOM Network Identifiers	2-2
Module ID.....	2-3
Name.....	2-3
Example:	2-4
Ethernet (MAC) Address.....	2-4
Using Multiple Network Identifies	2-4
Setting the Module ID with the DIP Switch	2-5
H0 / H2 Series ECOM DIP Switch.....	2-6
H4 Series ECOM DIP Switch.....	2-7
Inserting the ECOM Module in the PLC Base	2-8
H0 Series ECOM Module Installation.....	2-8
DL205 Slot Choices	2-8
H2 Series ECOM Module.....	2-9
DL405 Slot Choices.....	2-10
H4 Series ECOM.....	2-11

ECOM Network Layouts	2-11
Network Cabling.....	2-13
ECOM Supports Two Standards	2-13
10/100BaseT Networks	2-13
10/100BaseT Connections.....	2-14
UTP Cable	2-14
10BaseFL Connections.....	2-14
Fiber Optic Cable	2-14
Fiber Optic Module ST Connector.....	2-14
Maximum Cable Length.....	2-15
10/100BaseT Distance Limitations.....	2-15
10BaseFL Distance Limitations.....	2-15
Maximum Number of ECOM Modules on the Network	2-16

Chapter 3 - Configuring ECOMs Using NetEdit3

NetEdit3 Software	3-2
Installing NetEdit3.....	3-2
Launching NetEdit3.....	3-3
The NetEdit3 Screen.....	3-3
Adding Network Protocol Support to the NetEdit3 PC.....	3-4
Using NetEdit3	3-5
Ethernet Communication Protocol	3-5
Ethernet Address	3-6
Module Type, IP Address and ID	3-6
Module Info> General Information	3-7
Module Info> Ethernet Stats.....	3-7
ECOM Settings.....	3-7
ECOM Settings> Configuration> General	3-8
ECOM Settings> Configuration> Advanced	3-9
ECOM Settings> Configuration> Peer to Peer.....	3-10
ECOM Settings> Utils>Test CPU Access	3-12
ECOM Settings> Firmware	3-12
FileMenu> Live Update.....	3-13
F / B / C Columns	3-13

Chapter 4 - RLL Programming for Communications

PLC-to-PLC Communications.....	4-2
How RLL is Used for Communications.....	4-2
Network Instructions.....	4-3
Read (RX) and Write (WX) Instructions.....	4-3
Building the Read (RX) and Write (WX) Routine.....	4-3
The First LD Instruction.....	4-3
The Second LD Instruction.....	4-4
The LDA Instruction.....	4-4
Read (WX) Instruction.....	4-5
Write (WX) Instruction.....	4-5
Addressing the Different Memory.....	4-6
Bit Memory.....	4-6
Word Memory and Aliases.....	4-6
DirectSOFT is Flexible.....	4-7
DL05 CPU.....	4-7
DL06 CPU.....	4-7
D2-240 CPU.....	4-8
D2-250-1 CPU.....	4-8
D2-260/D2-262 CPU.....	4-9
D4-430 CPU.....	4-9
D4-440 CPU.....	4-10
D4-450/D4-454 CPU.....	4-10
Special Relays for Communications.....	4-11
Program with One Read Instruction.....	4-13
Program for the Initiating PLC.....	4-13
Program for the Responding PLC.....	4-13
Example Program with One Write Instruction.....	4-15
Program for the Initiating PLC.....	4-15
Program for the Responding PLC.....	4-15
Integrating Multiple Read and Write Instructions.....	4-17
Interlocking Relays.....	4-17
First RX/WX Instruction.....	4-18

Table of Contents

Second RX/WX Instruction	4-19
Third RX/WX Instruction	4-19
Shift Register	4-20
Store If Equal.....	4-20
First RX/WX Instruction	4-21
Second RX/WX Instruction	4-21
Third RX/WX Instruction	4-21

Chapter 5 - Modbus TCP for H0/H2/H4-ECOM100

Modbus TCP	5-2
Client / Server Model	5-2
Protocol Description.....	5-2
Supported Modbu Function Codes	5-4
Network Server (Slave) Operation	5-5
Modbus Function Codes Supported	5-5
Determining the Modbus Address.....	5-5
If Your Host Software or Client Requires the Data Type and Address	5-6
Example 1: V2100.....	5-11
Example 2: Y20	5-11
Example 3: T10 Current Value.....	5-11
Example 4: C54.....	5-12
If the Host Software or Client Requires an Address ONLY	5-12
Example 1: V2100.....	5-14
Example 2: Y20	5-14
Example 3: C54.....	5-14
Network Client (Master) Operation	5-15
PLC Memory Supported for Client Operation.....	5-17
Example 1: Calculating Word PLC Address	5-18
Example 2: Calculating Discrete Input PLC Address.....	5-18
Building the Read (RX) or Write (WX) Routine.....	5-19
Step 1: Identify ECOM Slot Location and Server Node #.....	5-19
Step 2: Load Number of Bytes to Transfer	5-20
Step 3: Specify Master Memory Area.....	5-20
Step 4: Specify Slave Memory Area	5-20
Communications from a Ladder Program.....	5-21

Multiple Read and Write Interlocks	5-21
ECOM100 IBOX	5-22
Modbus TCP Setup	5-24
Example Modbus TCP Program.....	5-26
Troubleshooting:	5-26
H0/H2/H4 -ECOM100 System Memory	5-30

Chapter 6 - H0/H2/H4-ECOM100 DHCP & HTML Configuration

H0/H2/H4 -ECOM100 DHCP	6-2
DHCP Issues	6-2
Disabling DHCP and Assigning a Static IP Address	6-2
Using HTML Configuration	6-3
Connecting to the H0/H2/H4 -ECOM100	6-3
H0/H2/H4-ECOM100 Client Peer to Peer Configuration.....	6-5

Chapter 7 - Maintenance and Troubleshooting

Isolating a Communication Problem	7-2
Diagnostic Tools and Techniques	7-2
Troubleshooting Chart	7-2
ECOM Module Diagnostic LEDs	7-4
H0 Series Indicators.....	7-4
OK Indicator.....	7-4
LINK Indicator	7-4
ACT Indicator	7-4
ERR Indicator.....	7-4
100MBIT Indicator	7-4
Network Server (Slave) Operation.....	7-5
H24-ECOM-(F) Indicators	7-5
LINKGD Indicator	7-5
ACT Indicator.....	7-5
ERROR Indicator	7-5
H2/H4-ECOM100 Indicators.....	7-6
STATUS.....	7-6
LINKGD Indicator	7-6

Table of Contents

ACTIVE Indicator	7-6
ERROR Indicator	7-6
100MBIT Indicator	7-6
Using NetEdit3 for Troubleshooting.....	7-7
Select a Module	7-7
Module Information	7-7
Change Protocol	7-8
Ethernet Stats.....	7-8
RX/WX Settings.....	7-9
Record the Module Settings.....	7-9
Replacing the ECOM Module.....	7-10
Diagnosing Network Cable Problems.....	7-11

Appendix A - General Specifications

General Specifications.....	A-2
ECOM Specifications	A-2
Ethernet Standards.....	A-4

Appendix B - Peerlink Specifications

Peerlink Function for ECOM100	B-2
Peerlink Data-Sharing Network	B-3
Configuration.....	B-4
Parameters:	B-5
DL05	B-6
DL06	B-7
DL205	B-8
DL405	B-9
Do-more	B-10
Block Summary	B-11

Appendix C - Security Considerations for Control Systems Networks

Security Considerations for Control Systems Networks	C-2
---	------------