

# Table of Contents

---

## Chapter 1: Introduction

|                                       |            |
|---------------------------------------|------------|
| <b>Manual Overview</b> .....          | <b>1-2</b> |
| Overview of this Manual .....         | 1-2        |
| Supplemental Manuals .....            | 1-2        |
| Who Should Read this Manual .....     | 1-2        |
| Technical Support .....               | 1-2        |
| Symbols Used .....                    | 1-2        |
| Key Topics for Each Chapter .....     | 1-2        |
| <b>H0-PSCM Module</b> .....           | <b>1-3</b> |
| <b>Introduction to Profibus</b> ..... | <b>1-3</b> |
| PROFIBUS Concepts .....               | 1-3        |
| PROFIBUS International .....          | 1-4        |
| PROFIBUS Trade Organization .....     | 1-4        |
| <b>DP Communication Profile</b> ..... | <b>1-5</b> |
| Mini Glossary .....                   | 1-6        |

## Chapter 2: Installation and Setup

|   |             |
|---|-------------|
| <b>Installing the H0-PSCM</b> .....                                 | <b>2-2</b>  |
| Remove the Slot Cover .....   | 2-2         |
| Insert the Module .....   | 2-2         |
| Set the Node Address .....  | 2-3         |
| <b>The Profibus Network</b> .....                                   | <b>2-4</b>  |
| Wiring the Controller to a PROFIBUS Network .....                   | 2-4         |
| Status Indicators .....   | 2-8         |
| <b>Configuring the Module</b> .....                                 | <b>2-9</b>  |
| GSD File .....  | 2-9         |
| H0-PSCM Configuration .....   | 2-9         |
| H0-PSCM Memory Map .....  | 2-9         |
| <b>Calculating the Power Budget for the DL06 with H0-PSCM</b> ..... | <b>2-10</b> |
| Managing your Power Resource .....                                  | 2-10        |
| PSCM Power Specifications .....                                     | 2-10        |
| Module Power Requirements .....                                     | 2-10        |
| <b>DL06 Power Consumed by Option Cards</b> .....                    | <b>2-11</b> |
| Power Budget Calculation Example .....                              | 2-12        |
| Power Budget Calculation Worksheet .....                            | 2-13        |

## Appendix A: Specifications

|   |            |
|---|------------|
| <b>H0-PSCM Profibus Slave Communications Module</b> ..... | <b>A-2</b> |
|---|------------|

---

|                              |     |
|------------------------------|-----|
| General Specifications ..... | A-2 |
| Cable Specifications .....   | A-3 |

## Appendix B: H0-PBC Profibus Base Controller GSD File

|   |     |
|---|-----|
| H0-PSCM Profibus Slave Communications Module GSD File ..... | B-2 |
|---|-----|

## Appendix C: Setup the SST Profibus Master PCI Card for the H0-PSCM

|  |     |
|--|-----|
| Setup the SST Profibus Master PCI Card for the H0-PSCM ..... | C-2 |
| Getting Started .....  | C-2 |

## Appendix D: Think & Do Profibus Network Setup with the H0-PSCM

|  |     |
|--|-----|
| Think & Do Profibus Network Setup with H0-PSCM ..... | D-2 |
| Getting the T & D Network Started .....              | D-2 |
| T & D Studio setup for PC control .....              | D-2 |

## Appendix E: Siemens Profibus Network Set up with H0-PSCM

|   |     |
|---|-----|
| Setup a H0-PSCM on Siemens Profibus Network ..... | E-2 |
| Simatic Manager .....                             | E-2 |

---