



BVS 3 Series Directional Control Valve Setup Instructions

If you have any questions concerning the installation or operation of this equipment, or if you need additional information, please call AutomationDirect.com Tech Support at 770-844-4200

CAUTION: ENSURE THAT ALL BVS VALVES ON A MANIFOLD ARE THE SAME VOLTAGE

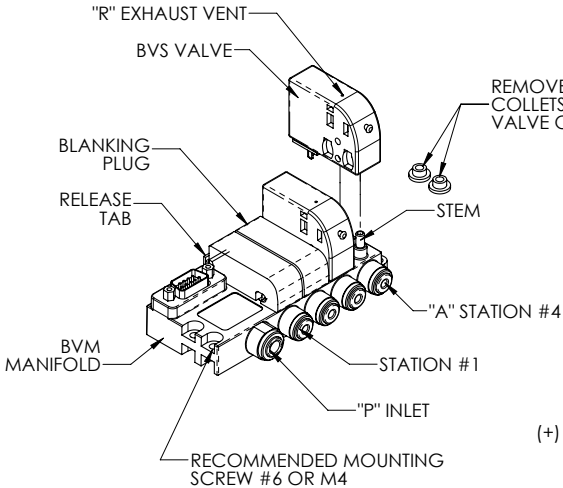

1. TO INSTALL, REMOVE INSERTS/ADAPTERS FROM AIR CONNECTION, SO THE VALVE OPENINGS FIT THE STEMS ON THE MANIFOLD.
2. PUSH VALVE ONTO MANIFOLD STEMS UNTIL IT CLICKS.
3. TO REMOVE, PULL RELEASE TAB AND LIFT VALVE OFF.

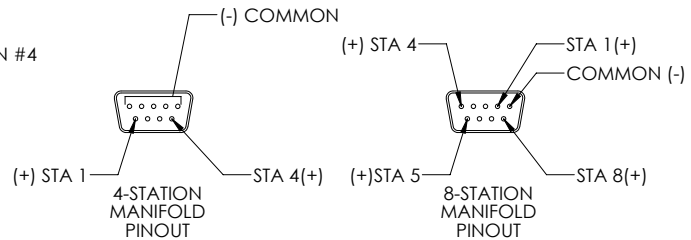


NOTE: MANIFOLD MUST HAVE A BVS VALVE OR BVM-3BP BLANKING PLUG INSTALLED IN EACH STATION FOR PROPER OPERATION


BVS 3 Series Directional Control Valve Setup Instructions

If you have any questions concerning the installation or operation of this equipment, or if you need additional information, please call AutomationDirect.com Tech Support at 770-844-4200

CAUTION: ENSURE THAT ALL BVS VALVES ON A MANIFOLD ARE THE SAME VOLTAGE

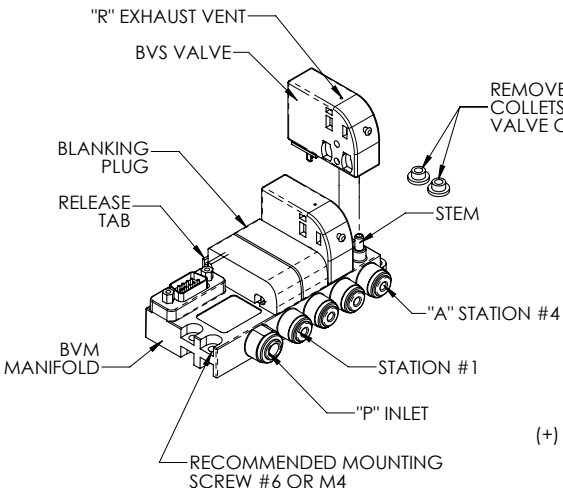

1. TO INSTALL, REMOVE INSERTS/ADAPTERS FROM AIR CONNECTION, SO THE VALVE OPENINGS FIT THE STEMS ON THE MANIFOLD.
2. PUSH VALVE ONTO MANIFOLD STEMS UNTIL IT CLICKS.
3. TO REMOVE, PULL RELEASE TAB AND LIFT VALVE OFF.

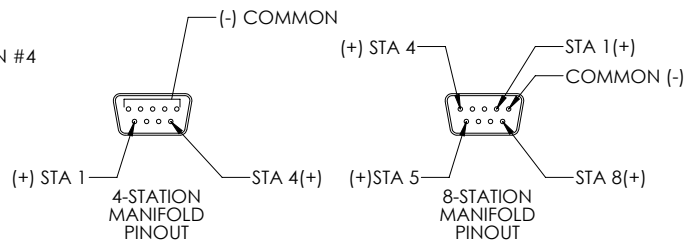

NOTE: MANIFOLD MUST HAVE A BVS VALVE OR BVM-3BP BLANKING PLUG INSTALLED IN EACH STATION FOR PROPER OPERATION