
Application and Installation Guide




Series DVM-2B Media Separated 2-Way, Normally Closed Solenoid Valves.

Two-Way, Two Position, Normally Closed

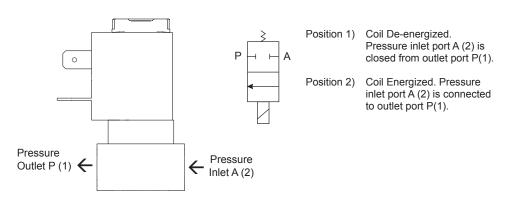


Electrical Hook-Up

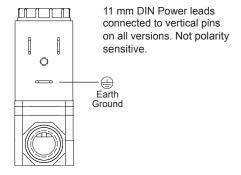

Mounting Diagram

 Dimensions Inch [mm]



www.AutomationDirect.com 1-800-633-0405

3505 Hutchinson Rd., Cumming, GA 30040 DVM2Binsert Rev. 02




Series DVM-2B

Application and Installation Guide




Series DVM-2B Media Separated 2-Way, Normally Closed Solenoid Valves.

Two-Way, Two Position, Normally Closed

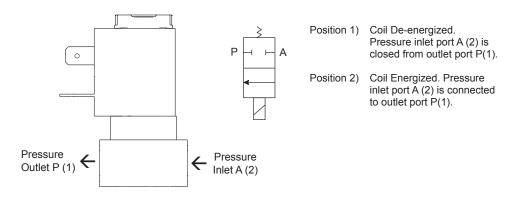


Electrical Hook-Up

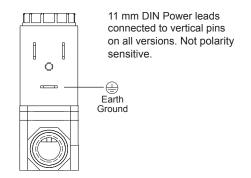

Mounting Diagram

 Dimensions Inch [mm]



www.AutomationDirect.com 1-800-633-0405

3505 Hutchinson Rd., Cumming, GA 30040

DVM2Binsert Rev. 02







Caution

Excessive use of pipe sealant can cause clogging and leakage. Please follow ASME standards for applying pipe sealant and tape. Do not use media, voltage or pressures other than that listed in specifications as valve malfunction could result. Misuse or misapplication of NITRA solenoid valves could cause serious bodily injury or property damage.



1-800-633-0405

www.AutomationDirect.com

Excessive use of pipe sealant can cause clogging and leakage. Please follow ASME standards for applying pipe sealant and tape. Do not use media, voltage or pressures other than that listed in specifications as valve malfunction could result. Misuse or misapplication of NITRA solenoid valves could cause serious bodily injury or property damage.

