




INSTALLATION INSTRUCTIONS
NITRA AIR PREP

DIAGRAM INDICATES TYPICAL SEQUENCE AND LOCATION OF VARIOUS AIR PREP COMPONENTS. A GIVEN APPLICATION MAY NOT REQUIRE ALL OF THE COMPONENTS DEPICTED.

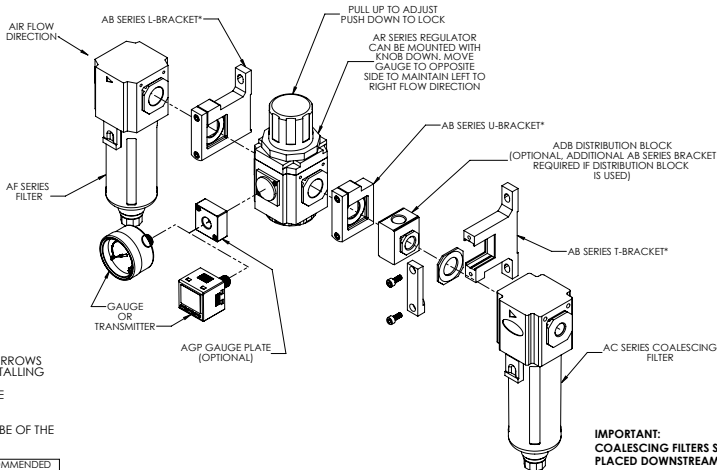

IMPORTANT

NOTE FLOW DIRECTION ARROWS ON EACH UNIT WHEN INSTALLING

* AB SERIES BRACKETS ARE INTERCHANGEABLE


ALL COMPONENTS MUST BE OF THE SAME SERIES SIZE (2, 3, 4)

SERIES SIZE	BRACKET SCREW TORQUE	RECOMMENDED MOUNTING SCREWS
2	18 in-lb	#8 or M4
3	18 in-lb	#10 or M5
4	20 in-lb	5/16 or M8

IMPORTANT:
COALESCING FILTERS SHOULD NOT BE PLACED DOWNSTREAM FROM LUBRICATOR (AC-XXX SERIES FILTER)

If you have any questions concerning the installation or operation of this equipment, or if you need additional information, please call AutomationDirect.com Tech Support at 770-844-4200

STAND ALONE
INSTALLATION

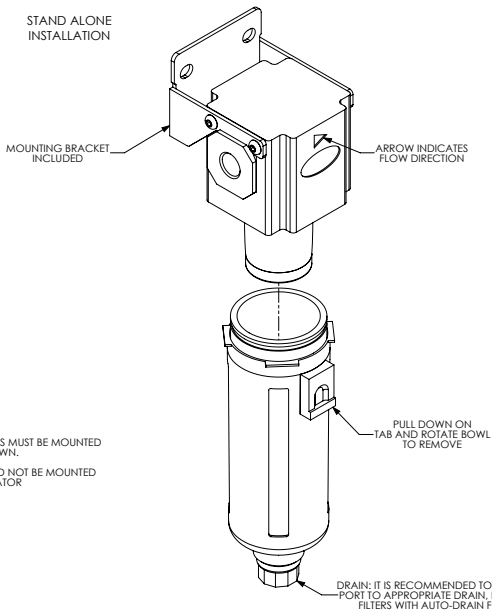

NOTES:

WHEN INSTALLING, ALL FILTERS MUST BE MOUNTED VERTICALLY WITH BOWLS DOWN.

COALESCING FILTERS SHOULD NOT BE MOUNTED DOWNSTREAM OF A LUBRICATOR