


# TABLE OF CONTENTS

---

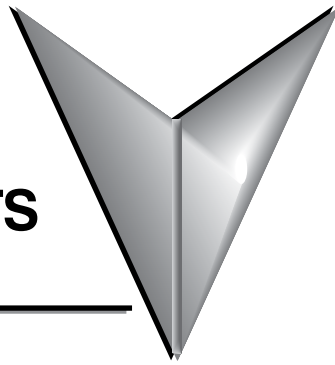

<b>Chapter 1 - Getting Started</b> .....	<b>1-1</b>
About This Manual.....	1-2
Conventions Used.....	1-3
Introduction .....	1-4
Protos X I/O System Components.....	1-5
Protos X I/O System Example.....	1-7
<b>Chapter 2 - Specifications</b> .....	<b>2-1</b>
Bus Coupler: PX-MOD .....	2-2
Bus Coupler: PX-TCP1 .....	2-6
Bus Coupler: PX-TCP2.....	2-10
Bus Coupler: PX-EIP1.....	2-14
Protos X Terminal Types.....	2-18
Bus End/Expansion Terminals.....	2-20
Power Terminals .....	2-24
Analog Terminals .....	2-40
<b>Chapter 3- Installation and Wiring</b> .....	<b>3-1</b>
Safety Guidelines .....	3-2
Hardware Installation .....	3-5
<b>Chapter 4 - Protos X Configuration</b> .....	<b>4-1</b>
Protos X Software Configuration Tool (PG-CFGSW).....	4-2

**Chapter 5 - Troubleshooting** ..... 5-1

    Diagnostic LEDs.....5-2

    Fieldbus Errors..... 5-14

    Protos X Configuration Software Troubleshooting..... 5-31

**Appendix A - Glossary** ..... A-1