



## IRONHORSE SHAFT MOUNT GEARBOX USER MANUAL

Warnings and Trademarks	<i>W–1</i>
~ WARNING ~	W–1
Trademarks	
~ AVERTISSEMENT ~	
Marques de commerce	W–2
User Manual Revision History	<i>H–1</i>
User Manual Table of Contents	TOC-1
Chapter 1: Getting Started	1–1
Manual Overview	1–2
IronHorse $^{\circledR}$ Shaft Mount Gearbox Introduction	1–3
Part Number Explanation	1–4
Nameplate Information	1–4
Chapter 2: Cast-Iron Shaft Mount Gearboxes	2–1
Gearbox Selection Factors	2–2
Gearbox Dimensions	2–4
Mechanical Ratings	2–5
Chapter 3: Installation, Maintenance, and Lubrication	3–1
IronHorse $^{\circledR}$ Shaft Mount Gearbox Installation	3–2
Motor Mount Installation	3–5
Gearbox Lubrication and Mounting Orientations	3–6
Bearing Sizes	3–7
Seal Sizes	<i>3</i> –7
Guidelines for Long Term Storage	3–8
Chapter 4: Accessories	4–1
Accessories Selection	4–2
Backstop Installation	4–3
Screw Conveyor Drive Components	4–6
Screw Conveyor Flange Adapters	4–7
Screw Conveyor Drive Shafts	4–8
Bushing Kits	4–9
Appendix A: Glossary of Terms	A-1
Glossary of Terms	A-2
Appendix B: Gearbox Selection	<i>B</i> –1
Shaft Mount Gearbox Selection Procedure	
A.G.M.A. Load Classification Numbers	B–4

## BLANK PAGE