

READ THIS FIRST!

- Always use a desiccant Vent Filter or an Aneroid Bellows with vented gage transducers for protection against moisture incursion into the reference vent tube.
- **See reverse side if replacing Vent Filter with Aneroid Bellows.**
- When installing, lower transducer slowly and only to necessary depth while avoiding impact with sharp objects or dropping.
- Avoid over-pressuring the transducer.
- Do not use an object to press directly on transducer diaphragm.
- Do not cut the termination end of the cable to shorten length, coil excess cable.
- Drain wire should always be connected to a good earth ground unless electrolytic corrosion is known to be a problem.
- See User's Manual for complete operating instructions and warranty terms.

