


KEYPAD OPERATION AND SETUP PARAMETERS




CHAPTER 3

In This Chapter...

Display, LED and Keypad	3-2
Keypad Operation	3-3
Setup Parameter Listing	3-4
Regulation Mode Parameters	3-7
Operation Mode Parameters	3-15
Initial Setting Parameters	3-17
Reset to Factory Default	3-22

Display, LED and Keypad

The SOLO temperature controller has a two color seven segment LED display, four types of LED status indicators and four function buttons.

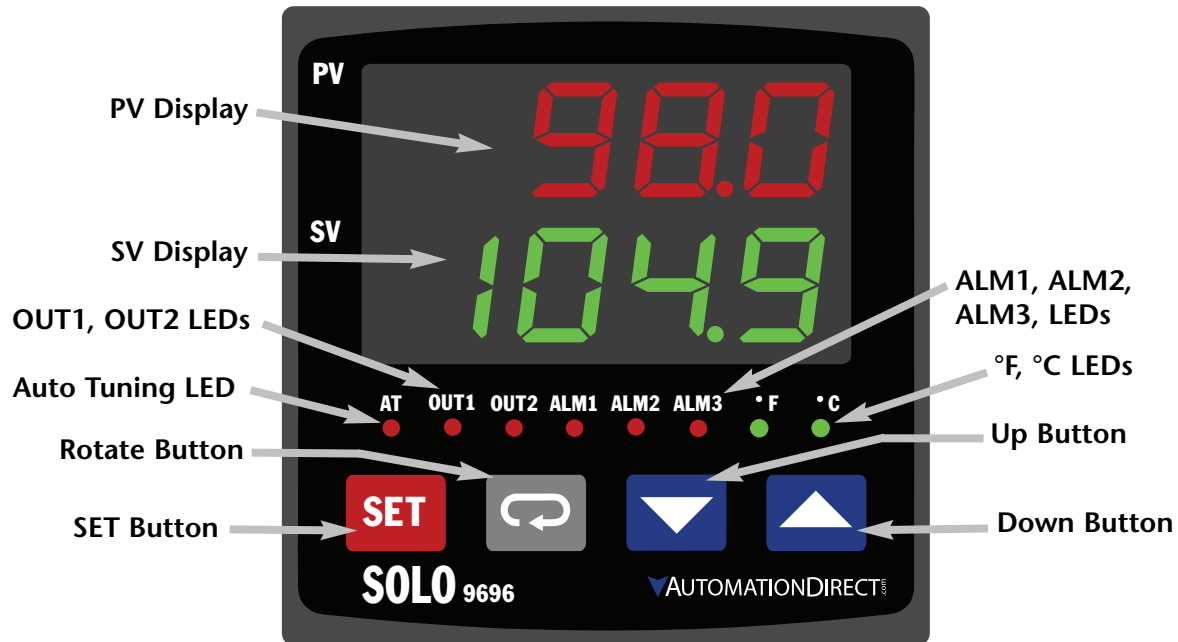

PV Display

The Process Value Display. Displays the value from the input source or the parameter source.

SV Display

The Set Value Display. Displays the set point of the process, the parameter operation read value, manipulated variable, or the set value of the parameter.

AT LED Indicator

Auto Tuning LED flashes when the Auto Tuning operation is ON.

OUT1, OUT2 LED Indicators

Output 1 and Output 2 LED indicators light when the output is ON.

°F, °C LED Indicators

Temperature unit LED. °C: Celsius, °F: Fahrenheit

ALM1, ALM2, ALM3 LED Indicators

Alarm output LED indicators light when appropriate alarm is activated. ALM2 and ALM3 are available on series SL4896 and SL9696 only.

Keypad Operation

Function Buttons



SET Button

Press the SET button to select the desired function mode and confirm the setting value.



Rotate Button

Press the Rotate button to select parameters within the function mode.



Down Button

Press the Down button to decrease values displayed on the SV display. Hold down this button to speed up the decrement.



Up Button


Press the Up button to increase values displayed on the SV display. Hold down this button to speed up the increment.

Initial Power up

When power is first applied to the temperature controller, the module information splash screen appears. This screen shows the firmware version on the PV display and the two output types for that particular model on the SV display. After three seconds, the controller will automatically proceed to the Operation mode main screen.

Keypad Operation

The temperature controller has three function modes: Initial Setting mode, Operation mode and Regulation mode. Press and hold the SET button for three seconds to go into the Initial Setting mode. Press the SET button for less than three seconds to access the Regulation mode. Press the Rotate button while inside any of the three function modes to scroll through the individual parameters for each function mode. Use the Up and Down buttons to change the individual parameter values. Pressing the SET button saves the parameter values. Press the SET button again to return the controller to the Operation mode main screen.

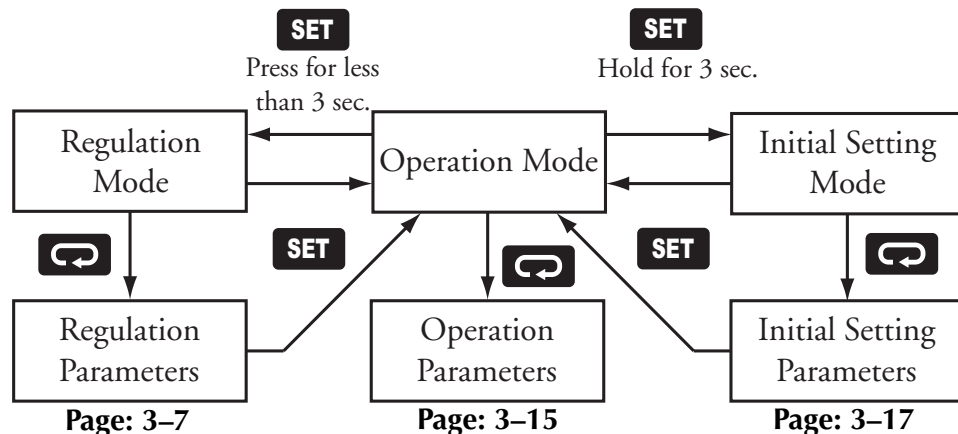


Setup Parameter Listing













Regulation Mode Parameters

Press the **SET** button to access these parameters.

Regulation Mode Parameter Availability																	
ID #	Display	Parameter Name	Controller Type						Control Mode				Heating / Cooling				
			RR(E)	VR(E)	VV(E)	CR(E)	CV(E)	LR(E)	LV(E)	PID	ON / OFF	Manual	Ramp / Soak	Heating	Cooling	Heating / Cooling	Cooling / Heating
P1-1	Auto Tuning	Auto Tuning	✓	✓	✓	✓	✓	✓	✓	✓	-	-	-	✓	✓	✓	✓
P1-2	PID Parameter Group	PID Parameter Group	✓	✓	✓	✓	✓	✓	✓	✓	-	-	✓	✓	✓	✓	✓
P1-3	Target SV	Target SV	✓	✓	✓	✓	✓	✓	✓	✓	-	-	✓	✓	✓	✓	✓
P1-4	Proportion Band	Proportion Band	✓	✓	✓	✓	✓	✓	✓	✓	-	-	✓	✓	✓	✓	✓
P1-5	Integral Time	Integral Time	✓	✓	✓	✓	✓	✓	✓	✓	-	-	✓	✓	✓	✓	✓
P1-6	Derivative Time	Derivative Time	✓	✓	✓	✓	✓	✓	✓	✓	-	-	✓	✓	✓	✓	✓
P1-7	PD Control Offset	PD Control Offset	✓	✓	✓	✓	✓	✓	✓	✓	-	-	✓	✓	✓	✓	✓
P1-8	Integral Offset	Integral Offset	✓	✓	✓	✓	✓	✓	✓	✓	-	-	✓	✓	✓	✓	✓
P1-9	Heating Hysteresis	Heating Hysteresis	✓	✓	✓	✓	✓	✓	✓	-	✓	-	-	✓	-	✓	✓
P1-10	Cooling Hysteresis	Cooling Hysteresis	✓	✓	✓	✓	✓	✓	✓	-	✓	-	-	-	✓	✓	✓
P1-11	Output 1 Heating Period	Output 1 Heating Period	✓	✓	✓	✓	✓	✓	✓	✓	-	✓	✓	✓	-	✓	-
P1-12	Output 1 Cooling Period	Output 1 Cooling Period	✓	✓	✓	✓	✓	✓	✓	✓	-	✓	✓	-	✓	-	✓
P1-13	Output 2 Period	Output 2 Period	✓	✓	✓	✓	✓	✓	✓	✓	-	✓	✓	-	-	✓	✓
P1-14	Proportion Band Coefficient	Proportion Band Coefficient	✓	✓	✓	✓	✓	✓	✓	✓	-	-	✓	-	-	✓	✓
P1-15	Dead Band	Dead Band	✓	✓	✓	✓	✓	✓	✓	✓	✓	-	✓	-	-	✓	✓
P1-16	PV Offset	PV Offset	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
P1-17	Analog High Adjustment	Analog High Adjustment	-	-	-	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
P1-18	Analog Low Adjustment	Analog Low Adjustment	-	-	-	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓

Operation Mode Parameters

Press the  button to access these parameters.

Operation Mode Parameter Availability																		
ID #	Display	Parameter Name	Controller Type						Control Mode				Heating / Cooling					
			RR(E)	VR(E)	VV(E)	CR(E)	CV(E)	LR(E)	LV(E)	PID	ON / OFF	Manual	Ramp / Soak	Heating	Cooling	Heating / Cooling	Cooling / Heating	
P2-1		Run / Stop	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
P2-2		Starting Ramp / Soak Pattern	✓	✓	✓	✓	✓	✓	✓	-	-	-	✓	✓	✓	✓	✓	
P2-3		Decimal Point Position	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
P2-4		Alarm 1 High Limit	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
P2-5		Alarm 1 Low Limit	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
P2-6		Alarm 2 High Limit	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
P2-7		Alarm 2 Low Limit	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
P2-8		Alarm 3 High Limit	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	-	-	-	
P2-9		Alarm 3 Low Limit	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	-	-	-	
P2-10		Lock Mode	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
P2-11		Output 1 Level	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
P2-12		Output 2 Level	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	-	-	✓	✓	✓	

Initial Setting Parameters

Press the **SET** button for more than three seconds to access these parameters.

Initial Setting Mode Parameter Availability																	
ID #	Display	Parameter Name	Controller Type						Control Mode				Heating / Cooling				
			RR(E)	VR(E)	VV(E)	CR(E)	CV(E)	LR(E)	LV(E)	PID	ON /OFF	Manual	Ramp / Soak	Heating	Cooling	Heating / Cooling	Cooling / Heating
P3-1	LRPE	Input Type	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
P3-2	TEMPn	Temperature Unit	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
P3-3	EP-H	Input Range High	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
P3-4	EP-L	Input Range Low	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
P3-5	CTRL	Control Mode	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
P3-6	PATn	Ramp / Soak Pattern*	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
P3-7	S-HC	Heating / Cooling	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
P3-8	ALR1	Alarm 1	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
P3-9	ALR2	Alarm 2	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
P3-10	ALR3	Alarm 3	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
P3-11	SALR	System Alarm	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
P3-12	COFH	On-Line Configuration	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
P3-13	C-SL	Modbus Protocol	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
P3-14	C-NA	Network Address	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
P3-15	BRPS	Baud Rate	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
P3-16	LEN	Bit Length	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
P3-17	PARty	Parity	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
P3-18	STOP	Stop Bit	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
<i>*Once a Ramp / Soak pattern (P3-6) is selected, the following parameters are available.</i>																	
P3-19	SPmn	Ramp / Soak SV	✓	✓	✓	✓	✓	✓	✓	-	-	-	✓	✓	✓	✓	✓
P3-20	ELmn	Ramp / Soak Time	✓	✓	✓	✓	✓	✓	✓	-	-	-	✓	✓	✓	✓	✓
P3-21	PSYn	Last Step Number	✓	✓	✓	✓	✓	✓	✓	-	-	-	✓	✓	✓	✓	✓
P3-22	ACHn	Additional Cycles	✓	✓	✓	✓	✓	✓	✓	-	-	-	✓	✓	✓	✓	✓
P3-23	CPn	Next Pattern Number	✓	✓	✓	✓	✓	✓	✓	-	-	-	✓	✓	✓	✓	✓

Regulation Mode Parameters

Press the **SET** button to access these parameters.

AL Auto Tuning ID Number P1-1

Range: On - Auto Tuning activated
Off - Auto Tuning deactivated

When this parameter is set to On, the controller begins auto tuning. After auto tuning is complete, the parameter is set to Off automatically. If this parameter is set to Off during the auto tuning process, the controller stops the auto tuning process immediately and does not change any PID parameter.

PLdn PID Parameter Group ID Number P1-2

This parameter name will be displayed as one of the following.

- PLD0** PID Parameter Group 0
- PLD1** PID Parameter Group 1
- PLD2** PID Parameter Group 2
- PLD3** PID Parameter Group 3
- PLD4** PID Parameter Group Auto Select
- PLD** PID Parameter Group for Event 2 Input

Range: PID0 to PID4

The SOLO controller can store up to 4 PID parameter groups (**PLD0** - **PLD3**) for regular operation. The PID Parameter Group parameter sets which PID group (**PLD0** - **PLD3**) to use for control. The SV display shows the Target SV assigned to the PID group. (For more information about the Target SV, refer to P1-3 Target SV)

When **PLD4** is selected as the PID parameter group, the controller automatically chooses the one PID parameter group (**PLD0** - **PLD3**) that has a Target SV that is the nearest to the SV set by the operator and uses that group for control.

PLD is a special PID parameter group for the SL4896 and SL9696 series controllers Event inputs. This is the PID group that the controller uses when the Event 2 input is on. To configure the PID parameter for this parameter group, the Event 2 input must be active.

SVn Target SV ID Number P1-3

This parameter name will be displayed as one of the following. Only the Target SV for the selected PID Parameter Group (**PLDn**, P1-2) will be displayed when accessing this parameter.

SV0	Target SV of PID Parameter Group 0
SV1	Target SV of PID Parameter Group 1
SV2	Target SV of PID Parameter Group 2
SV3	Target SV of PID Parameter Group 3
SV	Target SV of PID Parameter Group for Event 2 Input

Range: -99.9 to 999.9

(For more information about the parameter groups, refer to P1-2 PID Parameter Group.)

The Target SV is the setting value that each parameter group works toward. When the Target SV is the closest to the SV of the PID groups, this value is used to select which tuning parameters are used by the controller. The controller can store up to four PID parameter groups (**PLD0**, - **PLD3**) for regular operation. One of the PID parameter groups can be selected manually, or the controller selects the PID parameter group that has a Target SV that is the nearest to the SV set by the operator. If there are two or more PID parameter groups that have SV values equally close to the current PV, the controller uses the lowest number parameter group (eg. If parameter groups 0 - 3 have the same Target SV, the controller uses the parameter group 0).

The parameter **SV** is the Target SV of the PID parameter group for Event 2 input. This parameter is only displayed when the Event 2 input is on. The Event 2 input is only available on the SL4896 and SL9696 series controllers.

Pn Proportion Band ID Number P1-4

This parameter name will be displayed as one of the following. Only the Proportion Band for the selected PID Parameter Group (**PLD0**, P1-2) will be displayed when accessing this parameter.

P0	Proportion Band of PID Parameter Group 0
P1	Proportion Band of PID Parameter Group 1
P2	Proportion Band of PID Parameter Group 2
P3	Proportion Band of PID Parameter Group 3
P	Proportion Band of PID Parameter Group for Event 2 Input

Range: 0.1 to 999.9


(For more information about the parameter groups, refer to P1-2 PID Parameter Group.)






The Proportion Band is a parameter group used for PID control. The controller can store up to four PID parameter groups (**PLD0**, - **PLD3**) for regular operation. One of the PID parameter groups can be selected manually, or the controller selects the PID parameter group that has a Target SV that is the nearest to the SV set by the operator.

The parameter **P** is the Proportion Band of the PID parameter group for

Event 2 input. This parameter is only displayed when the Event 2 input is on. The Event 2 input is only available on the SL4896 and SL9696 series controllers.



Integral Time **ID Number P1-5**


This parameter name will be displayed as one of the following. Only the Integral Time for the selected PID Parameter Group ( P1-2) will be displayed when accessing this parameter.

-  Integral Time of PID Parameter Group 0
-  Integral Time of PID Parameter Group 1
-  Integral Time of PID Parameter Group 2
-  Integral Time of PID Parameter Group 3
-  Integral Time of PID Parameter Group for Event 2 Input


Range: 0 to 9999 (Sec)






(For more information about the parameter groups, refer to P1-2 PID Parameter Group.)

The Integral Time is a parameter group used for PID control. The controller can store up to four PID parameter groups ( - ) for regular operation. One of the PID parameter groups can be selected manually, or the controller selects the PID parameter group that has a Target SV that is the nearest to the SV set by the operator.

The parameter  is the Integral Time of the PID parameter group for Event 2 input. This parameter is only displayed when the Event 2 input is on. The Event 2 input is only available on the SL4896 and SL9696 series controllers.



Derivative Time **ID Number P1-6**

This parameter name will be displayed as one of the following. Only the Derivative Time for the selected PID Parameter Group ( P1-2) will be displayed when accessing this parameter.

-  Derivative Time of PID Parameter Group 0
-  Derivative Time of PID Parameter Group 1
-  Derivative Time of PID Parameter Group 2
-  Derivative Time of PID Parameter Group 3
-  Derivative Time of PID Parameter Group for Event 2 Input

Range: 0.1 to 999.9 (Sec)

(For more information about the parameter groups, refer to P1-2 PID Parameter Group.)

The Derivative Time is a parameter group used for PID control. The controller can store up to four PID parameter groups ( - ) for regular operation. One of the PID parameter groups can be selected

manually, or the controller selects the PID parameter group that has a Target SV that is the nearest to the SV set by the operator.

The parameter **DT** is the Derivative Time of the PID parameter group for Event 2 input. This parameter is only displayed when the Event 2 input is on. The Event 2 input is only available on the SL4896 and SL9696 series controllers.

PDof

PD Control Offset

ID Number P1-7

Range: 0.0 to 100.0 (%)

The PD Control Offset parameter is available when the P or PD control is selected [Integral Time parameter (**ITn**, P1-5) is zero].

This parameter defines the offset of the output. When the P or PD control is used, the control cannot stabilize the PV at the SV because the output is zero when the PV is equal to the SV. This parameter modifies the output level when the PV is equal to the SV.

IOFn

Integral Offset

ID Number P1-8

This parameter name will be displayed as one of the following.

IOF0 Integral Offset of PID Parameter Group 0

IOF1 Integral Offset of PID Parameter Group 1

IOF2 Integral Offset of PID Parameter Group 2

IOF3 Integral Offset of PID Parameter Group 3

IOF Integral Offset of PID Parameter Group for Event 2 Input

Range: 0.0 to 100.0 (%)

(For more information about the parameter groups, refer to PID Parameter Group, P1-2.)

The Integral Offset parameter is available when the PI or PID control is selected. [Integral Time parameter (**ITn**, P1-5) is not zero.]

The Auto Tuning process will decide the offset value automatically.

If this parameter is not used (**IOF** = 0), the output is zero when the PV is equal to the SV. If the Integral Time parameter (**ITn**, P1-5) is used only to eliminate the steady error, it may take a long time to reach the SV because it needs time to accumulate the error. In this case, this parameter is useful. This parameter defines the default output level on start up. It will improve the speed that the PV reaches the SV.

The parameter **IOF** is the Integral Offset of the PID parameter group for Event 2 input. This parameter is only displayed when the Event 2 input is on. The Event 2 input is only available on the SL4896 and SL9696 series controllers.


HLS

Heating Hysteresis

ID Number P1-9

Range: 0.0 to 999.9


The Heating Hysteresis parameter defines the amount that the PV must go below the SV before the output turns on. This parameter is available only for On / Off control with an output programmed for heating.

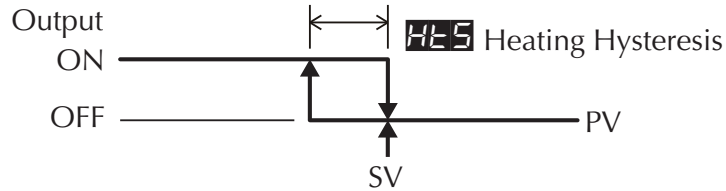

CHS **Cooling Hysteresis** **ID Number P1-10**

Range: 0.0 to 999.9

The Cooling Hysteresis parameter defines the amount that the PV must go above the SV before the output turns on. This parameter is available only for On / Off control with an output programmed for cooling.

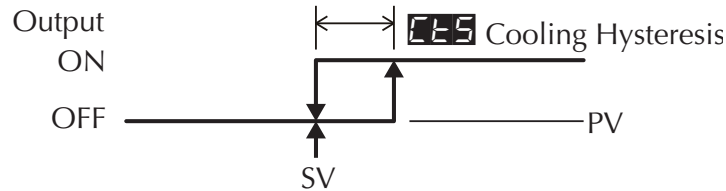

HLPd **Output 1 Heating Period** **ID Number P1-11**

Range: 0.5 to 99 seconds

The Output 1 Heating parameter defines one output period or the duration of one on / off cycle for Output 1.



This parameter is available when Output 1 is programmed as a heating output in the PID or Ramp / Soak mode.

CLPd **Output 1 Cooling Period** **ID Number P1-12**

Range: 0.5 to 99 seconds

The Output 1 Cooling parameter defines one output period or the duration of one on / off cycle for Output 1.



This parameter is available when Output 1 is programmed as a cooling output in the PID or Ramp / Soak mode.


HCPd

Output 2 Period

ID Number P1-13

Range: 0.5 to 99 seconds

The Output 1 Cooling parameter defines one output period or the duration of one on / off cycle for Output 2.

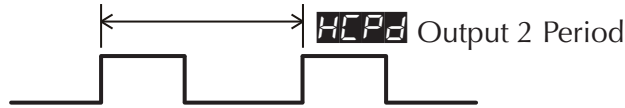

This parameter is available when Output 2 is programmed as a heating or cooling output in the PID or Ramp / Soak mode.

CoEF

Proportion Band Coefficient

ID Number P1-14

Range: 0.01 to 99.99

This Proportion Band Coefficient parameter is available when a dual output mode (heating and cooling) is selected. This parameter allows the second output control to have a different proportional setting than the first output control. The first output control proportional band setting is multiplied by this parameter to create a proportional band setting for the second output control.

(First Output) Proportion Band * Proportion Band Coefficient = Second Proportional Band

(Pn, P1-4)

(CoEF, P1-14)

DEAD


Dead Band

ID Number P1-15


Range: The range varies according to the Decimal Point Position (SP, P2-3).

SP	0	1	2	3
DEAD	-99 to 999	-99.9 to 999.9	-9.99 to 99.99	-9.999 to 9.999

The dead band zone is the area around the SV where the output is not effected by the proportional control value (PV). For PID control, as long as the PV remains within the dead band zone, the output is not affected by the proportional control. The integral and derivative controls ignore the dead band setting and may cause the output to be on within the dead band zone.

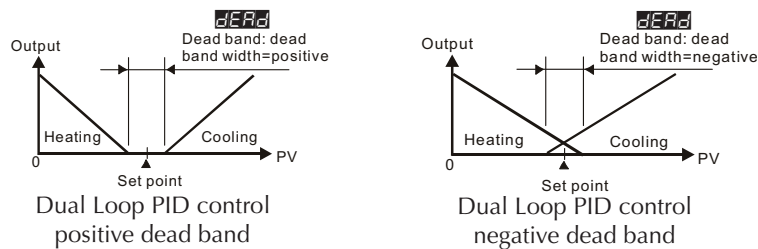

For On / Off type control the Dead Band parameter defines the area around the SV where the output remains off. The PV must go beyond the dead band range in order for either output 1 or output 2 to turn on.

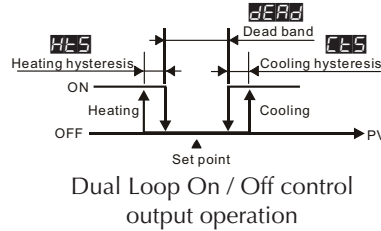

EP_{oF} **PV Offset** **ID Number P1-16**

Range: The range varies according to the Decimal Point Position (**SP**, P2-3).

SP	0	1	2	3
EP_{oF}	-999 to 999	-99.9 to 99.9	-9.99 to 9.99	-.999 to 0.999

This parameter is used to add an offset value to the PV.

EH_L **Analog High Adjustment** **ID Number P1-17**

The Analog High Adjustment parameter is used to adjust the actual analog output value when the output is 100%. To set up this parameter, place the SOLO controller in the Manual control mode and set the Output 1 Level (**OUT_L**, P2-11) to 100% then increase / decrease the parameter value to get the desired analog output value.

The tables below show the approximate Analog High Adjustment values needed to obtain the desired output value. The actual controller output will vary. Check and adjust the values until the desired output level is achieved.

Current Output								
	0mA	1mA	2mA	3mA	4mA	5mA	6mA	7mA
EH_L	-7198	-6838	-6478	-6118	-5758	-5398	-5038	-4678
	8mA	9mA	10mA	11mA	12mA	13mA	14mA	15mA
EH_L	-4319	-3959	-3599	-3239	-2879	-2519	-2159	-1799
	16mA	17mA	18mA	19mA	20mA	21mA	22mA	MAX
EH_L	-1440	-1080	-720	-360	0	360	720	722

Voltage Output								
	0V	1V	2V	3V	4V	5V	6V	7V
EH_L	-7589	-6830	-6071	-5312	-4553	-3795	-3036	-2277
	8V	9V	10V	11V	12V	13V	14V	15V
EH_L	-1518	-758	0	759	1518	2277	3036	3795



Note: When decreasing the parameter value for Analog High Adjustment below -1999, the SOLO display will “roll over” to -0, indicating a value of -2000. Two “roll overs” equal a value of -4000 and so forth. For example, to enter a value of -5312 for Analog High Adjustment, hold the button until the SOLO display “rolls over” two times and the display reads -1312.

This parameter is available when Output 1 is Current or Linear Voltage.

CrLo

Analog Low Adjustment

ID Number P1-18

The Analog Low Adjustment parameter is used to adjust the actual analog output value when the output is 0%. To set up this parameter, place the SOLO controller in the Manual control mode and set the Output 1 Level (**OUT-1**, P2-11) to 0% then increase / decrease the parameter value to get the desired analog output value.

The tables below show the approximate Analog Low Adjustment values needed to obtain the desired output value. The actual controller output will vary. Check and adjust the values until the desired output level is achieved.

Current Output								
	0mA	1mA	2mA	3mA	4mA	5mA	6mA	7mA
CrLo	-1440	-1080	-720	-360	0	360	720	1080
	8mA	9mA	10mA	11mA	12mA	13mA	14mA	15mA
CrLo	1440	1799	2159	2519	2879	3239	3599	3959
	16mA	17mA	18mA	19mA	20mA	21mA	22mA	MAX
CrLo	4319	4678	5038	5398	5758	6118	6478	6480


Voltage Output								
	0V	1V	2V	3V	4V	5V	6V	7V
CrLo	0	759	1518	2277	3036	3795	4553	5312
	8V	9V	10V	11V	12V	13V	14V	15V
CrLo	6071	6830	7589	8348	9107	9866	10625	11384



*Note: When increasing the parameter value of Analog Low Adjustment above 9999, the SOLO display will “roll up” to 0000, indicating a value of 10000. For example, to enter a value of 10625 for Analog Low Adjustment, hold the **▲** button until the SOLO display reads 0625.*

This parameter is available when Output 1 is Current or Linear Voltage.

Operation Mode Parameters

Press the  button to access these parameters.

r-s

Run / Stop

ID Number P2-1

The Run / Stop parameter is used to control the operational status of the SOLO Controller. The available range varies according to the control mode and the status of the EVENT 1 input. The Event 1 input is available only for the SL4896 and SL9696 series controllers.

PID, On / Off and Manual Control Modes		
	Run	Stop
Event 1 input is off. (Event 1 input is open.)	rUn	sStp
Event 1 input is on. (Event 1 input is closed.)	N/A	sStp , eStp

Ramp / Soak Control Mode			
	Run	Hold	Stop
Event 1 input is off. (Event 1 input is open.)	rUn	pHod	sStp , pStp
Event 1 input is on. (Event 1 input is closed.)	N/A	N/A	sStp , eStp

rUn

Run mode

sStp

Stop mode

sStp

Stop mode (The controller was in Stop mode when the Event 1 input was closed.)

eStp

Stop mode (The controller was in Run mode when the Event 1 input was closed.)

pHod

Ramp / Soak control is on hold. The controller keeps the current Ramp / Soak step number and time. Ramp / Soak control continues when the mode is changed to Run.

pStp

Ramp / Soak control is stopped. The controller restarts the Ramp / Soak control at the first step when the mode is changed to Run.

pLrn

Starting Ramp / Soak Pattern

ID Number P2-2

Range: 0 to 7

Select the Ramp / Soak pattern number to start the Ramp / Soak control.

SP

Decimal Point Position

ID Number P2-3

Range: 0 (****)
 1 (***.*)
 2 (**.**)
 3 (*.***)

This parameter defines the decimal point position on the PV and SV display.

AL 1H

Alarm 1 High Limit

ID Number P2-4

This parameter is used to set the high limit for Alarm 1. The range

varies according to other parameter values.

AL 1L Alarm 1 Low Limit ID Number P2-5

This parameter is used to set the low limit for Alarm 1. The range varies according to other parameter values.

AL 2H Alarm 2 High Limit ID Number P2-6

This parameter is used to set the high limit for Alarm 2. The range varies according to other parameter values.

AL 2L Alarm 2 Low Limit ID Number P2-7

This parameter is used to set the low limit for Alarm 2. The range varies according to other parameter values.

AL 3H Alarm 3 High Limit ID Number P2-8

This parameter is used to set the high limit for Alarm 3. The range varies according to other parameter values.

AL 3L Alarm 3 Low Limit ID Number P2-9

This parameter is used to set the low limit for Alarm 3. The range varies according to other parameter values.

LoL Lock Mode ID Number P2-10

Range: **OFF** The Lock feature is disabled.

LoL1 Lock Mode 1

LoL2 Lock Mode 2

Lock Mode 1: All key pad operation is ignored. Press the **SET** key and the **↺** key at the same time to cancel this lock mode.

Lock Mode 2: All key pad operation is ignored except changing the SV. Press the **SET** key and the **↺** key at the same time to cancel this lock mode.

OUT 1 Output 1 Level ID Number P2-11

Range: 0.0 to 100 (%)

The value for this parameter can be changed in the Manual control mode. In other control modes, this parameter is read-only.

OUT 2 Output 2 Level ID Number P2-12

Range: 0.0 to 100 (%)

This parameter is available when Output 2 is used. Refer to the Heating / Cooling parameter (**S-HL**, P3-7) to disable / enable Output 2. The value for this parameter can be changed in the Manual control mode. In other control modes, this parameter is read-only.

Initial Setting Parameters

Press the **SET** button for more than three seconds to access these parameters.

EP-L

Input Type

ID Number P3-1

This parameter defines the input signal type.

Thermocouple Type and Temperature Range		
Input Temperature Sensor Type	LED Display	Temperature Range
Thermocouple TXK type		-328 ~ 1472°F (-200 ~ 800°C)
Thermocouple U type		-328 ~ 932°F (-200 ~ 500°C)
Thermocouple L type		-328 ~ 1562°F (-200 ~ 850°C)
Thermocouple B type		212 ~ 3272°F (100 ~ 1800°C)
Thermocouple S type		32 ~ 3092°F (0 ~ 1700°C)
Thermocouple R type		32 ~ 3092°F (0 ~ 1700°C)
Thermocouple N type		-328 ~ 2372°F (-200 ~ 1300°C)
Thermocouple E type		32 ~ 1112°F (0 ~ 600°C)
Thermocouple T type		-328 ~ 752°F (-200 ~ 400°C)
Thermocouple J type		-148 ~ 2192°F (-100 ~ 1200°C)
Thermocouple K type		-328 ~ 2372°F (-200 ~ 1300°C)
RTD Type and Temperature Range		
Input Temperature Sensor Type	LED Display	Temperature Range
Platinum Resistance (Pt100)		-328 ~ 1112°F (-200 ~ 600°C)
Platinum Resistance (JPt100)		-4 ~ 752°F (-20 ~ 400°C)
Voltage Input Type and Input Range		
Voltage Input Type	LED Display	Temperature Range
0~50mV Analog Input		-999 ~ 9999
0V~10V Analog Input		-999 ~ 9999
0V~5V Analog Input		-999 ~ 9999
Current Input Type and Input Range		
Current Input Type	LED Display	Temperature Range
4~20mA Analog Input		-999 ~ 9999
0~20mA Analog Input		-999 ~ 9999

EP-U

Temperature Unit

ID Number P3-2

Range: F, C

This parameter is available when the parameter Input Type is a thermocouple or RTD.

EP-H

Input Range High

ID Number P3-3

Range: From the value of Input Range Low to 9999.

This parameter defines the high limit of the PV. This is the maximum value of the operational temperature range. In operation, if the PV value is higher than the **EP-H** value, th PV flashes to indicate an error and the controller outputs shut off. The SV value cannot exceed the **EP-H** value. This parameter cannot be lower than the Input Range Low parameter (**EP-L**, P3-4).

EP-L

Input Range Low

ID Number P3-4

Range: From -999 to the value of Input Range High.

This parameter defines the low limit of the PV. This is the minimum value of the operational temperature range. In operation, if the PV value is lower than the **EP-L** value, th PV flashes to indicate an error and the controller outputs shut off. The SV value cannot be set lower than the **EP-L** value. This parameter cannot be higher than the Input Range High parameter (**EP-H**, P3-3).

CTRL

Control Mode

ID Number P3-5

Range: **PLD** PID control mode
ONOFF On / Off control mode
MANU Manual control mode
RAMP Ramp / Soak control mode

This parameter is used to select one of the control modes. See Chapter 5 for a complete discription of each control mode.

RAMP

Ramp / Soak Pattern


ID Number P3-6

Range: oFF Ramp / Soak pattern is not selected.
0 to 7 Ramp / Soak pattern number.

This parameter is used to select the appropriate Ramp / Soak pattern number for setting up it's individual parameters. Once a Ramp / Soak pattern number (0-7) is selected, the controller only displays the following pattern setup parameters until the **SET** key is pressed.

	Ramp / Soak Pattern Number							
	0	1	2	3	4	5	6	7
Step 0 SV	SP00	SP10	SP20	SP30	SP40	SP50	SP60	SP70
Step 0 Time	TL00	TL10	TL20	TL30	TL40	TL50	TL60	TL70
Step 1 SV	SP01	SP11	SP21	SP31	SP41	SP51	SP61	SP71
Step 1 Time	TL01	TL11	TL21	TL31	TL41	TL51	TL61	TL71
Step 2 SV	SP02	SP12	SP22	SP32	SP42	SP52	SP62	SP72
Step 2 Time	TL02	TL12	TL22	TL32	TL42	TL52	TL62	TL72
Step 3 SV	SP03	SP13	SP23	SP33	SP43	SP53	SP63	SP73
Step 3 Time	TL03	TL13	TL23	TL33	TL43	TL53	TL63	TL73
Step 4 SV	SP04	SP14	SP24	SP34	SP44	SP54	SP64	SP74
Step 4 Time	TL04	TL14	TL24	TL34	TL44	TL54	TL64	TL74
Step 5 SV	SP05	SP15	SP25	SP35	SP45	SP55	SP65	SP75
Step 5 Time	TL05	TL15	TL25	TL35	TL45	TL55	TL65	TL75
Step 6 SV	SP06	SP16	SP26	SP36	SP46	SP56	SP66	SP76
Step 6 Time	TL06	TL16	TL26	TL36	TL46	TL56	TL66	TL76
Step 7 SV	SP07	SP17	SP27	SP37	SP47	SP57	SP67	SP77
Step 7 Time	TL07	TL17	TL27	TL37	TL47	TL57	TL67	TL77
Last Step Number	SP40	SP41	SP42	SP43	SP44	SP45	SP46	SP47
Additional Cycles	CY00	CY01	CY02	CY03	CY04	CY05	CY06	CY07
Next Pattern Number	LN00	LN01	LN02	LN03	LN04	LN05	LN06	LN07

Below is an example of a typical Ramp / Soak Pattern.

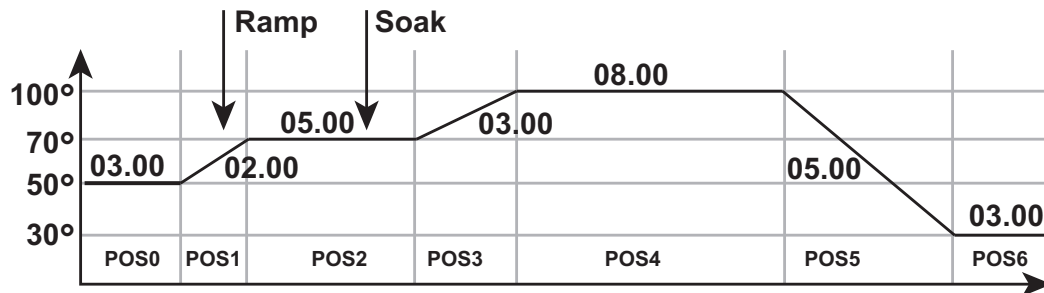

- SP00 Step00 = 50°
- TL00 Time00 = 3 hrs 00 min.
- SP01 Step01 = 70°
- TL01 Time01 = 2 hrs 00 min.
- SP02 Step02 = 70°
- TL02 Time02 = 5 hrs 00 min.
- SP03 Step03 = 100°
- TL03 Time03 = 3 hrs 00 min.
- SP04 Step04 = 100°
- TL04 Time04 = 8 hrs 00 min.
- SP05 Step05 = 30°
- TL05 Time05 = 5 hrs 00 min.
- SP06 Step06 = 30°
- TL06 Time06 = 3 hrs 00 min.
- PS40 Process Step = 6
- CY00 Cycle times = 0
- LN00 Link = OFF

S-HC

Heating / Cooling

ID Number P3-7

Range: **HEAT** Output 1 = Heating, Output 2 = Unused
COOL Output 1 = Cooling, Output 2 = Unused
HIC2 Output 1 = Heating, Output 2 = Cooling
HIC1 Output 1 = Cooling, Output 2 = Heating

The Heating / Cooling parameter defines whether one or two outputs will be controlled and what type of control they will perform.



Note: Unused Output 2 can be used as an Alarm.

ALAA1	Alarm 1	ID Number P3-8
ALAA2	Alarm 2	ID Number P3-9
ALAA3	Alarm 3	ID Number P3-10

Range: 0 to 18

The SOLO controllers support 3 alarm outputs. (The SL4824 series supports only one alarm output.) The Alarm1, Alarm2 and Alarm3 parameters are used to select the alarm type. Refer to Chapter 4 for details.

SALA	System Alarm	ID Number P3-11
-------------	---------------------	------------------------

Range: **OFF** System Alarm feature is disabled
ALAA1 Alarm 1
ALAA2 Alarm 2
ALAA3 Alarm 3

This parameter defines which Alarm output is used for the system alarm. The System Alarm parameter defines an alarm output if there is an input error or process control failure. Refer to Chapter 4 for complete details.

Initial Setting Communication Parameters

CO5H	On-Line Configuration	ID Number P3-12
-------------	------------------------------	------------------------

Range: **OFF** Do not allow changes to the parameters through the RS-485 port.
ON Allow changes to the parameters through the RS-485 port.

CO5L	Modbus Protocol	ID Number P3-13
-------------	------------------------	------------------------

Range: **ASCII** Modbus ASCII
RTU Modbus RTU

CO6A	Network Address	ID Number P3-14
-------------	------------------------	------------------------

Range: 1 to 247

This is the Modbus network address of the SOLO Controller.



Note: Each controller on the same network must have a unique Modbus network address.

6PS **Baud Rate** **ID Number P3-15**

Range: **2400** 2400 bps
4800 4800 bps
9600 9600 bps
1920 19200 bps
3840 38400 bps

LEN **Bit Length** **ID Number P3-16**

Range: 7, 8

Prty **Parity** **ID Number P3-17**

Range: None, Even, Odd

StopA **Stop Bit** **ID Number P3-18**

Range: 1, 2

Initial Setting Ramp / Soak Parameters

SPmn **Ramp / Soak SV** **ID Number P3-19**

Range: -99.9 to 999.9

This parameter is the set point value (SV) of each Ramp / Soak step.

This parameter can be displayed as **SP00** to **SP77**. The third character indicates the Ramp / Soak pattern number (*m*) and the last digit indicates the step number (*n*).

e.g. **SP35** = SV set point value of Step 5 of the Ramp / Soak pattern 3.

ELmn **Ramp / Soak Time** **ID Number P3-20**

Range: 00.00 to 15.00 (0 to 15 hours) [Format: hours.minutes]

This parameter is the time duration of each Ramp / Soak step.

This parameter can be displayed as **EL00** to **EL77**. The third character indicates the Ramp / Soak pattern number (*m*) and the last digit indicates the step number (*n*).

e.g. **EL35** = SV set point value of Step 5 of the Ramp / Soak pattern 3.

PS4n **Last Step Number** **ID Number P3-21**

Range: 0 to 7

Each Ramp / Soak pattern can have up to seven steps. This parameter is the last step number that is to be used in the Ramp / Soak pattern.

When the parameter value is set to 0, the SOLO controller executes only step 0 when the Ramp / Soak pattern is selected. When the value is 7, the controller executes step 0 through step 7 when the Ramp / Soak pattern is selected.

Additional Cycles **ID Number P3-22**

Range: 0 to 199

As the default, the SOLO controller executes a Ramp /Soak pattern only once. Use this parameter to set the number of additional times a Ramp / Soak pattern will execute. When the parameter value is set to 0, the SOLO controller executes the Ramp / Soak pattern one time. When this parameter value is 2, the Ramp / Soak pattern will execute two additional times for a total of three executions.

Next Pattern Number **ID Number P3-22**

Range: 0 to 7, OFF

This parameter is used to select a Ramp / Soak pattern that will execute after the current Ramp / Soak pattern is completed. If the parameter value is set to OFF, the SOLO controller will not begin another Ramp / Soak pattern after the current pattern.

Reset to Factory Default









Note: Resetting the Temperature Controller back to factory default erases all of the values entered by the user. Record any necessary settings before proceeding



Warning: Erasing the user entered values may result in a safety hazard and system malfunction.

The following instructions reset the controller to the factory default.

- 1 Press the  button until the parameter **LoC** appears. Use the  button to select **LoC**. Press the **SET** button.
- 2 Press and hold the  and  buttons simultaneously for one second and release.
- 3 Press the  button until the PV display shows **PASS**. Use the  button to change the value on the SV display to **1357**. Press the **SET** button.
- 4 Cycle power on the Controller to reset to factory default mode. All user set values are erased.