

USB to RS-485 PC Adapter

USB to RS-485 PC Adapter

Convenient 2-wire USB to RS-485 serial communication adapter for universal RS-485 use (GS drives, SureServo servos, Solo temperature controllers, CLICK PLCs, etc.). Does not require an external power supply or complicated configuration process.

Features:

- Type A (plug) USB connector
- Universal female RJ45/RJ12 modular connector (accepts RJ12 & RJ45 plugs)
- Supports multiple baud rates
- USB v2.0 compliant
- RoHS compliant
- CE compliant

Components Included:


- Adapter
- Cable – 6-wire RJ12 crossover; 2m [79 in] (for plug & play connectivity to GS drives)
- Cable – 2-wire RJ12–flying leads; 2m [79 in] (for universal RS-485 connectivity to SureServo, Solo, etc.)
- Mini CD with Windows driver and installation instructions

USB to RS-485 PC Adapter			
Part Number	Price Each	Description	Component Compatibility *
USB-485M	<-->	USB TO RS-485 PC Adapter; includes (2) RJ12 cables, mini-CD with driver, instructions	GS series AC drives – GSOFT configuration software GS series AC drives – Modbus polling SureServo servo drives – SV-PRO configuration software SureServo servo drives – Modbus polling SOLO process controllers – SL-SOFT configuration software SOLO process controllers – Modbus polling CLICK PLCs – Modbus polling P3-550 PLCs – Modbus polling
Specifications			
Power Supply	no external power supply needed		
Power Consumption	0.4W		
Voltage Isolation	3000 VDC		
Baud Rates Supported	75, 150, 300, 600, 1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200 (bps)		
Transmission Type	RS-485 half-duplex (2-wire)		
LED Display	Steady Green LED ON: power is ON. Blinking orange LED: data is transmitting.		
USB Connector	Type A (plug)		
RS-485 Connector	RJ45		
Compatibility	USB v2.0 specification		
PC Compatibility	Windows Operating System required for bridge & driver installation: Windows 7 - 32 bit; Windows 7 - 64 bit; Windows Vista - 32 bit; Windows Vista - 64 bit; Windows XP		
* NOT compatible with DirectSOFT PLC software. (DirectSOFT RS-485 programming requires 4-wire full-duplex data transmission.)			

USB-485M



USB-485M Dimensions

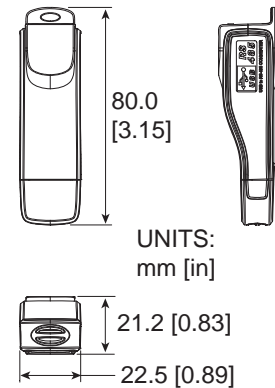

USB-485M RJ-45 Pin-out



8 ← 1
RJ-45

Pin	Description
1	reserved
2	reserved
3	reserved
4	SG+
5	SG-
6	reserved
7	reserved
8	reserved