

P/N: INST-SHT-GEN-PMKG
GENESIS POLE MOUNTING KIT

Installation Instructions:

The kit consists of the following components


- Item A) Spacer, 1/4" x 1/4", Black – QTY (4)
- Item B) Strut Rails – QTY (2)
- Item C) Fender Washer, 1/4" – QTY (12)
- Item D) Pan Head Screws, 1/4-20 X 1/2" Long – QTY (4)
- Item E) Nylok Nut, 1/4-20 – QTY (8)

- Item F) Pan Head Screws, 1/4-20 X 7/8" Long – QTY (4)
- Item G) Band Clamp Bracket - QTY (2)
- Item H) Hose Clamp – QTY (2)

- 1) Attach Band Clamp Brackets (G) through slots in Strut Rails (B) and secure with Pan Head Screws x 1/2" Long (D), Fender Washers (C), & Nylok Nuts (E) (x4). Torque to 32 in-lbs Max.
- 2) Install Pan Head Screws X 7/8" Long (F) through slots in Enclosure Base (x4). Align Spacers (A) & Fender Washers (C) over 7/8" screw length sticking through, at the rear of Enclosure Base. Attach Strut Rail Sub Assembly to Enclosure Base securing with Fender Washers (C) & Nylok Nuts (E). Torque to 32 in-lbs Max.
- 3) Feed Hose Clamp (H) through slots in Band Clamp (G) (x2), typical.
- 4) Wrap Hose Clamps around Pole and tighten.

Integra Enclosures, Inc.

7750 Tyler Blvd / Mentor, OH 44060 / Voice 440-269-8155 / Fax 440-269-4977 / [www.integraenclosures.com\(INST-SHT-GEN-PMKG_Rev_A\)](http://www.integraenclosures.com(INST-SHT-GEN-PMKG_Rev_A))

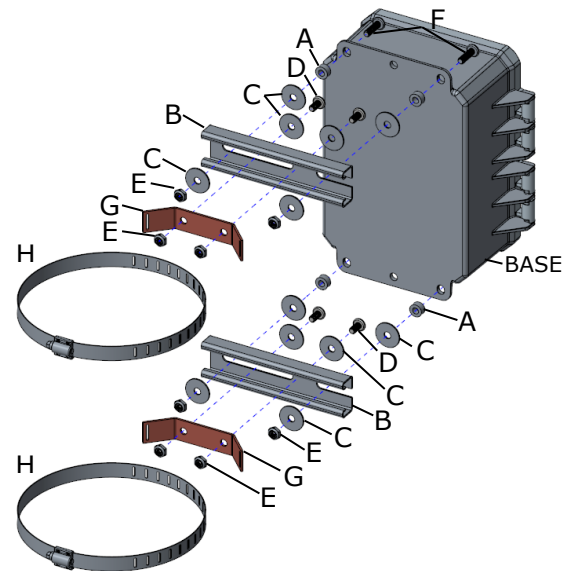

P/N: INST-SHT-GEN-PMKG
GENESIS POLE MOUNTING KIT

Installation Instructions:

The kit consists of the following components

- Item A) Spacer, 1/4" x 1/4", Black – QTY (4)
- Item B) Strut Rails – QTY (2)
- Item C) Fender Washer, 1/4" – QTY (12)
- Item D) Pan Head Screws, 1/4-20 X 1/2" Long – QTY (4)
- Item E) Nylok Nut, 1/4-20 – QTY (8)

- Item F) Pan Head Screws, 1/4-20 X 7/8" Long – QTY (4)
- Item G) Band Clamp Bracket - QTY (2)
- Item H) Hose Clamp – QTY (2)

- 1) Attach Band Clamp Brackets (G) through slots in Strut Rails (B) and secure with Pan Head Screws x 1/2" Long (D), Fender Washers (C), & Nylok Nuts (E) (x4). Torque to 32 in-lbs Max.
- 2) Install Pan Head Screws X 7/8" Long (F) through slots in Enclosure Base (x4). Align Spacers (A) & Fender Washers (C) over 7/8" screw length sticking through, at the rear of Enclosure Base. Attach Strut Rail Sub Assembly to Enclosure Base securing with Fender Washers (C) & Nylok Nuts (E). Torque to 32 in-lbs Max.
- 3) Feed Hose Clamp (H) through slots in Band Clamp (G) (x2), typical.
- 4) Wrap Hose Clamps around Pole and tighten.

Integra Enclosures, Inc.

7750 Tyler Blvd / Mentor, OH 44060 / Voice 440-269-8155 / Fax 440-269-4977 / [www.integraenclosures.com\(INST-SHT-GEN-PMKG_Rev_A\)](http://www.integraenclosures.com(INST-SHT-GEN-PMKG_Rev_A))

