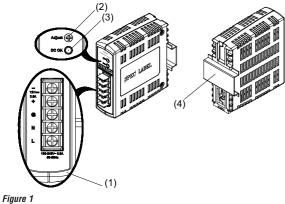
## **RHINO** Installation Instructions for PSB12-030-P Power Supply

### READ INSTRUCTIONS BEFORE INSTALLING OR OPERATING THIS DEVICE. KEEP FOR FUTURE REFERENCE.







Figure 2

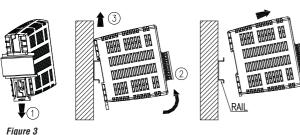

AutomationDirect P/N

BM-00120 can be used.

÷ō


(6


Fiaure 4




δō

Figure 5





Power Derating Curve for PSU

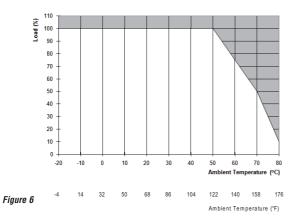

#### 1. Safety instructions

- · Switch main power off and wait 5 minutes before making any connection or disconnection on the device. Danger of serious injury or damage!
- To guarantee sufficient convection cooling, please keep a distance of 50 mm [1.97 in] above and below the device as well as a lateral distance of 20 mm [0.79 in] to other units.
- Please note, that the enclosure of the device can become very hot depending on
- the ambient temperature and load of the power supply. Risk of burns!
- Only plug in and unplug connectors when power is turned off!
- Do not introduce any objects into the unit!
- · Dangerous voltage present for at least 5 minutes after disconnecting all sources of power.
- To protect against access to live parts the power supply unit (PSU) must be installed in a protective enclosure.
- 2. Device description (Fig. 1)
  - (1) Input & Output terminal block connector
  - (2) DC voltage adjustment potentiometer
  - (3) DC OK control LED (green)
  - (4) 35mm DIN rail mounting (DIN rail sold separately)
- 3. Mounting (Fig. 2)
  - The power supply unit can be mounted on 35 mm DIN rails in accordance with EN60715. The device should be installed with input terminal blocks on the bottom.
  - Each device is delivered ready to install.
  - Snap on the DIN rail as shown in Fig. 2:
  - 1. Pull the unit's DIN rail latch OUT.
  - 2. Tilt the unit slightly upwards, hook the top end onto the DIN rail.
  - 3. Position the bottom front end against the DIN rail.
  - 4. Push the unit's DIN rail latch IN to lock.

4. Dismounting (Fig. 3)

- To uninstall.
- 1. Pull the unit's DIN rail latch OUT.
- 2. Tilt the bottom part of the unit out.
- 3. Push the unit up and pull out from the DIN rail.
- 5. Connection

The terminal block connectors allow easy and fast wiring. A plastic cover provides the necessary isolation of the electric connection

You can use flexible (stranded wire) or solid wire with cross section 0.32-2.1 mm<sup>2</sup> (AWG 22-14) and torque of 0.79Nm (7.0lb in). To secure reliable and shock proof connections, the stripping length should be 7 mm [0.28 in].

In accordance to EN 60950 / UL 60950, flexible wire require ferrules.

- Use appropriate copper wire that is designed to sustain operating temperature of at least 75°C [167°F] or more to fulfil UL requirements.
- For stranded wires it is recommended to use suitable lug to crimp wires (see Fig. 4).
- 5.1. Input connection (Fig. 1, Fig. 5)

Use L, N and GND connections of input terminal connector (see Fig. 1 (1)) to establish the 100-240 VAC connection

The device can also be connected to two of the phase conductors of a 3-phase system with nominal voltages of 100 VAC - 240 VAC. The device has an internal fuse. 6A circuit breakers are recommended as backup



The internal fuse must not be replaced by the user. In case of internal defect, the unit must be discarded or returned if still under warranty

#### 5.2. Output connection (Fig. 1 (2))

Use the "+" and "-" screw connections to establish the 12 VDC connection. The output provides 12 VDC. The output voltage can be adjusted from 11 to 14 VDC by the potentiometer. The green LED DC OK displays correct function of the output (Fig. 1 (3)).

The device has a short circuit and overload protection and an overvoltage protection limited to 176 VDC

5.3. Output characteristic curve

The device functions normal under operating line and load conditions. In the event of a short circuit or over load the output voltage and current collapses (IO/L or IS/C is > Isurge (150%)). The secondary voltage is reduced and cycles on and off until short circuit or overload on the secondary side has been removed.

5.4. Thermal behavior (Fig. 6)

In the case of ambient temperatures above +50°C [122°F], the output capacity has to be reduced as shown in Figure 6. If the output capacity is not reduced when TAmb > 50°C [122°F] device will switch into thermal protection mode. The device will cycle output on and off to maintain internal power dissipation and will recover when ambient temperature is lowered or load is reduced as far as necessary to keep device in a normal operating mode.

#### FOR TECHNICAL ASSISTANCE CALL 770-844-4200



# Technical Data For PSB12-030-P

Input (AC)	
Nominal input voltage	100-240VAC
Voltage range	85-264VAC (DC input range 120-375 VDC)
Frequency	47-63Hz (0 Hz @ DC input)
Nominal current	0.7A @ 115VAC, 0.42A @ 230VAC
Inrush current limitation. I2t (+25 °C) typ.	< 40A @ 115VAC. < 80A @ 230VAC
Mains buffering at nominal load (typ.)	> 22ms @ 115VAC, > 110ms @ 230VAC
Turn-on time	< 2.5 sec.
Internal fuse	T 3.15 AH / 250 V (non-replaceable)
Recommended backup circuit breaker	6A
Power circuit breaker characteristic	В
Leakage current	<1 mA
Output (DC)	
Nominal output voltage / Adjustment range	12VDC $\pm$ 2 % / 11-14VDC (maximum power $\leq$ 30W)
Output power	30W
Nominal current	2.5A
Derating above +50 °C [122°F]	2.5 % / °C. (>70°C [158°F] 4 % / °C.)
Startup with capacitive loads	Max. 6,600 µF
Max. power dissipation idling / nominal load approx.	≤ 5.6W
Efficiency (at 400 VAC and nominal values)	84.5% min.@115VAC & 230VAC
Residual ripple/ peak switching (20 MHz) (at nominal values)	<100mV
Parallel operation	With decoupling diode
General Data	
Type of housing	Plastic (PC), closed
Signals	Green LED DC OK
MTBF	> 300,000 hrs.
Dimensions (L x W x H)	100 mm x 32 mm x 100 mm [3.94 in x 1.26 in x 3.94 in]
Weight	0.197 kg [0.43 lb]
Connection method	Screw connection
Wire size / torque	0.32-2.1 mm² (AWG 22-14) / 0.79Nm (7.0lb in)
Stripping length	7 mm [0.28 in] or use suitable lug to crimp
Ambient Operating temperature	-20°C to +50°C [-4°F to 122°F]
Storage temperature	-25°C to +85°C [-13°F to 185°F]
Humidity at +25°C, no condensation	<95 % RH
Shock	30g half sine, 3 times per direction, 6 directions, per IEC60068-2-27
Vibration (Non-operating)	10 to 150Hz, 5 g, 90 min. each axis per IEC60068-2-6
Pollution degree	2
Climatic class	3K3 according to EN 60721
Certification and Standards	
Electrical equipment of machines	IEC60204-1 (over voltage category III)
Electronic equipment for use in electrical power installations	EN50178 / IEC62103
Safety entry low voltage	PELV (EN 60204), SELV (EN 60950)
	UL/C-UL recognized to UL60950-1, CSA C22.2 No.60950-1,
Electrical safety (of information technology equipment)	CB scheme to IEC60950-1
Industrial control equipment	UL listed to UL508, CSA to CSA C22.2 No.107.1-01
Protection against electric shock	DIN 57100-410
CE	In conformance with EMC directive 2004/108/EC and low voltage directive 2006/95/EC
EMC for ITE	EN55022, EN61000-3-2, EN61000-3-3, EN55024
EMC for industrial	EN35022, EN01000-5-2, EN01000-5-3, EN01002-4 EN55011, EN61000-6-2
Linitation of mains harmonic currents	N/A
RoHS	N/AYes
	UL E197592 CRUS E198298 249074
Safety and Protection	
Transient surge voltage protection	VARISTOR
Current limitation at short-circuits approx.	Isurge = 150 % of Pomax typically
Surge voltage protection against internal surge voltages	Yes
Isolation voltage::	
Input/output (type test/routine test)	4 kVAC / 3 kVAC 1.5 kVAC / 1.5 kVAC
Input/GND (type test/routine test)	1.5 kVAC / 1.5 kVAC 1.5 kVAC / 500 VAC
Output/GND (type test/routine test)	
Protection degree	IPX0
Safety class	Class I with GND connection