

HARDWARE INSTALLATION



CHAPTER 3

In This Chapter...

Safety Guidelines	3-2
Plan for Safety	3-2
Introduction to ViewMarq Mechanical Design	3-3
Power Connections and Specifications	3-4
Power Connections Cover	3-4
Power Installation	3-4
Power Supply Removable Terminal Blocks	3-5
Grounding	3-6
Ambient Temperature	3-6
Communications Connections	3-7
Communication Connections Cover	3-7
Communication Connectors	3-7
RS-232 Port 1 RJ12 Connector	3-8
Port 1 RS-232 / Port 2 RS-485 Terminal Block Connection	3-8
Port 3 Ethernet Connection	3-9
Port 4 Discrete Inputs	3-9
ViewMarq Mounting	3-10
Installation Notes	3-10
Mounting Position	3-10
Mounting Clearance	3-10
Viewing Angle and Distances	3-11
Mounting Brackets	3-12
Wall Mounting	3-13
Chain Mounting	3-15

Safety Guidelines



NOTE: Products with CE marks perform their required functions safely and adhere to relevant standards as specified by CE directives, provided they are used according to their intended purpose and that the instructions in this manual are followed. The protection provided by the equipment may be impaired if this equipment is used in a manner not specified in this manual. A listing of our international affiliates is available on our web site at <http://www.automationdirect.com>.

3



Warning: Providing a safe operating environment for personnel and equipment is your responsibility and should be your primary goal during system planning and installation. Automation systems can fail and may result in situations that can cause serious injury to personnel or damage to equipment. Do not rely on the automation system alone to provide a safe operating environment. You should use external electromechanical devices, such as relays or limit switches, that are independent of the PLC application to provide protection for any part of the system that may cause personal injury or damage. Every automation application is different, so there may be special requirements for your particular application. Make sure you follow all national, state, and local government requirements for the proper installation and use of your equipment.

Plan for Safety


The best way to provide a safe operating environment is to make personnel and equipment safety part of the planning process. You should examine every aspect of the system to determine which areas are critical to operator or machine safety. If you are not familiar with PLC system installation practices, or your company does not have established installation guidelines, you should obtain additional information from the following sources.

- NEMA — The National Electrical Manufacturers Association, located in Washington, D.C., publishes many different documents that discuss standards for industrial control systems. You can order these publications directly from NEMA. Some of these include:
 - ICS 1, General Standards for Industrial Control and Systems
 - ICS 3, Industrial Systems
 - ICS 6, Enclosures for Industrial Control Systems
- NEC — The National Electrical Code provides regulations concerning the installation and use of various types of electrical equipment. Copies of the NEC Handbook can often be obtained from your local electrical equipment distributor or your local library.
- Local and State Agencies — many local governments and state governments have additional requirements above and beyond those described in the NEC Handbook. Check with your local Electrical Inspector or Fire Marshall office for information.

Introduction to ViewMarq Mechanical Design

All ViewMarq displays are similar in appearance. They differ only in size and aspect ratio. The mounting brackets are identical as are the back covers and all of the power and communication connections.

The diagram below will allow you to familiarize yourself with the two main compartments, power and communications.

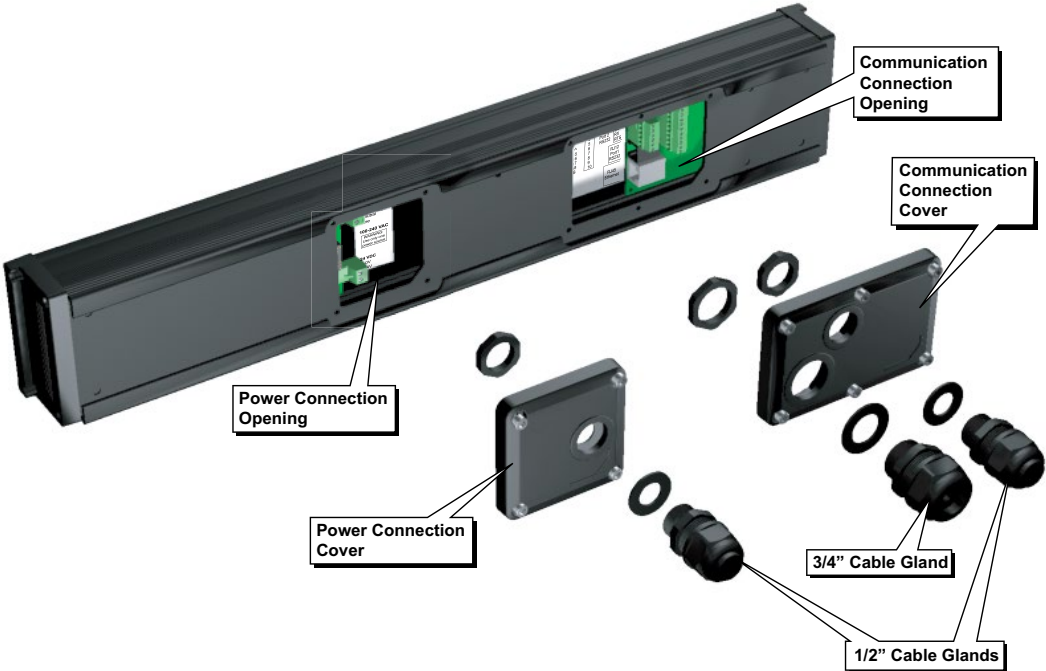

Power Connections and Specifications

Power Connections Cover

The power connections cover has a 0.83 in (21.1 mm) diameter opening for the supplied 1/2" NPT water tight cable gland or customer supplied flexible conduit connection for the power cable. The power connections cover must be installed for all applications. Cover screws should be torqued to 10 in·lbs (1.1 N·m).

3



NOTE: *The supplied cable glands cannot be used for UL installations. Flexible Conduit to protect cables is required to maintain the UL rating.*

Power Installation

The ViewMarq message display can be powered by 100-240 VAC or by a user supplied external 24VDC power supply.



Warning: Do not connect both AC and DC power at the same time. Internal circuit protection will prevent damage to the message display, but this is an invalid configuration and is not UL compliant.



Warning: Failure to install equipment as specified, protection provided by the equipment may be impaired.




NOTE: *The ViewMarq is meant to be connected to a Branch Circuit of 20A or less. It is recommended to have a Switch or Circuit Breaker near equipment.*

Power Supply Removable Terminal Blocks


There is a removable 2-pin 24VDC and a removable 3-pin 120 VAC power connection terminal block supplied with each ViewMarq message display. Replacement terminal blocks, Part No. MD-TERM-SET, are available at *AutomationDirect.com*.

Power Supply Removable Terminal Blocks				
Part Number	Terminal	Connector	Wire Size	Screw Torque
MD-TERM-SET	AC Power	Removable 3-pin terminal block	12-14 AWG solid or stranded	4.5 in-lbs (0.5 N·m)
	DC Power	Removable 2-pin terminal block		

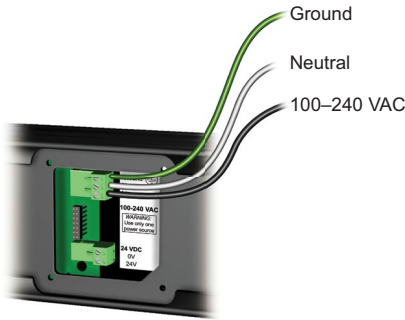

AC Power Input

Model	Max Input Power
MD4-0112T(-1)	22W
MD4-0124T(-1)	38W
MD4-0212T(-1)	
MD4-0224T(-1)	74W
MD4-0412T(-1)	
MD4-0424T(-1)	123W

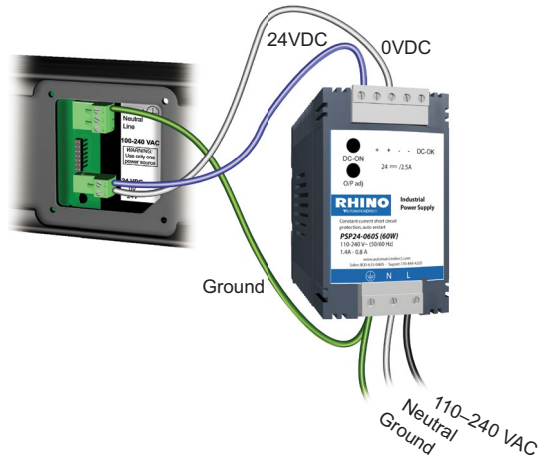

DC Power Input

Model	Max DC Current
MD4-0112T(-1)	1A
MD4-0124T(-1)	1.5 A
MD4-0212T(-1)	2A
MD4-0224T(-1)	3.5 A
MD4-0412T(-1)	
MD4-0424T(-1)	4A

Grounding

The ground terminal on the ViewMarq must be connected to a single point ground. Use copper stranded wire to achieve low impedance.

A good common ground reference (Earth ground) is essential for proper operation of the ViewMarq. One side of all control and power circuits and the ground lead on flexible shielded cable must be properly connected to Earth ground. There are several methods of providing an adequate common ground reference, including:

- a) Installing a ground rod as close to the panel as possible
- b) Connecting to incoming power system ground

Ambient Temperature

Evaluate any installations where the ambient temperature may approach the lower or upper limits of the specifications.

Communications Connections

Communication Connections Cover

The communication connections cover has a 0.83 in (21.1 mm) diameter and a 1.06 in (26.9 mm) diameter opening for the supplied 1/2" NPT and 3/4" NPT water tight cable glands or customer supplied flexible conduit connections for communications. The communication connections cover must be installed for all applications. Cover screws should be torqued to 10 in-lbs (1.1 N-m).




NOTE: The supplied cable glands cannot be used for UL installations. Flexible Conduit to protect cables is required to maintain the UL rating.


Communication Connectors


The following table describes the communication connections available in the ViewMarq display.

Communications and Discrete Input Connections				
Port	Type	Connector	Wire Size	Screw Torque
Port 1	RS-232	RJ12	n/a	
Port 1 / Port 2	RS-232 / RS-485	Removable 6-pin terminal block	14-28 AWG	1.7 in-lbs (0.2 N-m)
Port 3	Ethernet	RJ45	n/a	
Port 4	Discrete Inputs	Removable 10-pin terminal block	14-28 AWG	1.7 in-lbs (0.2 N-m)

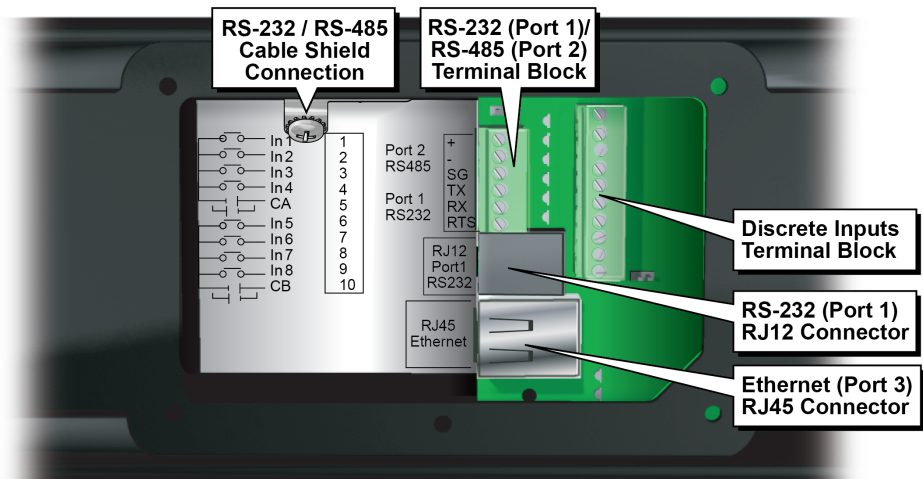


RS-232 Port 1 RJ12 Connector

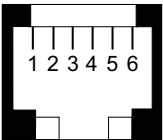Port 1 - RS-232 RJ12 Connector			
Description	Specification		
	Female RJ12	Pin Number	Signal Name
Connector Type		1	TD+
		2	TD-
		3	RD+
		4	No Connection
		5	No Connection
		6	RD-
		7	No Connection

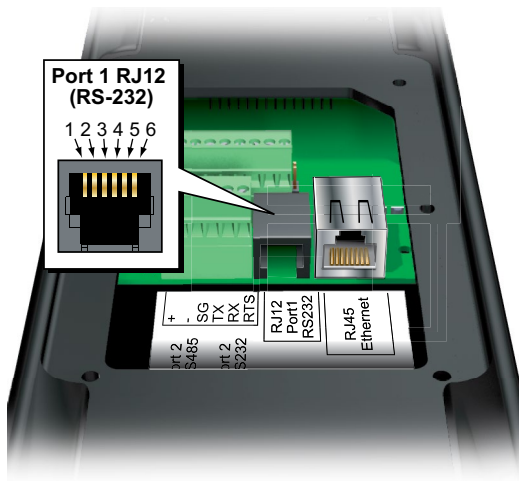


Port 1 RS-232 / Port 2 RS-485 Terminal Block Connection

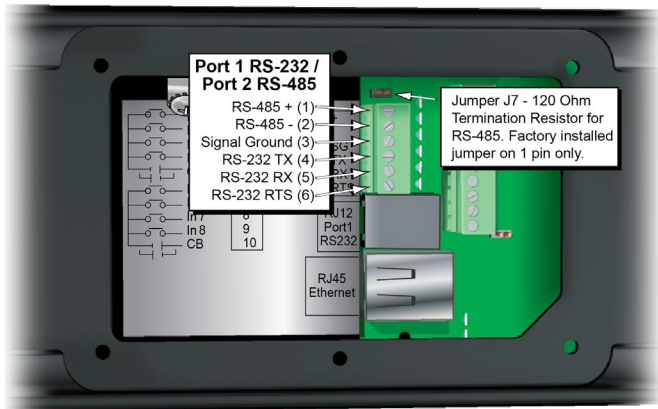

6 Position Terminal Block Pin Number	Signal Name
1	RS-485 +
2	RS-485 -
3	Signal Ground
4	RS-232 TX
5	RS-232 RX
6	RS-232 RTS


Port 3 Ethernet Connection

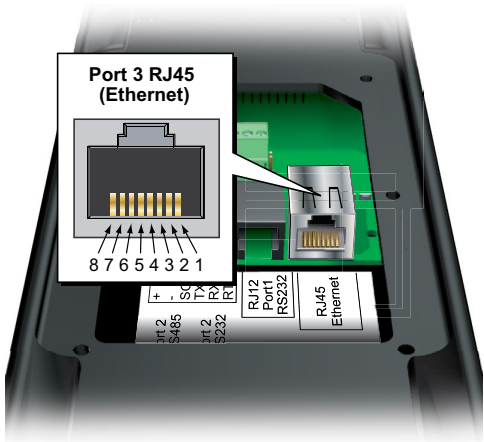

RJ45 Ethernet Connector Pin Number	Signal Name
1	TD+
2	TD-
3	RD+
4	No Connection
5	No Connection
6	RD-
7	No Connection
8	No Connection


3

Port 4 Discrete Inputs

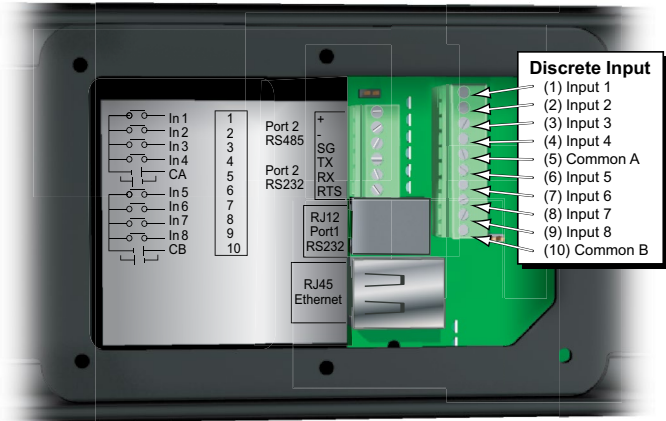


10 Position Terminal Block Pin Number	Signal Name
1	Input 1
2	Input 2
3	Input 3
4	Input 4
5	Common A
6	Input 5
7	Input 6
8	Input 7
9	Input 8
10	Common B

Sourcing Input Wiring

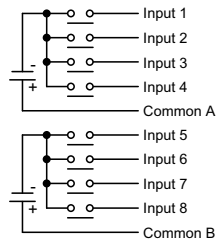

Sinking Input Wiring

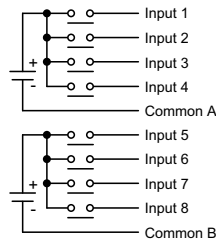

NOTE: In order to maintain the UL rating, discrete inputs must be powered from a Class 2 power supply.

ViewMarq Mounting

Two sets of mounting bracket assemblies are supplied with each display. There is one pair of wall mounting brackets and one pair of chain mount brackets.

These are the general guidelines for mounting the display:

- Only qualified personnel should mount the ViewMarq LED display.
- Verify correct operation of the display on a test bench before mounting. After testing, disconnect power and communications until after the display is mounted.
- The ViewMarq LED Display is rated for indoor use only and should not be mounted outdoors.
- Protect the lens from scratches while installing the display.
- Do not remove the end caps. This will invalidate the NEMA ratings and void the warranty.
- Do not drill or cut holes in any part of the display. This will invalidate the NEMA ratings and void the warranty.

Installation Notes

- In order to maintain the UL rating, flexible conduit must be used in place of included cable glands.
- The UL rating does not apply for a chain mounted display.
- In UL rated installations the allowable ambient air temperature range is 0 - 60 °C (32 - 140 °F)
- In order to maintain the UL rating, discrete inputs must be powered from a Class 2 power supply.
- If the equipment is used in a manner not specified by AutomationDirect/Facts Engineering, the protection provided by the equipment may be impaired.

Use the appropriate hardware and fasteners to hang or suspend the display. All hardware, fasteners and mounting methods must be rated for a minimum of **Four** times the weight of the display.

ViewMarq LED Display Weights			
Part Numbers	Weight	Weight with Wall-Mount Brackets	Weight with Chain-Mount Brackets
MD4-0112T(-1)	4.9 lbs (2.2 kg)	6.1 lbs (2.8 kg)	5.4 lbs (2.5 kg)
MD4-0124T(-1)	9.0 lbs (4.1 kg)	10.2 lbs (4.6 kg)	9.6 lbs (4.4 kg)
MD4-0212T(-1)	7.3 lbs (3.3 kg)	8.5 lbs (3.9 kg)	7.8 lbs (3.5 kg)
MD4-0224T(-1)	13.1 lbs (6.0 kg)	14.3 lbs (6.5 kg)	14.7 lbs (6.7 kg)
MD4-0412T(-1)	12.1 lbs (5.5 kg)	9.5 lbs (4.3 kg)	9.7 lbs (4.4 kg)
MD4-0424T(-1)	22.5 lbs (10.2 kg)	18.5 lbs (8.4 kg)	18.7 lbs (8.5 kg)

Mounting Position


The ViewMarq LED display is intended to be mounted horizontally. It may be mounted in either horizontal direction. When the unit is flipped, the display text will automatically adjust to the correct orientation. To disable this feature, see Chapter 6 - Configuring the ViewMarq LED display.

Mounting Clearance

Mount the ViewMarq LED display so as not to exceed the minimum bending radius of the flexible conduit and / or cable glands and cables. Mounting the display with the included wall mounting brackets should allow for adequate clearance. Be sure to provide ample clearance when using chain mounts.

Viewing Angle and Distances

The ViewMarq LED display should be mounted based on the expected viewing angle and viewing distance. The horizontal and vertical viewing angle of all signs is 140°.

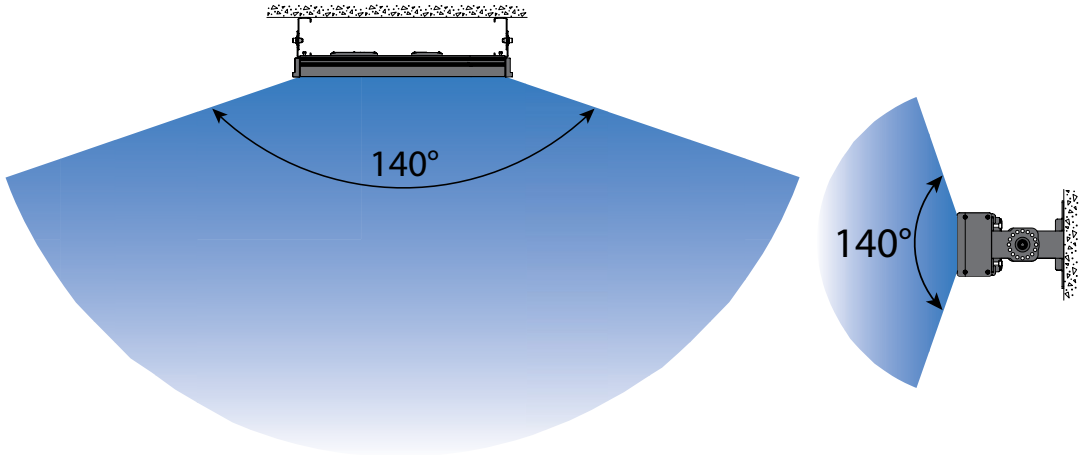


The table below shows the recommended viewing distances based on the character size that will be used.


Part Numbers	Font Size	Minimum Recommended Viewing Distance	Maximum Recommended Viewing Distance
MD4-0112T(-1) MD4-0124T(-1) MD4-0212T(-1) MD4-0224T(-1) MD4-0412T(-1) MD4-0424T(-1)	1-1/4 in	6ft (1.8 m)	60ft (18m)
MD4-0112T(-1) MD4-0124T(-1) MD4-0212T(-1) MD4-0224T(-1) MD4-0412T(-1) MD4-0424T(-1)	2 in	10ft (3.0 m)	100ft (31m)
MD4-0212T(-1) MD4-0224T(-1) MD4-0412T(-1) MD4-0424T(-1)	4 in	20ft (6.1 m)	200ft (61m)
MD4-0412T(-1) MD4-0424T(-1)	6 in	20ft (6.1 m)	300ft (91m)
MD4-0412T(-1) MD4-0424T(-1)	8 in	20ft (6.1 m)	400ft (122m)
MD4-0412T(-1) MD4-0424T(-1)	10 in	20ft (6.1 m)	500ft (152m)

Mounting Brackets

Wall-mount and chain-mount brackets are shipped with each display.

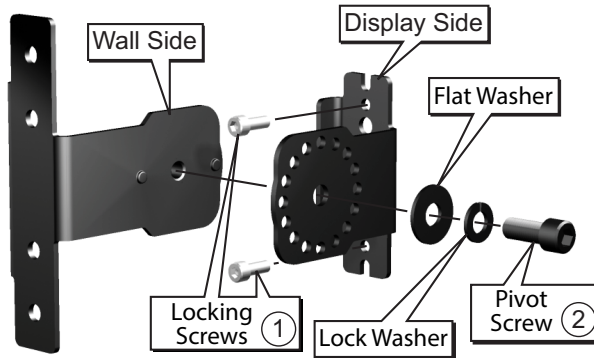

Wall-Mount Bracket - 2 each

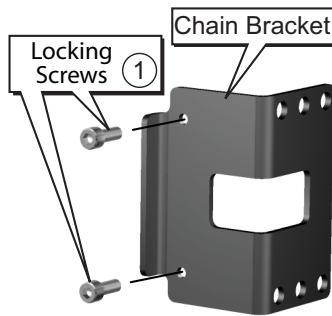


Chain-Mount Bracket - 2 each


- ① Locking Screws - (#10-32 x 1/2" SHCS) for 4mm Hex Key.
- ② Locking Screws - (5/16-18 x 5/8" SHCS) for 6mm Hex Key.

Wall Mounting

This is an example of a wall mounted installation.

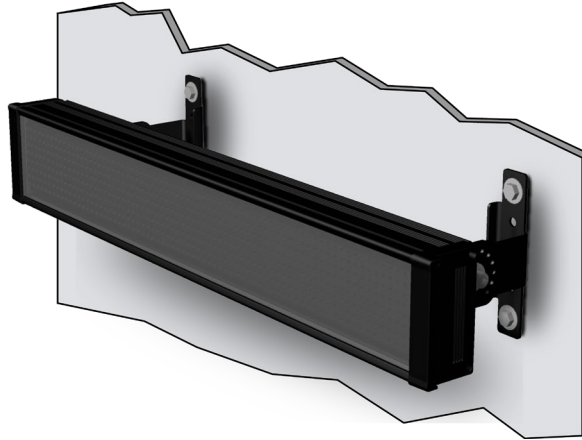


- 1) Assemble both adjustable wall brackets as shown above. Slide a bracket into the display mounting rail that runs the length of the back of the display. Repeat for the opposite end. Place each bracket in the desired position and finger-tighten the two locking screws in each bracket to prevent them from sliding.

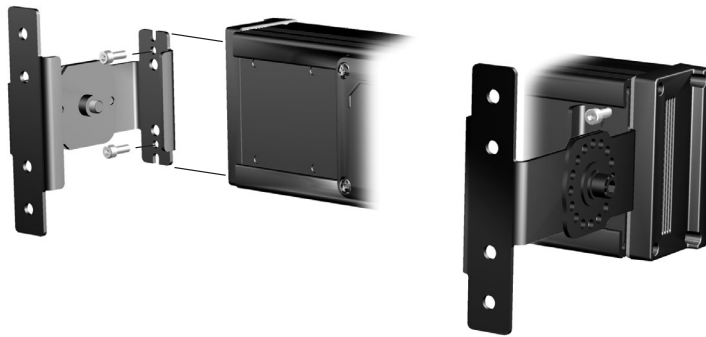


- 2) Hold the ViewMarq display in the desired mounting position and mark where the mounting bracket holes are positioned on the mounting surface.
- 3) Disassemble the mounting brackets, leaving the “display side” of the brackets in the display mounting rail.
- 4) Attach the “wall side” of the brackets to the mounting surface using appropriate fasteners for the type of mounting surface. Make sure the brackets are level with each other. (Wall mounting hardware is not included.)
- 5) Install the power and communication cabling through the appropriate cable glands and covers. Connect power and communication cables to their ports on the message display.

- 6) Install the covers and make sure that there is enough cable inside the housing to provide a “service loop” so as not to exceed the minimum bend radius of the cable

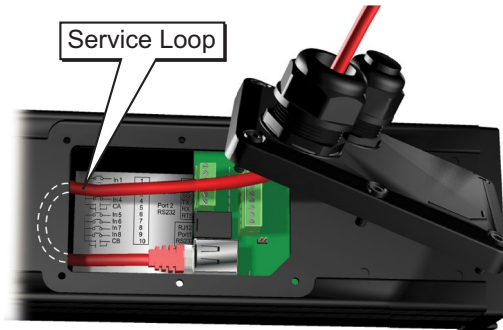


- 7) Install covers being careful to observe the orientation keying. Tighten the captive cover screws to 10 in·lbs (1.1 N·m). Properly tighten the cable glands to maintain the NEMA rating on the enclosure.
- 8) Loosen the “display side” brackets to allow movement in the display mounting rail. Align one “display side” bracket on the display with the corresponding “wall side” bracket on the wall and finger tighten the pivot screw with the flat washer and lock washer.
- 9) While holding the display in position slide the other “display side” bracket in the mounting rail on the display to line up with the other “wall side” bracket and insert the 6mm pivot screw with the flat washer and lock washer as shown.
- 10) Set the desired viewing angle and tighten the pivot screws to 6 in·lbs (0.7 N·m) of torque. Tighten the locking screws to 9 in·lbs (1.0 N·m) of torque.

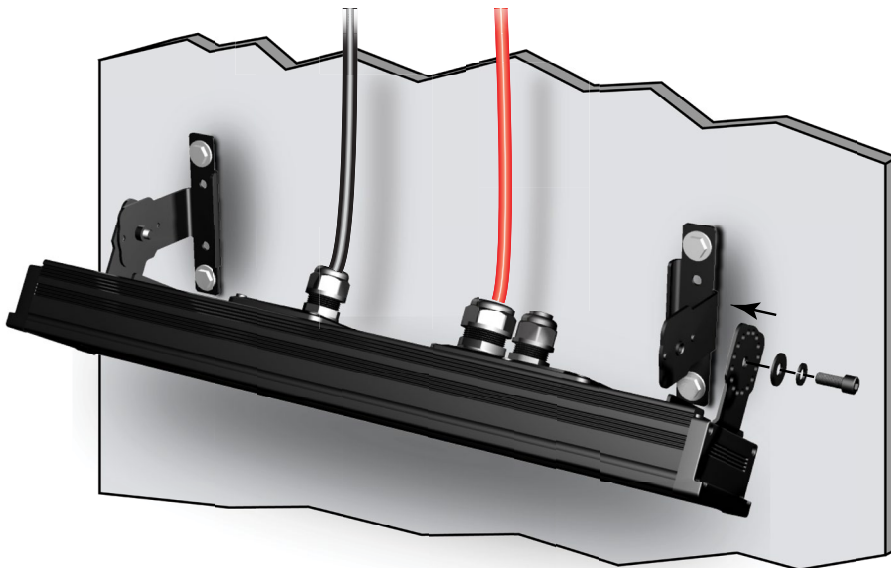

Chain Mounting

This is an example of a chain mounted installation.

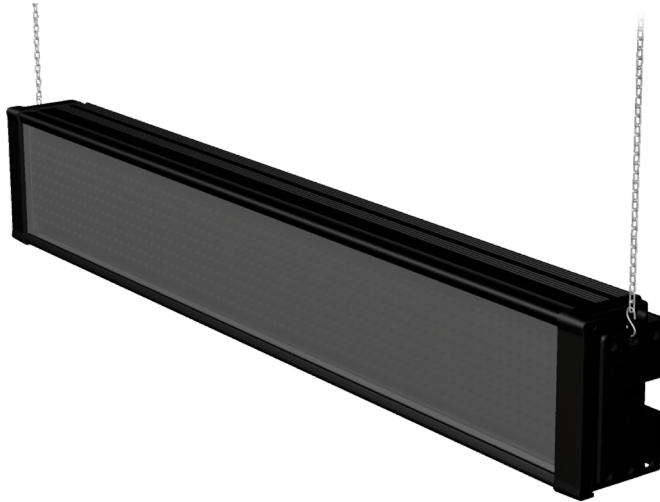


- 1) Slide the chain mount brackets into the display mounting rail on each end of the display. Tighten the locking screws to 9 in-lbs (1.0 N-m).



- 2) Attach a chain to an appropriate mounting surface or structure at the width listed in the table below. Connect the chain ends to one of the chain mounting holes on each bracket to achieve the desired viewing angle.
- 3) Install the appropriate cabling per steps 5 – 7 in the ing procedure on the previous pages.

Continued on Next Page.

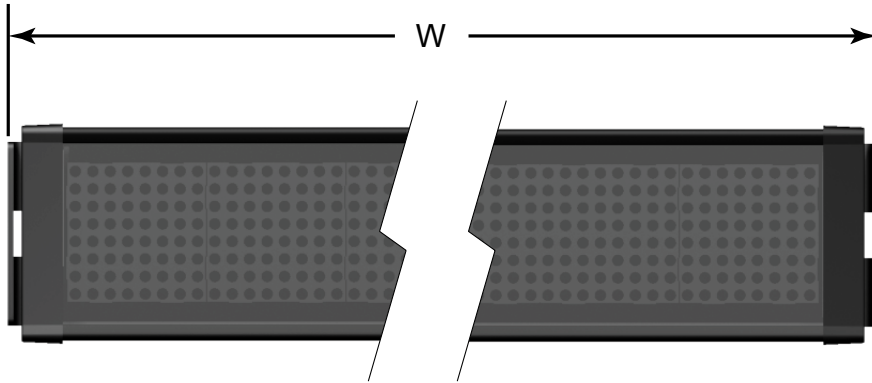

ViewMarq Chain Mount Width	
Part Number	Overall Width with Chain Mount Brackets (W)
MD4-0112T(-1)	23.60 in [599.4 mm]
MD4-0124T(-1)	45.21 in [1148.3 mm]
MD4-0212T(-1)	23.60 in [599.4 mm]
MD4-0224T(-1)	45.21 in [1148.3 mm]
MD4-0412T(-1)	23.60 in [599.4 mm]
MD4-0424T(-1)	45.21 in [1148.3 mm]